


*Self Diagnosis*  
Supported model

# SERVICE MANUAL

# GE-1A CHASSIS

MODEL	COMMANDER	DEST	CHASSIS NO.	MODEL	COMMANDER	DEST	CHASSIS NO.
<b>KV-28DS65U</b>	RM-892	UK	SCC-Q71D-A				

## FD Trinitron

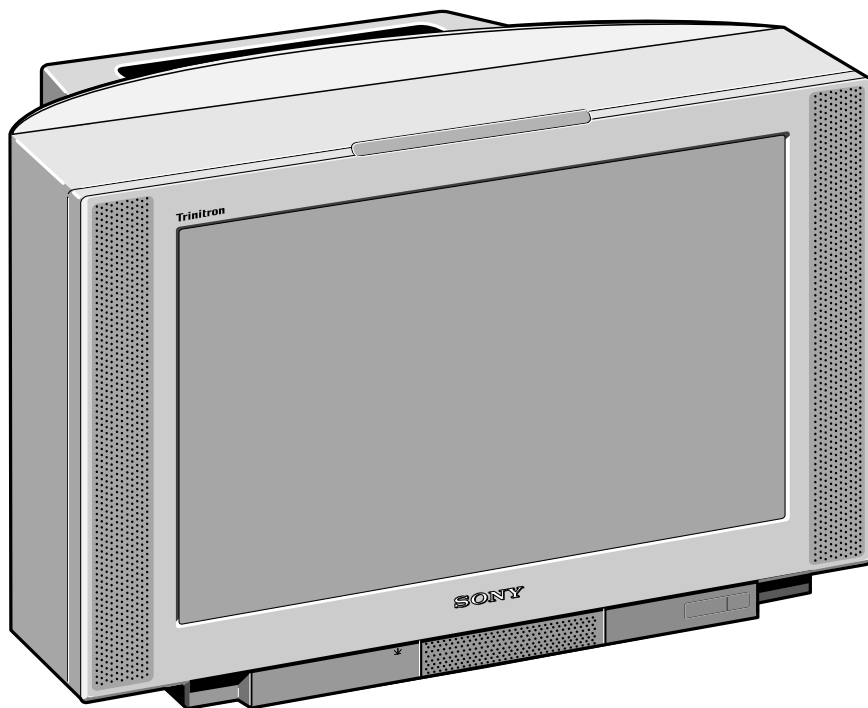

TRINITRON® COLOR TV  
**SONY®**



## DEFLECTION ADJUSTMENT FOR WIDE MODE

1. Input an Phillips pattern.
2. Switch the TV into wide mode.
3. Enter into the service menu by pressing 'TEST' 'TEST' and 'MENU' 'MENU' on the remote commander.
4. Select 'Deflect.Cont SDA9361' from the 'Devices' menu.
5. The 'Deflect.Cont SDA9361' menu will appear on screen.
6. Select and adjust each item to obtain optimum image.
7. Return to the 'Devices' menu.
8. Select the 'Sub Adjust' menu.
9. Select and adjust each item to obtain optimum image.
10. Repeat above steps in Digital mode.

Defl.Cont. SDA9361		
1	V SIZE	ADJ
2	V POSITION	ADJ
3	V LINEARITY	ADJ
4	S CORRECTION	ADJ
5	H SIZE	ADJ
6	PIN AMP	ADJ
7	UPPER CORNER PIN	ADJ
8	LOWER CORNER PIN	ADJ
9	V BOW	ADJ
10	PIN PHASE	ADJ
11	V ANGLE	ADJ


## DEFLECTION CONTR.SUBADJUST

1	SMART V SIZE	54
2	SMART V POSITION	220
3	SMART V LINEARITY	215
4	SMART S CORRECTION	236
5	SMART H SIZE	80
6	SMART PIN AMP	217
7	SMART UPPER CORNER PIN	17
8	SMART LOWER CORNER PIN	189
9	SMART V BOW	243
10	SMART PIN PHASE	202
11	SMART V ANGLE	5


## DEFLECTION ADJUSTMENT FOR SMART MODE

1. Input a Phillips pattern.
2. Switch the TV into smart mode.
3. Enter into the service menu by pressing 'TEST' 'TEST' and 'MENU' 'MENU' on the remote commander.
4. Select 'Deflect.Cont SDA9361' from the 'Devices' menu.
5. The 'Deflect.Cont SDA9361' menu will appear on screen.
6. Select and adjust each item to obtain optimum image.
7. Return to the 'Devices' menu.
8. Select the 'Deflect cont.Subadjust' menu.
9. Select and adjust each item to obtain optimum image.
10. Return to the 'Devices' menu.
11. Select the 'Subadjust' menu.
12. Select and adjust each item to obtain optimum image.
13. Repeat above steps in Digital mode.

SUB ADJUSTMENT		
1	RGB Level	8
2	Menue/Text H-pos	-2
3	Extra Framing Window	255
4	4/3 Center	

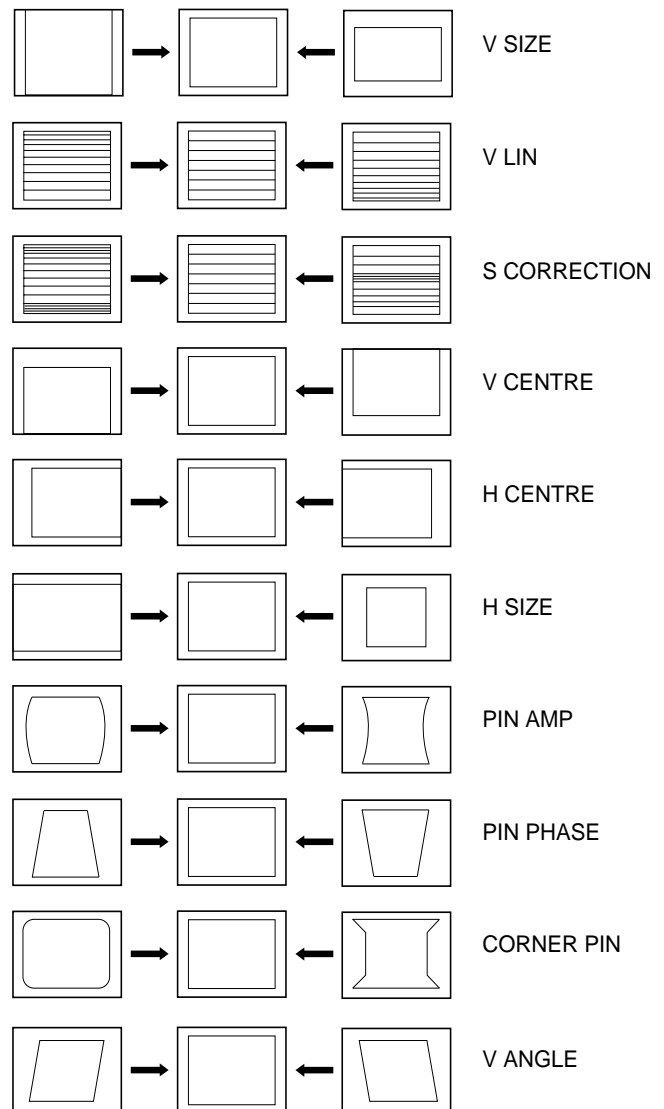

## 4-2. TEST MODE 2:

 Is available by pressing 'TEST' button twice, OSD 'TT' appears. The functions described below are available by pressing the two numbers. To release the Test mode 2, press 0 twice, or switch the TV into stand-by mode, or press the  TV button on the remote commander.

00	Cancel Test mode
01	Picture maximum - Colour Minimum
02	Direct Access to Noise Reduction
03	Volume 35%
04	Display Service Menu in Service mode
05	Display Service Menu in Production mode
06	Volume 80%
07	Ageing mode On/Off
08	Set shipping conditions
09	No function
10	TT number will be deleted
11	No function
12	Sub Colour Adjustment
13	Display software version and TV configuration
14	Production Info Display
15	Read factory setting
16	Save Last Power Memory data
17	Label AV sources
18	Level 2.5 Text Feature on/off
19	Set volume to 50%
20	TT number will be deleted
21	Picture Rotation
22	Operating Timer and Error monitor display
23	Status menu display
24	Direct access to sub colour
25	Status menu display
26	Text character set
27	Text character set
28	Text character set
29	Text character set
30	TT number will be deleted
31	Geometry adjustment 1
32	Geometry adjustment 2
33	No function
34	Reset NVM
35	Disable/Enable picture blanking
36	No function
37	Phillips Bug switch
38	Fast Helper switch
39	Reset Programme Table
40	TT number will be deleted
41	Screen Mode check

42	Auto-shut-off
43	NVM Map
44	Sub-Brightness Adjustment
45	No function
46	IR Channel Presetting Mode
47	Headphone Source Selection
48	Speaker Source Selection
49	EEPROM Testbyte is erased
50	TT number will be deleted
51	Strobe mode test
52	Reserved for uCon internal Test
53	Dynamic picture (AI) check
54	Velocity Modulation (VM) check
55	MTX Slicer Control
56	MTX Slicer Control
57	Megatext Service Menu
58	MTX Small Framing Code Window
59	MTX Wide Framing Code Window
60	TT number will be deleted
61	Sound default
62	No function
63	No function
64	Reset IIC Slave Commands
65	Reset Error Codes
66	No function
67	Headphone Volume
68	Ignore Errors
69	Reset Ignore Errors
70	TT number will be deleted
71	No function
72	NVM Subadjustment default
73	Clear programs
74	NVM Port-Expander default
75	No function
76	NVM default data
77	NVM D/A converter default
78	No function
79	No function
80	TT number will be deleted
81	NVM feature box default
82	No function
83	No function

84	NVM MCP default
85	NVM main colour decoder default
86	Display BER
87	No function
88	Text character set Russian/East
89	Text character set Russian/West with ESC
90	TT number will be deleted
91	Dolby Mode Normal
92	ASIC-Version
93	NVM MCP subadjustment default
94	Noise Sequencer Left
95	Noise Sequencer Center
96	Noise Sequencer Right
97	Noise Sequencer Surround
98	Surround Mode off
99	Dolby Mode Phantom