


## Quick start

Programming a card requires 4 steps:

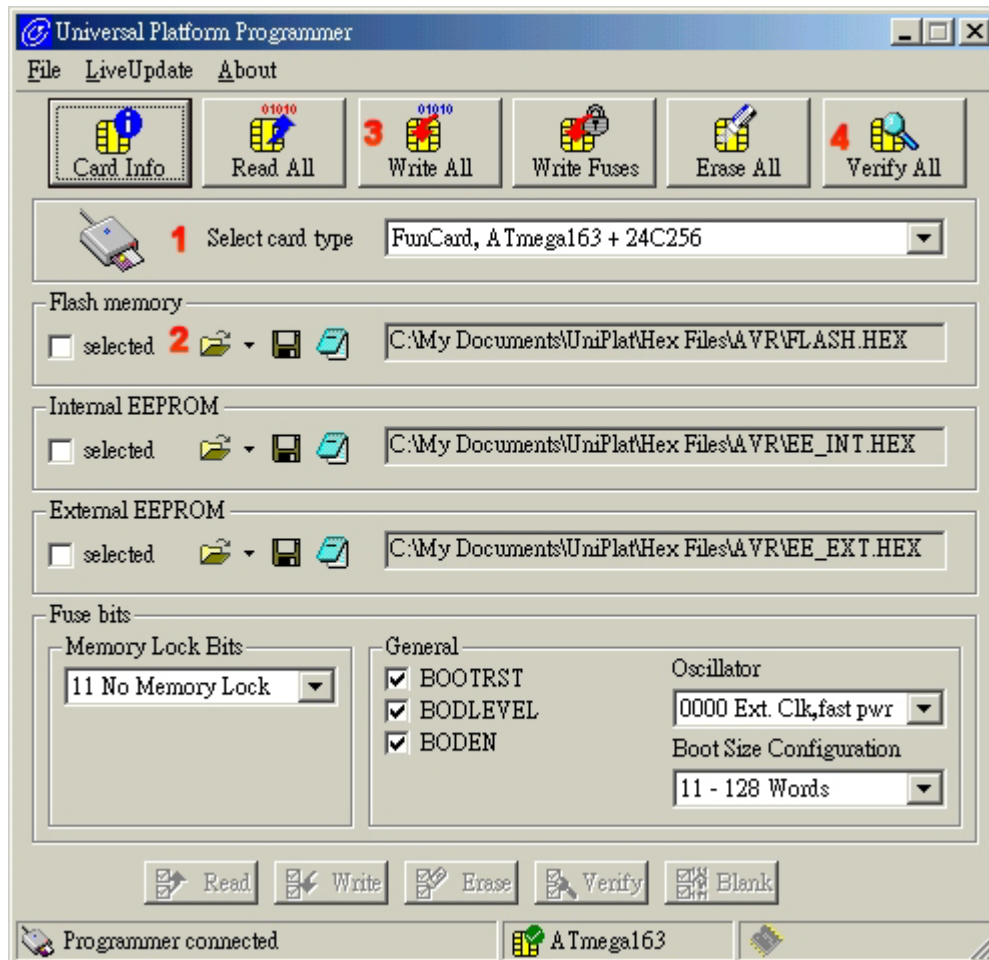

1. Insert a card in the programmer, and make sure the right card is selected in the combobox.
2. Pressing the open icons to load the hex files.
3. Pressing the write all button to write the card.
4. Pressing the verify all button.