

# **Technical Bulletin**

Date	Ref. No.	Model		
27.09.10	06TV168R2	WAX-2F, WAX-2FLC Chassis	BC	
Subject			IRIS	
Software Upgrading Procedure for WAX-2F(LC) Chassis [REVISION 2]				

## SYMPTOM

This Technical Bulletin describes the software upgrading procedure for the WAX-2F Chassis using a Memory Stick.

## SOLUTION

## Memory Stick Preparation

- Use an ordinary Memory Stick (4M, 8M, 16M, 128M, etc.) with low access. Do not use fast access types such as Memory Stick Pro, Magic Gate, etc.
- Format the Memory Stick using a formatter, the program available on the Sony Europe site <a href="http://support.sony-europe.com/memstick/downloads/downloads\_ms.asp?1=en&f=MSFRM#disc">http://support.sony-europe.com/memstick/downloads/downloads\_ms.asp?1=en&f=MSFRM#disc</a>, or a digital camera (recommended). Do not use the Windows formatter.
- After formatting, the Memory Stick should only contain the file "Memstick.ind".

## **Updating Procedure**

• 1. Download the "\*\_PKGxxxx\_N\_ADJ.zip" file attached to one of the documents below.

Model	Technical Bulletin
KDL-40/46W2000	06TV169
KDL-40/46T3500	08TV041
KDL-40V2900	

• 2. Unzip the applicable package. Separate folders will be created. Each folder contains the subfolder "wax2\_mheg".

Model	Folder	Remark	
KDL-40/46W2000	w2000_PKGxxxx_N_yy_ADJ	www pookogo version	
KDL-40/46T3500	t3500_PKGxxxx_N_yy_ADJ	xxx = package version	
KDL-40V2900	v2900_PKGxxxx_N_yy_ADJ	yy = paner inches	

- 3. Copy the complete "wax2\_mheg" subfolder to the root of the formatted Memory Stick.
- 4. Insert the Memory Stick into the set.



• 5. Power the set OFF and again ON, using the power key on top of the set.

Sony Europe (Belgium) NV Customer Satisfaction Europe Quality & Service Engineering • 6. The OSD message [Update start] appears and the Memory Stick download process starts.

Software Update
Update start

• 7. During the download process the left amber LED is blinking (5 s ON, 1 s OFF) and the centre red LED is lit.

DURING THE DOWNLOAD PROCESS, THE LEFT AMBER LED IS BLINKING AND THE CENTRE RED LED IS LIT.
BLINKING INTERVAL OF LEFT AMBER LED: 5 s ON, 1 s OFF

- 8. When the upgrade finishes, the TV resets automatically and the OSD message "Update complete" appears.
- 9. Remove the Memory Stick.



• 10. Check whether the update has been performed correctly.

\* Check the model name by entering [USER MENU] ⇔ [SETTINGS] ⇔ [SET-UP] ⇒ [PRODUCT INFORMATION]. \* Check the software version in the service menu via remote control by entering [INFORMATION] ⇔ [5] ⇔ [VOLUME +] ⇒ [POWER] in standby mode.

The menu below will appear. Check whether menu names and file names correspond. For example:

MAIN VER.	1018	🗖 🗝 🖂 PKG1035E_N_ADJ
BOOT VER.	1005	TM1018_TH1201_T51008_TD1009_40
H PACK VER.	1201	🔲 🛁 wax2_mheg
S PACK VER.	1008	■ IH1201_T51008_TD1009_46
CHECK SUM	901A	wax2_mheg
NVM VER.	1009	
EMMA VER.	2.5.511	
STARTER	0.0.30	
ETI	hmin	