



ShenZhen Jienuo Electronic co.,ltd

1、 Connect power, plug cable into router;


- 2、 Put into our cd to your cd-driver, install software(My computer->" Center Management Software\NVCL-V***.exe";
- 3、 Choose correct language.;

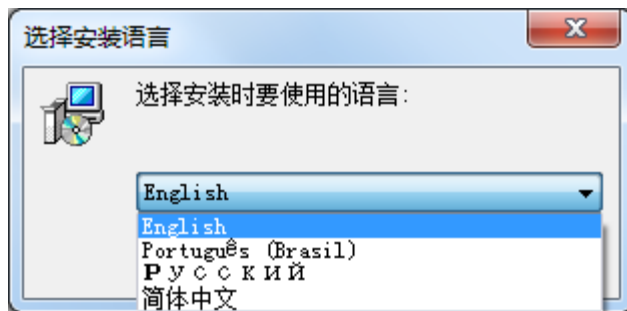


- 4、 Next;

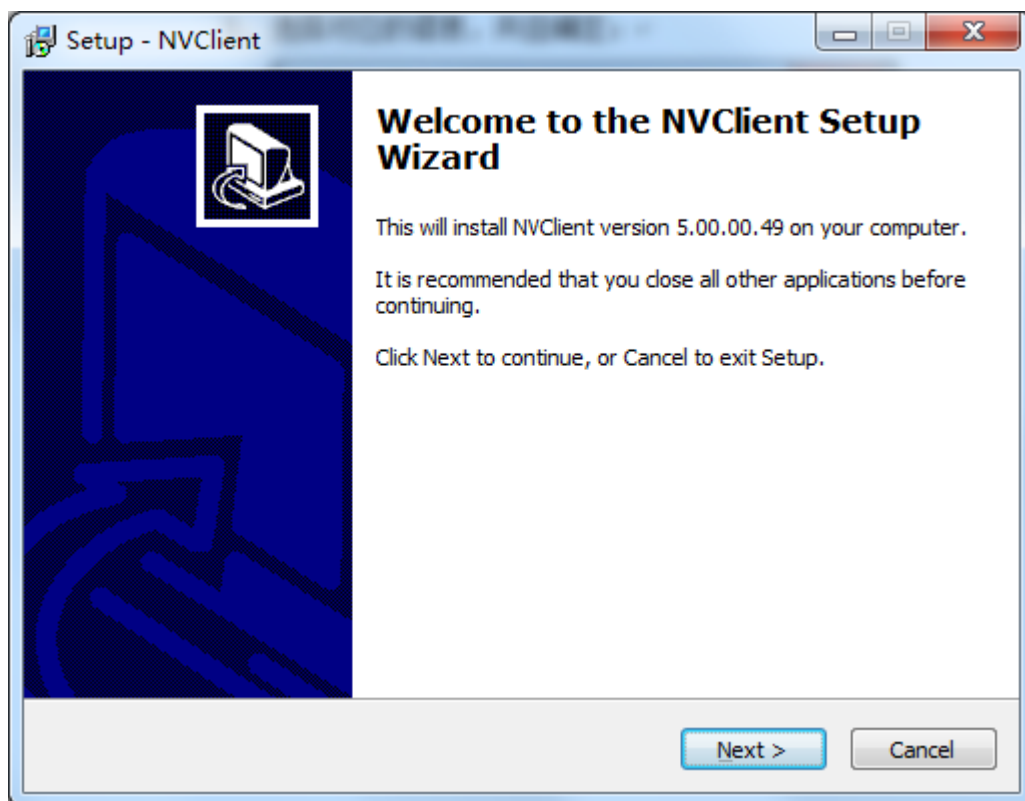


- 5、 Next;

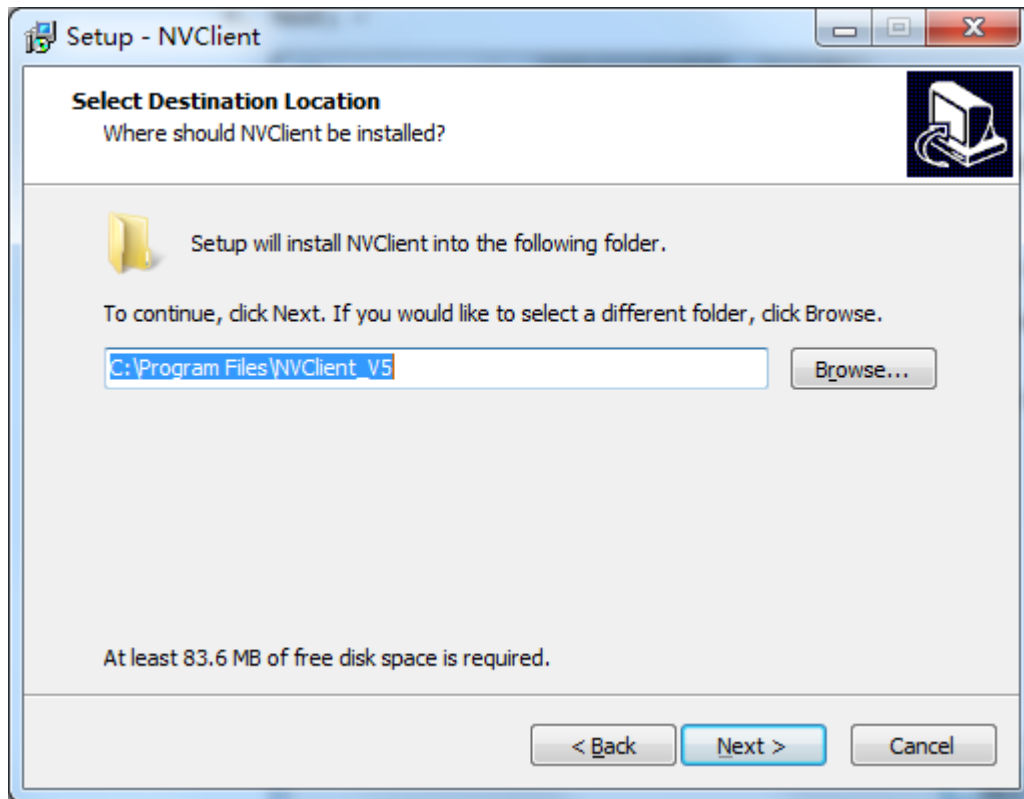


6、 Next

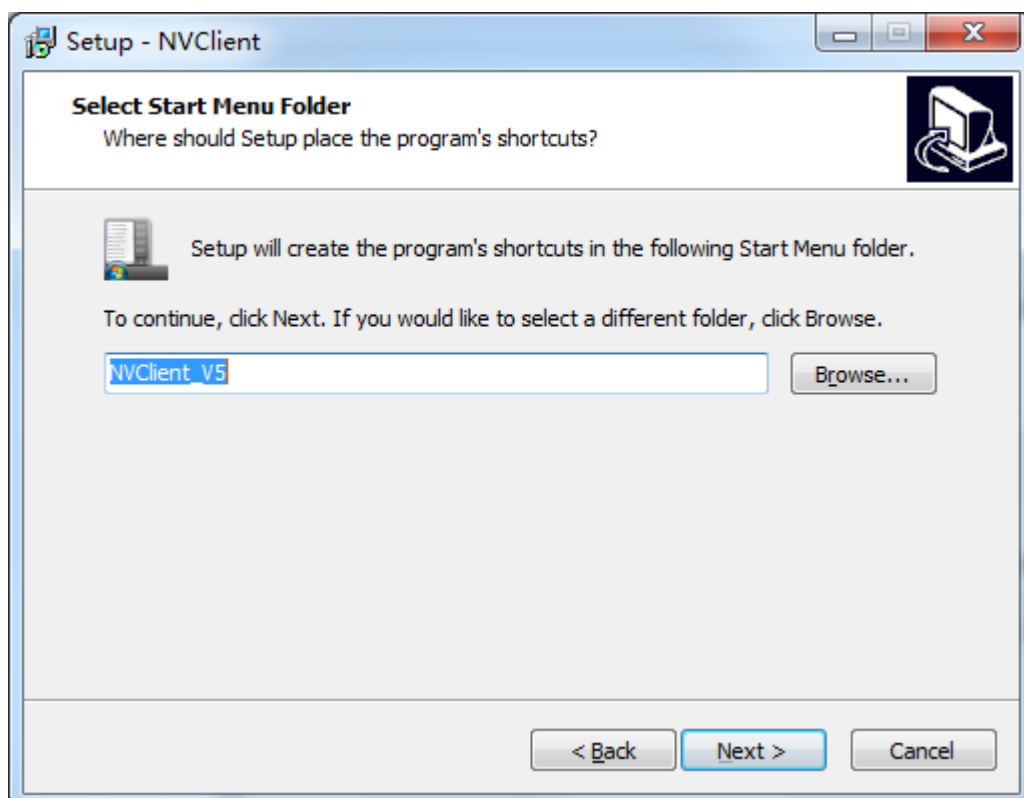


7、 Next

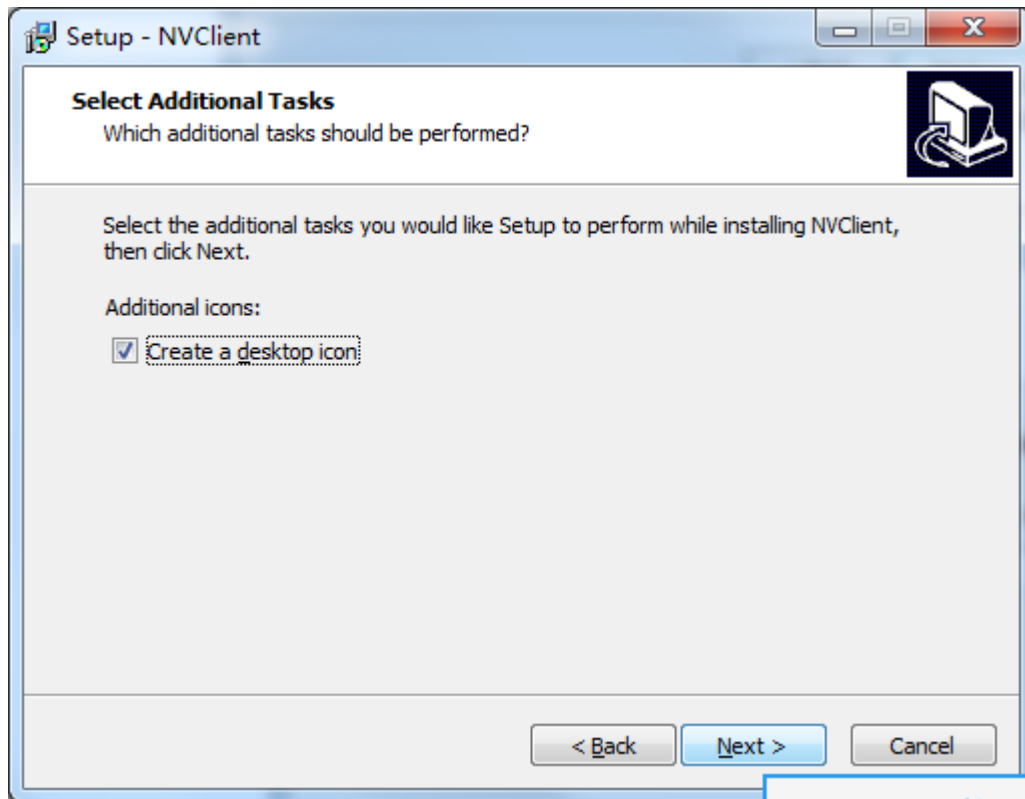


8、 Install

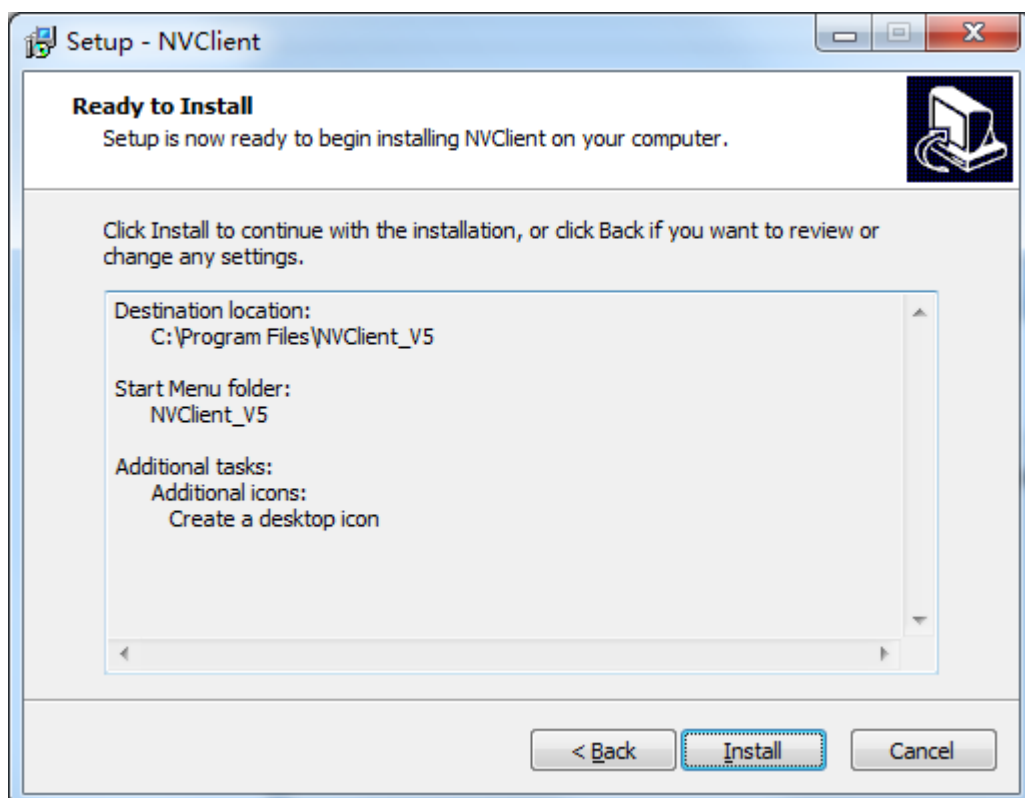

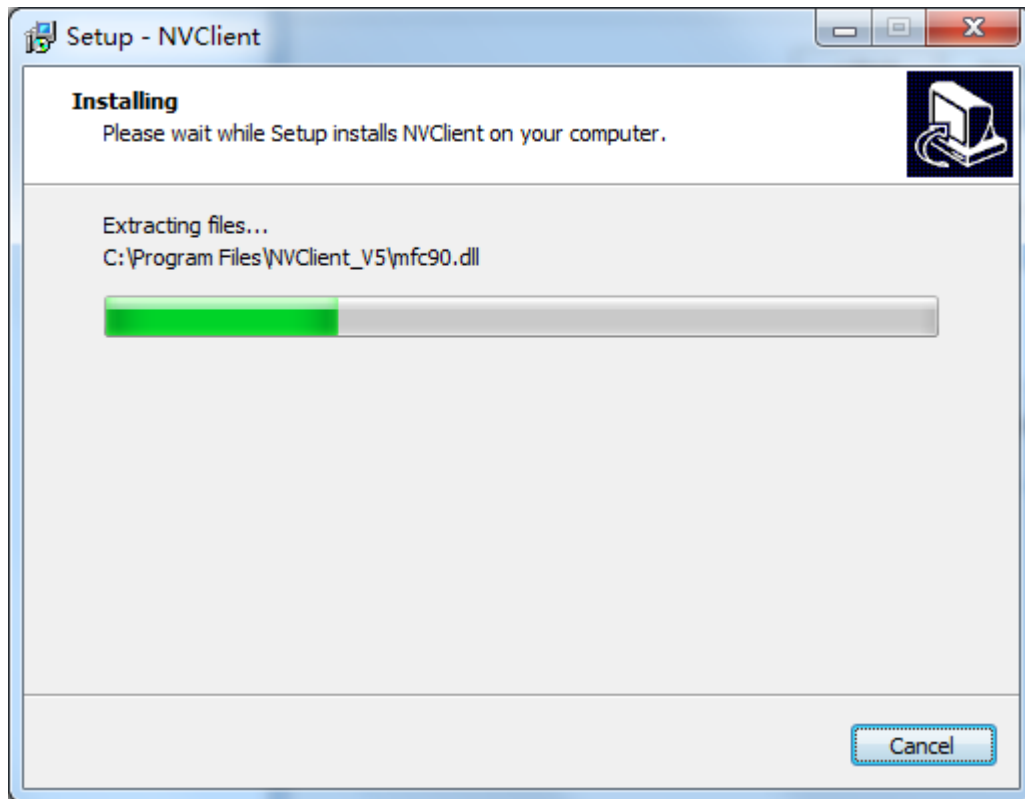

9、 Finish

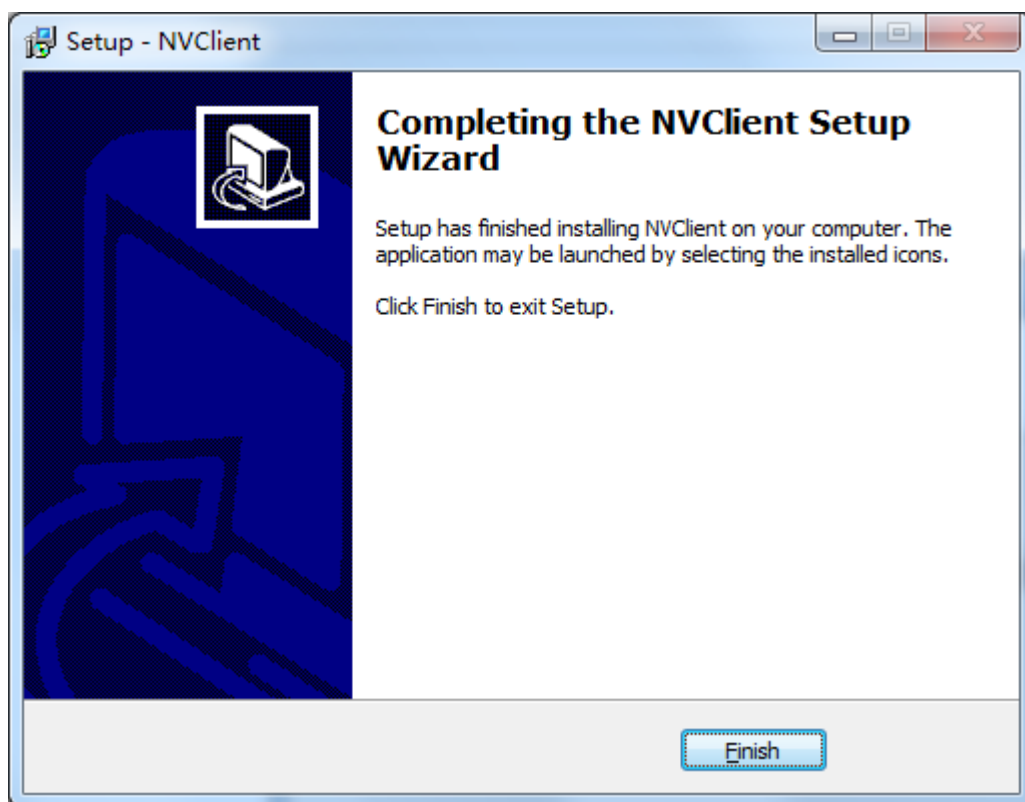


10. From your computer desktop to open this security software.




11. **User name: admin, Password: none.** And then, click” login”. AS picture.;

A login dialog box with a blue background. The title is "Login". It contains two input fields: "User name" with the text "admin" and a dropdown arrow, and "Password" which is empty. Below the fields are two checkboxes: "Auto login" and "Remember password", both of which are unchecked. At the bottom are two buttons: "Login" and "Exit".

12. Enter into this software, choose “Config”. As picture.;

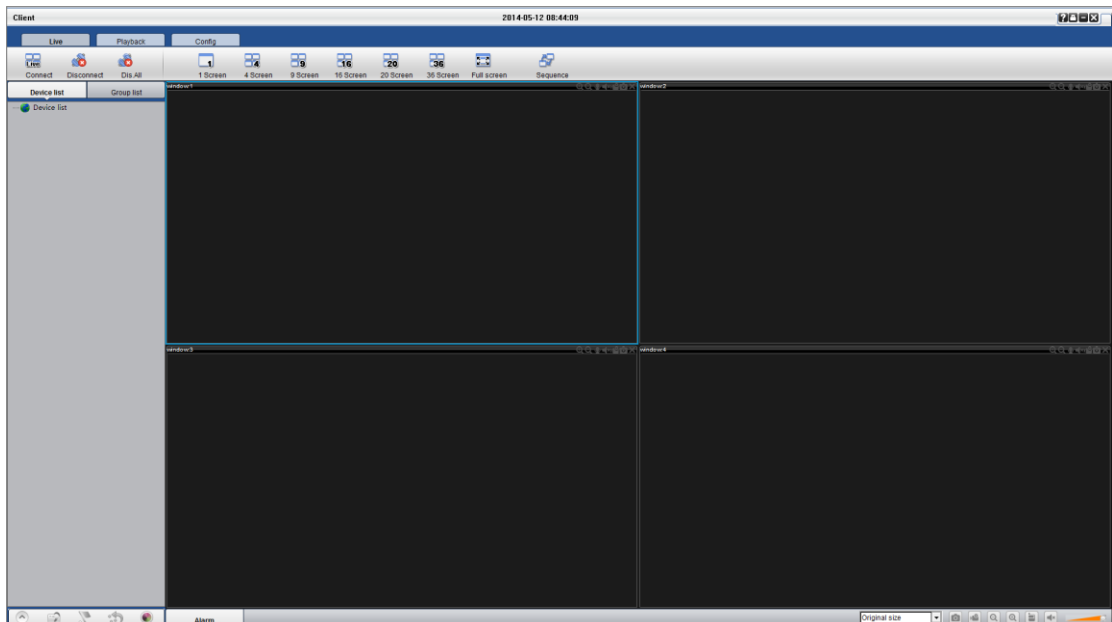

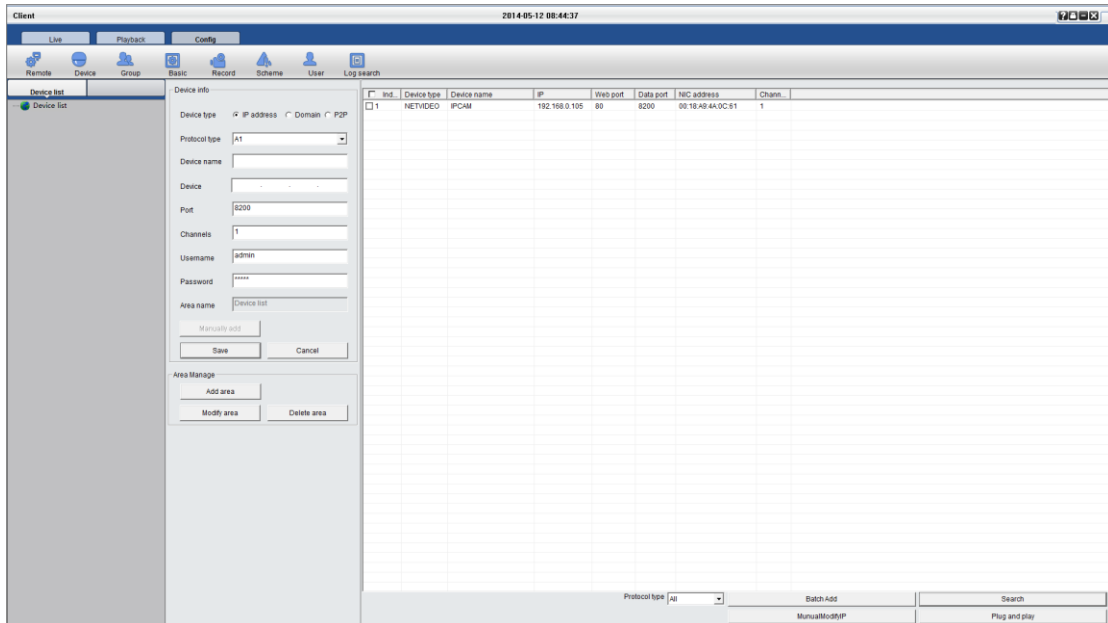


13. Click "Search", choose your camera. As picture.;




☒	Ind...	Device type	Device name	IP	Web port	Data port	NIC address	Chann...
☒	1	NETVIDEO	IPCAM	192.168.0.105	80	8200	00:18:A9:4A:0C:61	1


14. After u choose your camera, click "batch add".;

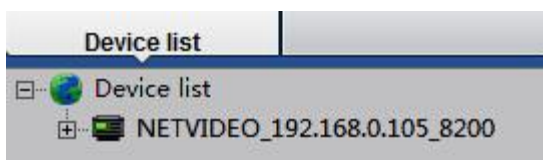

15. After add your camera, click "LIVE". As picture.

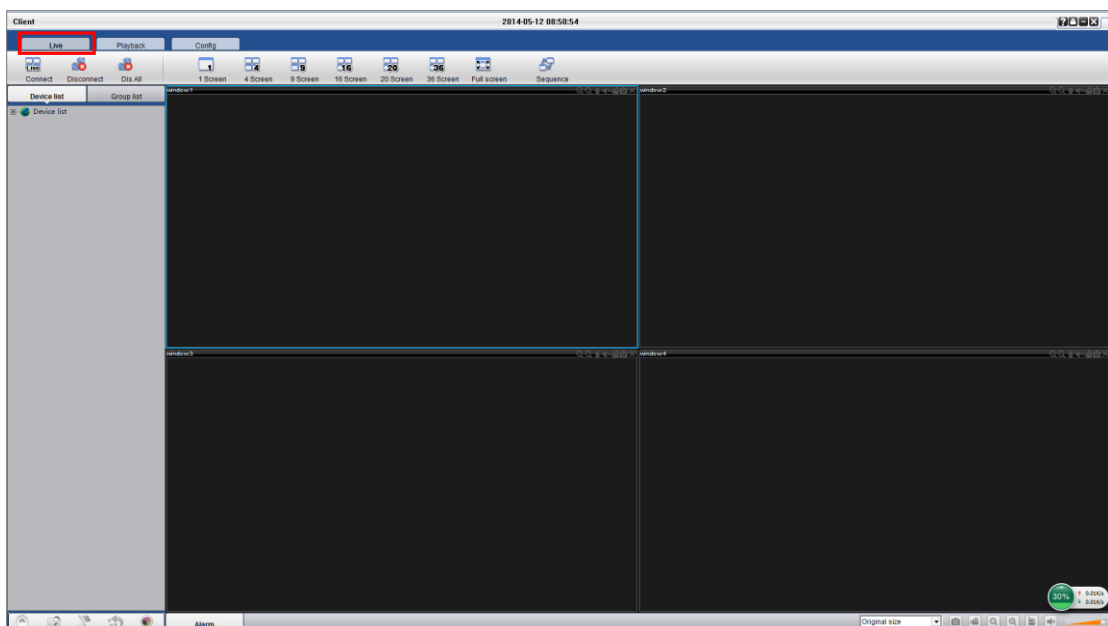

16. Click "Device list" and double click Camera. As picture.;

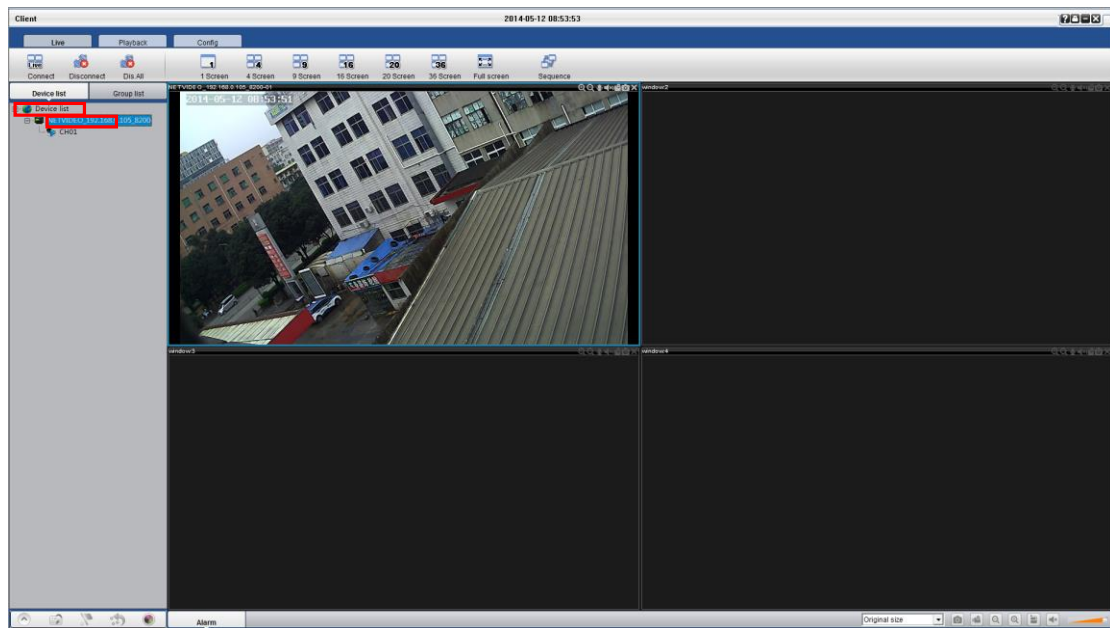


17. Camera connect successfully.;



wireless connect methods

Note: wireless connect must operate top all steps.

1、Choose "Config", click your step wireless camera.;

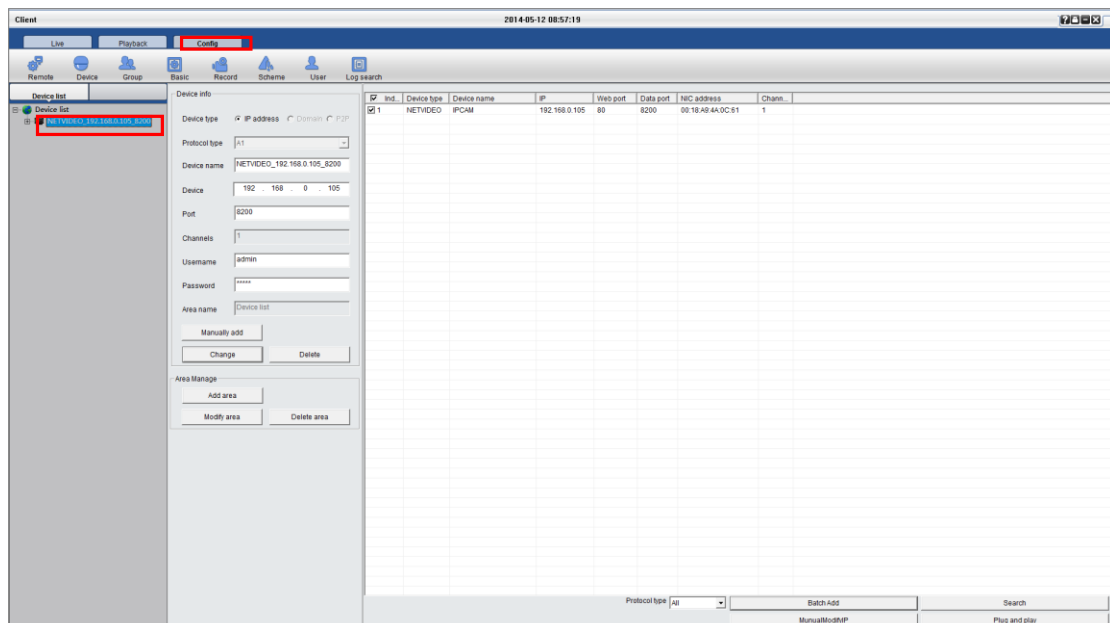

2、After u choose, Click "Remote", As picture.

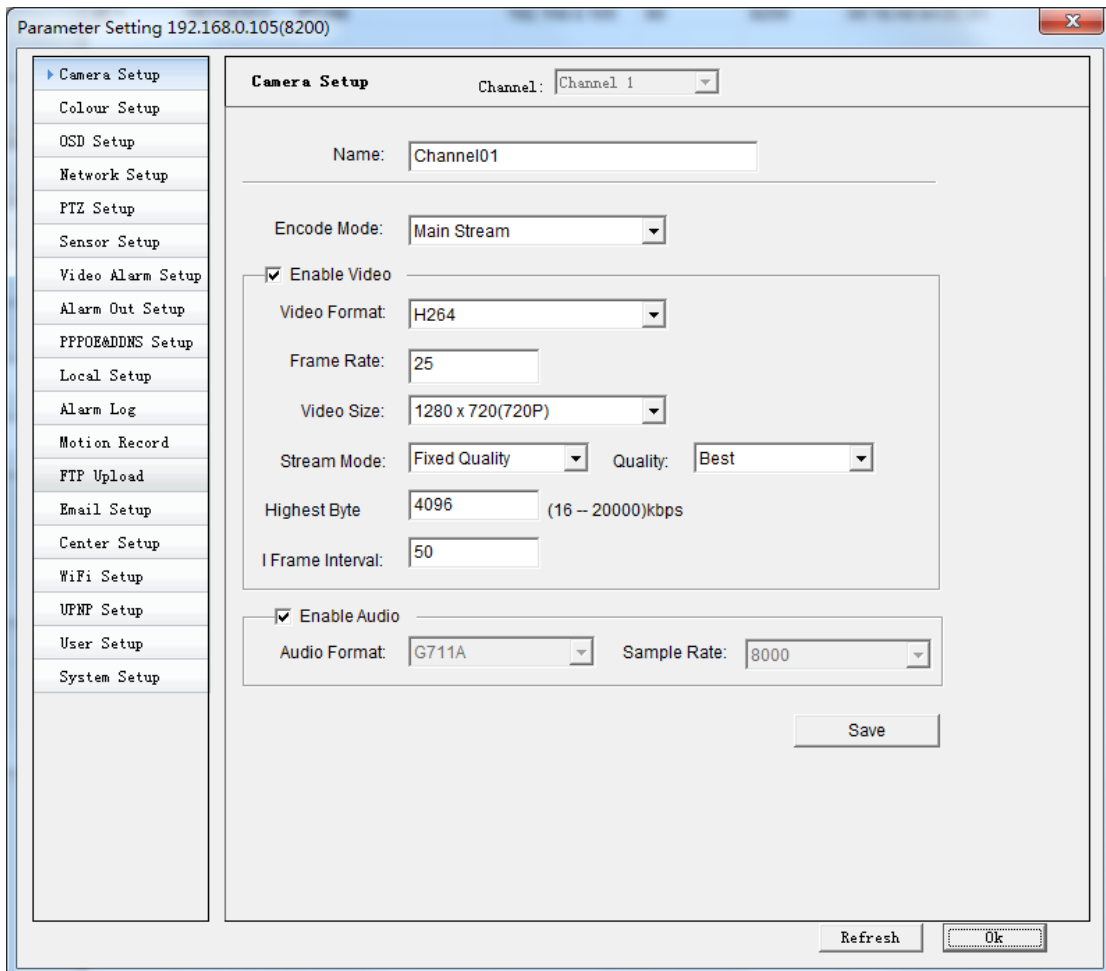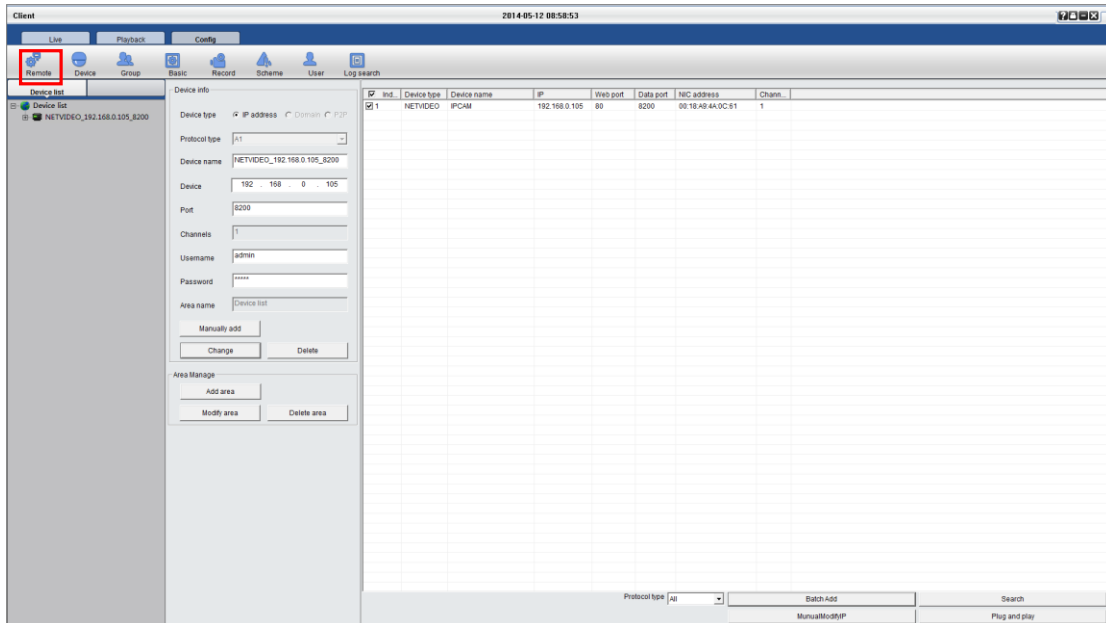

3. Choose “WiFi Setup” ;

Parameter Setting 192.168.0.105(8200)

Camera Setup
Colour Setup
OSD Setup
Network Setup
PTZ Setup
Sensor Setup
Video Alarm Setup
Alarm Out Setup
PPPOE&DDNS Setup
Local Setup
Alarm Log
Motion Record
FTP Upload
Email Setup
Center Setup
WiFi Setup
UPNP Setup
User Setup
System Setup

WiFi Setup Channel: Channel 1

WiFi Parameters

Wifi Status: Static IP Search Wifi

IP Address: 192.168.5.202

Mask: 255.255.255.0

Gateway: 192.168.5.1

DNS Server: 8.8.8.8

ESSID:

Mode: Managed

Security: None

Char Format: HEX

WEP:


WPS status: Disable WPS button

Connection Status: Not connected


WEP-64: Enter 5 ASCII characters, or Enter 10 HEX characters.
WEP-128: Enter 13 ASCII characters, or Enter 26 HEX characters.
WPA: The remove wepKey consists of 8-63 ASCII characters.

Refresh Ok

4、Choose Wifi Status: Static IP, input your correct IP Address and Gateway;

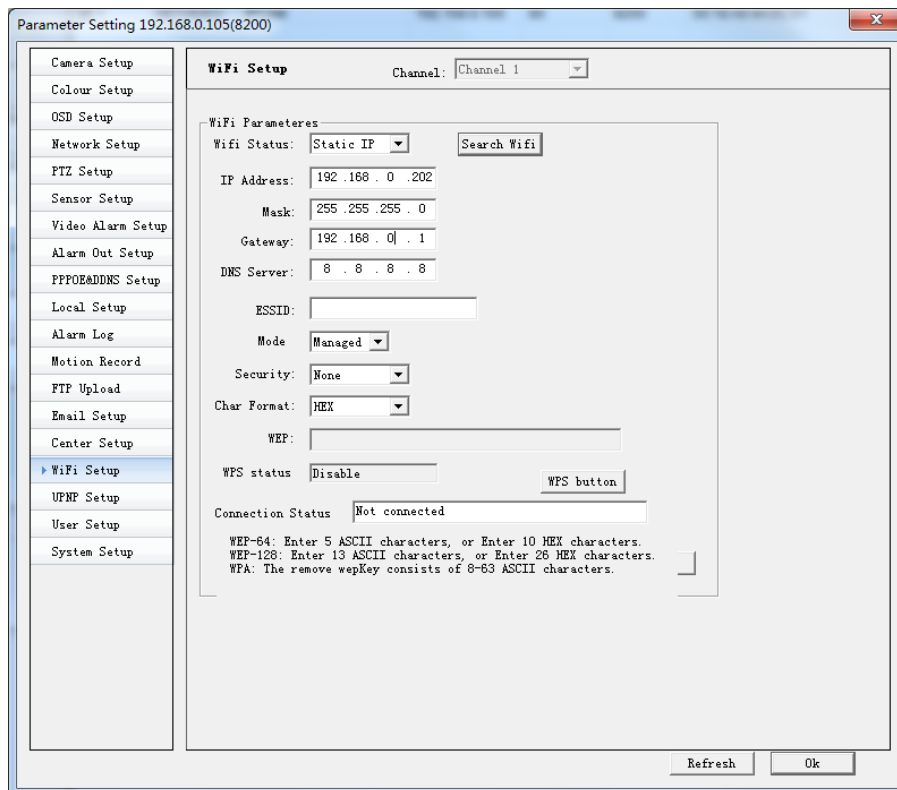

3、And then, click “Search Wifi”, choose your wireless wifi network. As picture;

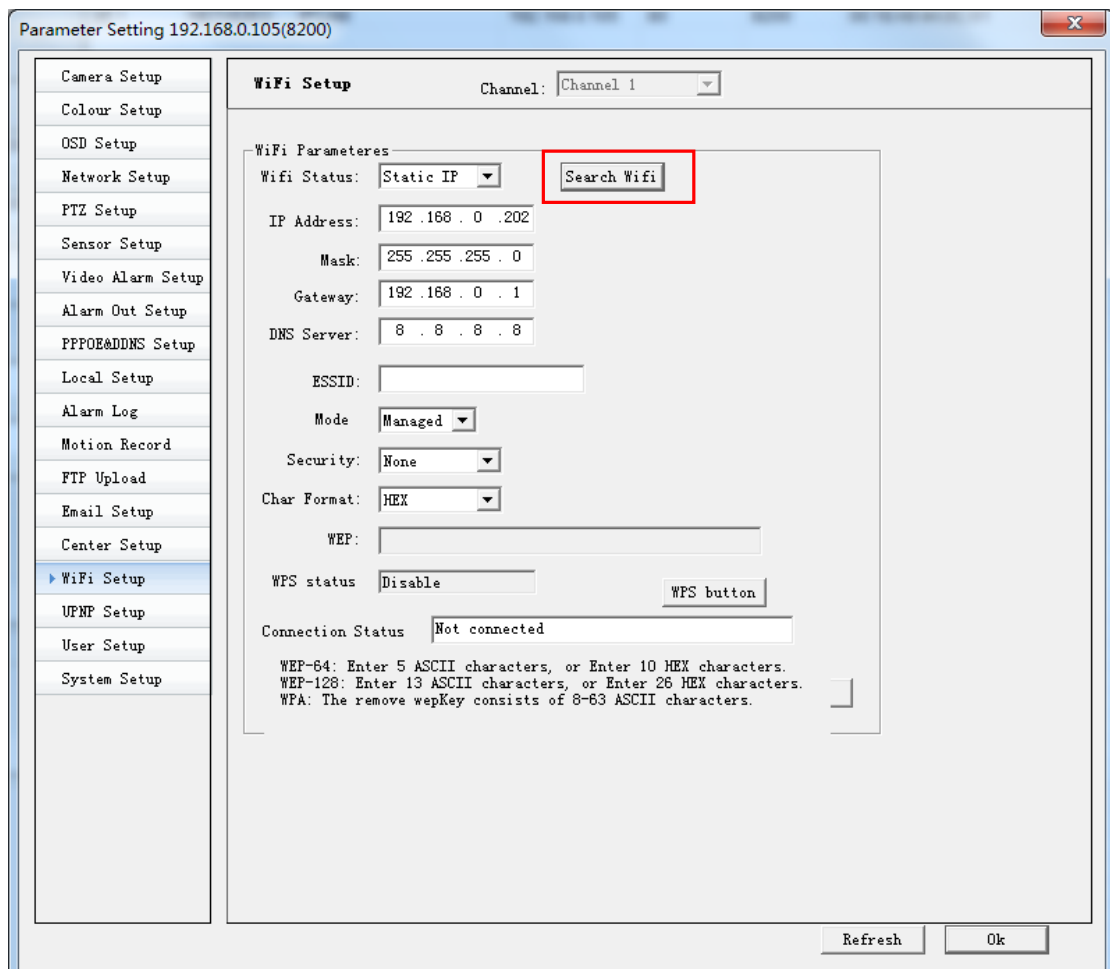

Wifi Site

ESSID	Security	RSSI	MAC
Tenda_3164B8	WPA2PSK_AES	83	8C:A3:53:13:46:8B
ChinaNet-A97m	WPA2PSK_AES	89	C9:2D:B4:44:5D:46
Wangj	WEP	23	47:AE:A3:62:E4:4A
ChinaNet-EBD2	WPA2PSK_TKIP	37	4B:14:A7:24:2E:A9
8888	WEP	42	CA:1F:FD:DC:77:82
MERCURY_C5AB4C	WEP	13	C0:27:C2:5C:BA:C4
Tenda_39D030	WPA2PSK_AES	47	8C:A3:53:93:0D:03
CU_eD6Y	WPA2PSK_TKIP	42	0B:57:5D:T9:8A:0D
lijinhuisystemplus	WEP	23	C6:8E:37:CA:A9:2E
chenshih	WEP	18	8A:75:E4:22:B9:6D

Select Refresh Cancel

5、After make sure your wireless wifi network, select the Security of encryption, such as: WPA2PSK - AES or WPA2PSK - AES, and choose Char Format, such as: ASCII, input the correct again wireless password, then click Save and OK, As picture;

Parameter Setting 192.168.0.105(8200)

Camera Setup
Colour Setup
OSD Setup
Network Setup
PTZ Setup
Sensor Setup
Video Alarm Setup
Alarm Out Setup
PPPOE&DNS Setup
Local Setup
Alarm Log
Motion Record
FTP Upload
Email Setup
Center Setup
WiFi Setup
UPNP Setup
User Setup
System Setup

WiFi Setup Channel: Channel 1

WiFi Parameters

Wifi Status: Static IP Search Wifi

IP Address: 192.168.0.202

Mask: 255.255.255.0

Gateway: 192.168.0.1

DNS Server: 8.8.8.8

ESSID: Tenda_3164B8

Mode: Managed

Security: WPA2PSK-AES

Char Format: ASCII

WEP: jienuo

WPS status: Disable WPS button


Connection Status: Not connected

WEP-64: Enter 5 ASCII characters, or Enter 10 HEX characters.
WEP-128: Enter 13 ASCII characters, or Enter 26 HEX characters.
WPA: The remove wepKey consists of 8-63 ASCII characters.


Save

Refresh Ok


Select “Y” , As picture

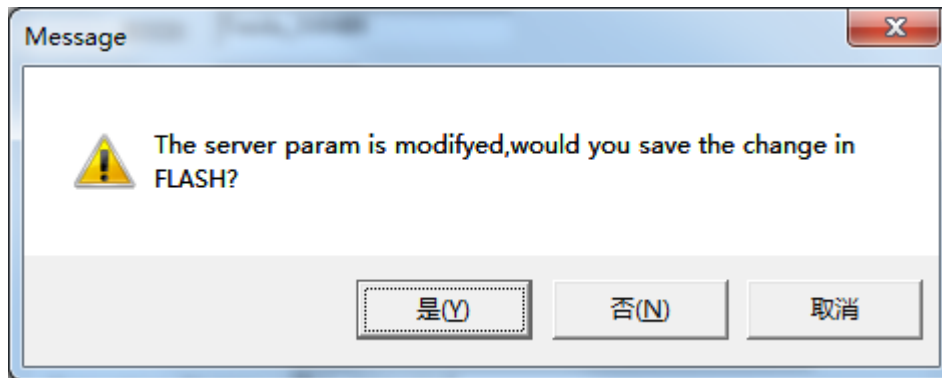


4、 If the password and encryption method are accurate, so the wireless connection automatically, As picture;

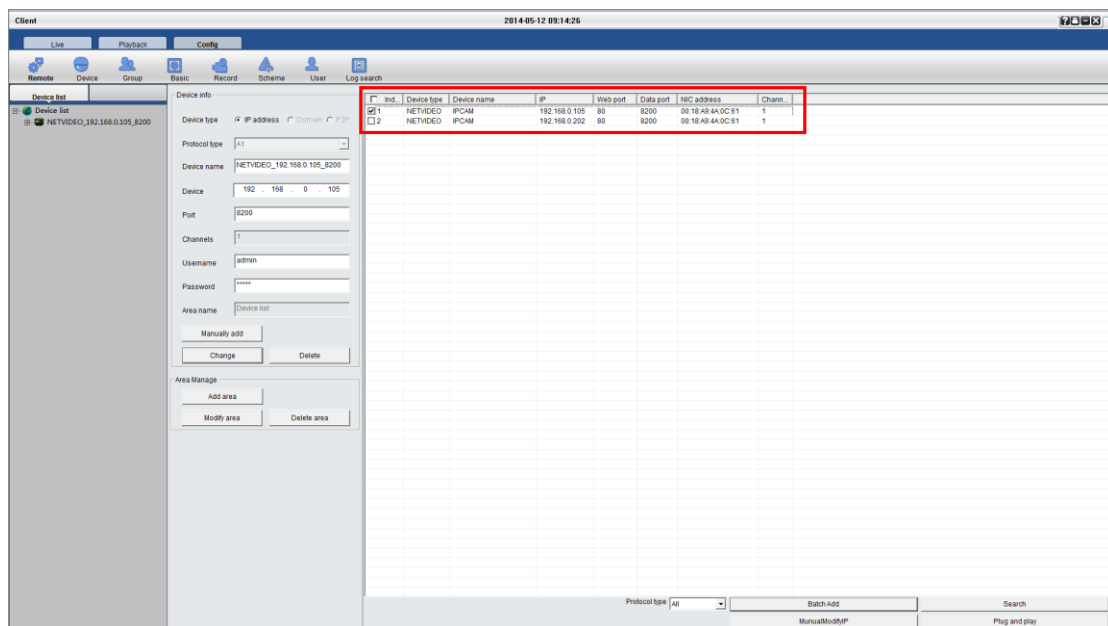

5、 Select the camera after the wireless connection, and some Batch Add,As Picture;

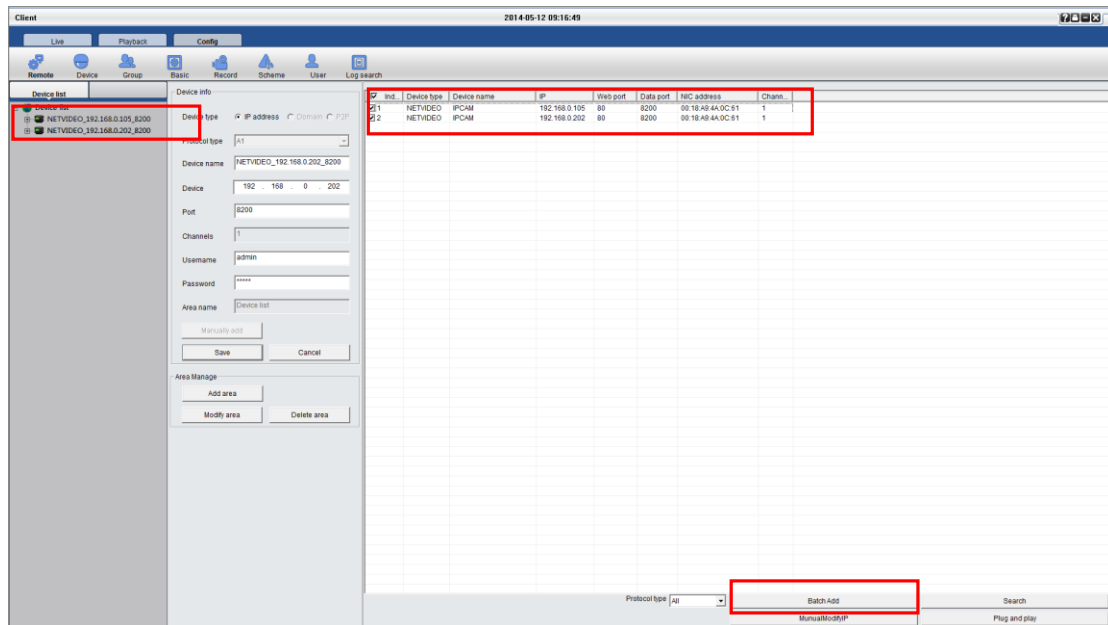

6、Disconnect your camera cable, and click on the “Live” ;

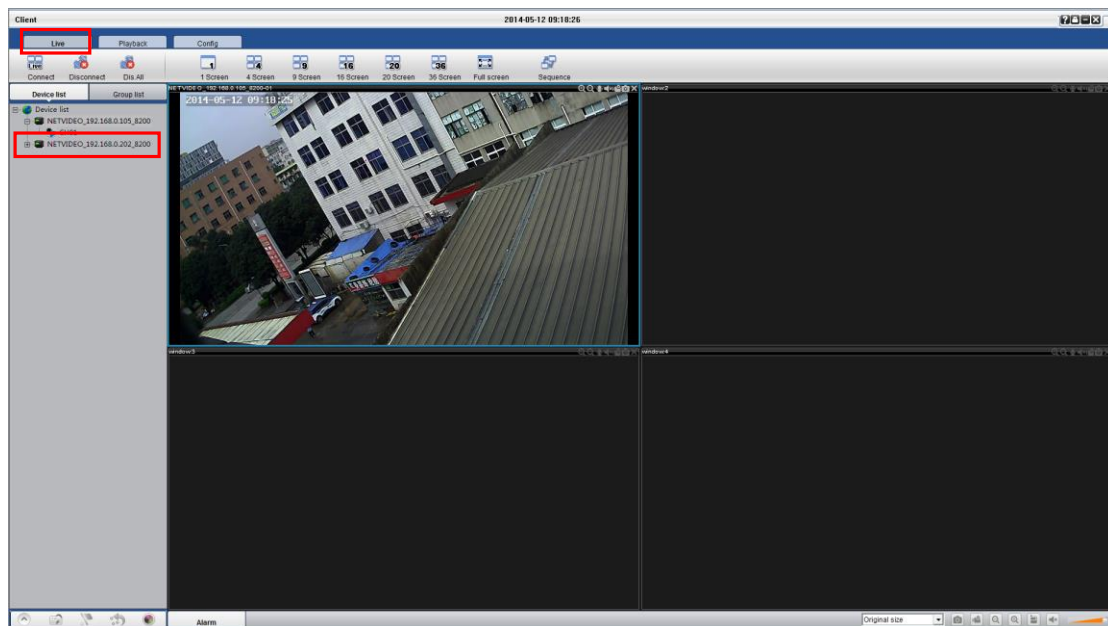

Set to complete