

If you forget the password, can use below way reset it

一、 Prepare work

1. IP camera connect with power and router
2. find out the IP address of your IP camera, use search tools
3. remember the IP address (such as 192.168.1.113) ;

二、 find the password

1. enter your computer—control panel
2. open control panel, enter----- **Programs and** functions
3. choose-----open or close windows function.
4. choose “Telnetclient” and “Windows small tool platform”
5. Open windows start ---- operation, input cmd
7. After open, then write telnet IP address, such as 192.168.1.113 (this IP address is your IP camera address, please know it), write **telnet 192.168.1.113 99**, then click enter button on your keyboard

Write user: root

password: anni2013 ,click enter

Input cd / (cd behind have a blank)

Input: cd jb\_config/jb\_rootfs/

Input rm -f \*

Input reboot

wait 3mins, the camera will restart. and then reset user:admin and password: admin

Finish