

TF 6000 COK

User Guide

Digital Terrestrial Receiver

CONAX



Contents

1	Introduction	1
1.1	Features	1
1.2	Controlling the digital receiver	2
1.2.1	The front panel	3
1.2.2	The remote control	4
2	Setup	6
2.1	Unpacking	6
2.2	Safety precautions	6
2.3	Rear panel connections	8
2.4	Connecting up your digital receiver	9
2.4.1	Connecting the antenna	9
2.4.2	Connecting to your television	9
2.4.3	Connecting to your video cassette recorder	11
2.5	Switching on for the first time	11
2.5.1	Inserting batteries in the remote control	12
2.5.2	Powering on and checking picture	12

3	Preference Settings	13
3.1	Language settings	13
3.2	Video and audio settings	14
3.2.1	Television standard	14
3.2.2	Colour model	15
3.2.3	Video cassette recorder	15
3.2.4	Television aspect ratio	16
3.2.5	Sound mode	16
3.3	Local time setting	17
3.4	Parental control	19
3.5	Adjusting the on-screen display	19
4	Service Search	21
4.1	Searching broadcasting services	21
4.2	Resetting to factory settings	22
5	Daily Usage	23
5.1	Volume control	23
5.2	Watching television	23
5.2.1	The services list	23
5.2.2	The favourite services list	24
5.2.3	Viewing programme information	26
5.2.4	Selecting audio tracks	26
5.2.5	Selecting subtitle tracks	27
5.2.6	Viewing teletext	27
5.3	Viewing electronic programme guide	27
5.4	Watching multifeed programme	29
5.5	Making timer events	29

6 Listing Services	31
6.1 Editing the favourite list	31
6.2 How to use on-screen keyboard	33
7 Firmware Update	34
Index	35

Chapter 1

Introduction

The TF 6000 COK digital receiver is fully compliant with the international Digital Video Broadcasting (DVB) standard, and can receive digital broadcasts. For its operation you need an antenna, which must be installed appropriately.

NOTE

In general we equate a channel with a frequency. Unlike analogue broadcasts, however, digital broadcasts are not all assigned to their own frequencies; instead, multiple television broadcasts are transmitted through a single frequency. The frequency in digital broadcasting is usually called transponder. To reduce confusion in this manual, the word **service** is preferably used than **channel** as a term to indicate one television or radio broadcast.

1.1 Features

The TF 6000 COK digital receiver has the following features:

- Can store up to 2000 television and radio services.
- You can create favourite lists of your favourite services.

- You can view information about the current television or radio programme.
- Has an electronic programme guide that provides an overview of scheduled programmes.
- You can update the firmware of the digital receiver to the latest version, provided by the manufacturer.

1.2 Controlling the digital receiver


The digital receiver can be operated with the remote control and the buttons on the front panel.

NOTE


When the digital receiver is off but plugged into a wall outlet, we say that it is in standby mode; on the other hand, when it is on, it is in operation mode. Even when you are not using the digital receiver, you should keep it plugged into a wall outlet to be in standby mode so that it can run timer events at any time.

1.2.1 The front panel

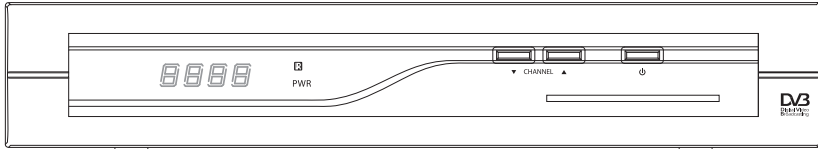

The front panel of the digital receiver has buttons to control the digital receiver, and specific lamps and a display to indicate its status. The following indicates what they mean.




Front display displays the current time in standby mode, and displays the current service in operation mode.

 lamp lights up whenever you press a button on the remote control.


PWR lamp lights up while the digital receiver is in standby mode.

CHANNEL ,  buttons switch to previous or next service. They are also used to navigate in menus and interactive screens.

 button switches the digital receiver between standby mode and operation mode.

 

 
 
 
 




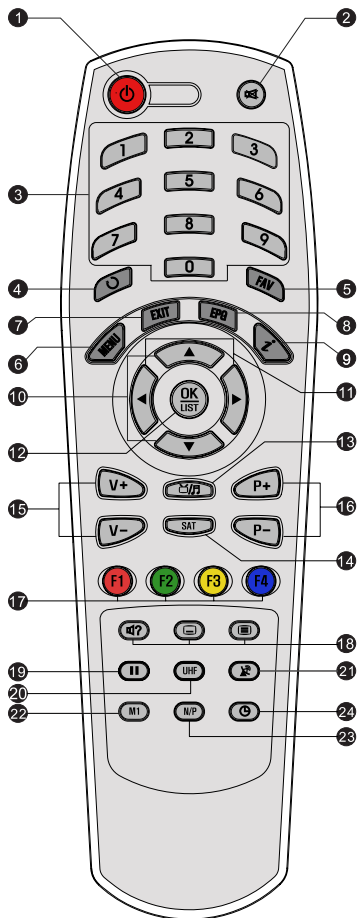


 
 

You have to insert your subscription card into the front slot to watch pay services.

1.2.2 The remote control



- ① button switches the digital receiver between standby mode and operation mode.
- ② mutes the sound. Press again to switch it back on.
- ③ Numeric buttons are used to enter a service number for service change or to specify values for menu options.
- ④ switches between the current service and the previously viewed one.
- ⑤ displays the favourite lists.
- ⑥ displays the main menu. It is also used to return to the previous menu from a submenu.
- ⑦ is used to exit the current screen.
- ⑧ displays the electronic programme guide.
- ⑨ displays the service information box. It is also used to display more information about a programme.
- ⑩ buttons switch to previous or next service. They are also used to navigate in menus and interactive screens.

⑪ buttons decrease or increase the volume. They are also used to change values for menu options.

- ⑫  displays the services list. See § 5.2.1 for more details. It is also used to select a menu item.
- ⑬  switches between television services and radio services.
- ⑭  is not used in this model.
- ⑮  ,  buttons decrease or increase the volume. They are also used to change values for menu options.
- ⑯  ,  buttons switch to previous or next service. They are also used to navigate in menus and interactive screens.
- ⑰ These buttons have different functions per menu. They will be guided by on-screen help.
- ⑱  button is used to select an audio track and sound mode, or a video track of multifeed programme.  button is used to select a subtitle track.  button displays teletext.
- ⑲  pauses live television.
- ⑳  is not used in this model.
- ㉑  switches the output of the TV SCART socket between the digital receiver and the device connected to the VCR SCART socket. See § 3.2.3 for more details.
- ㉒  is not used in this model.
- ㉓  switches television standard between PAL and NTSC. However, this button may not be used in some models. See § 3.2.1 for more details.
- ㉔  is used to set a sleep timer.

Chapter 2

Setup

2.1 Unpacking

Before going any further, check that you have received the following items with your digital receiver.

- Remote control unit
- Two batteries for the remote control (AAA 1.5 V)
- A copy of this user guide

NOTE

Accessories may vary according to your local area.

2.2 Safety precautions

Please read carefully the following safety precautions.

- The mains power must be 90 to 250 volt. Check it before connecting the digital receiver to the wall outlet. For the power consumption of the digital receiver, refer to Table [2.1](#).

- The wall outlet should be near the equipment. Do not run an extension lead to the unit.
- Do not expose the digital receiver to any moisture. The digital receiver is designed for use indoors only. Use dry cloth when cleaning the digital receiver.
- Place the digital receiver on a firm and level surface.
- Do not place the digital receiver close to heat emitting units or in direct sunlight, as this will impair cooling. Do not lay any objects such as magazines on the digital receiver. When placed in a cabinet, make sure there is a minimum space of 10 centimetres around it. For the physical specification of the digital receiver, refer to [Table 2.2](#).
- Protect the power cord from being walked on or pinched. If the wires are exposed or the cord is damaged, do not use the digital receiver and get the cord replaced.
- Never open the digital receiver casing under any circumstances. The warranty will be void.
- Refer all servicing to a qualified service technician.

Table 2.1: Power specifications


Input voltage	90 to 250 V AC, 50/60 Hz
Power consumption	9 W at maximum in operation 8 W in standby

Table 2.2: Physical specifications

Size	260 × 46 × 190 mm
Weight	1.2 kg
Operating temperature	0 to 45 °C
Storage relative humidity	5 to 95 %

2.3 Rear panel connections

The TF 6000 COK has some connections on the back panel.

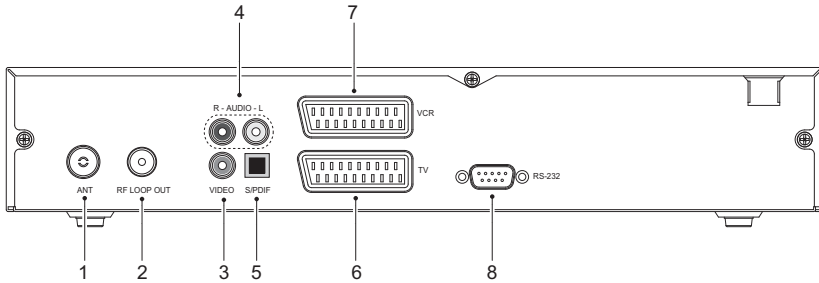

Check what connections your television set has in comparison with the digital receiver.

- ① ANT Terrestrial broadcasting signal input socket.
- ② RF LOOP OUT Terrestrial broadcasting signal output socket through the ANT socket for another digital receiver.
- ③ VIDEO Composite video output socket for the television set. (yellow)
- ④ AUDIO L/R Stereo audio output socket for the television set or the audio system. (white/red)
- ⑤ S/PDIF Dolby digital output socket for the audio system.
- ⑥ TV Audio and video output socket for the television set.
- ⑦ VCR Audio and video input/output socket for the video cassette recorder or suchlike.
- ⑧ RS-232 Serial port for firmware update and data transfer.


Table 2.3: Connectors specifications

VIDEO	Composite video (CVBS) output
AUDIO	Left & right audio output
TV	CVBS/RGB/YUV video output Left & right audio output
VCR	CVBS video output Left & right audio output CVBS video input for bypass Left & right audio input for bypass
S/PDIF	Dolby digital audio output
RS-232	115.2 kbps at maximum

2.4 Connecting up your digital receiver

There are several ways to set up the digital receiver. Set up the digital receiver suitably to your television and other appliances. If you have any problem with your setup or need help, contact your dealer.

2.4.1 Connecting the antenna

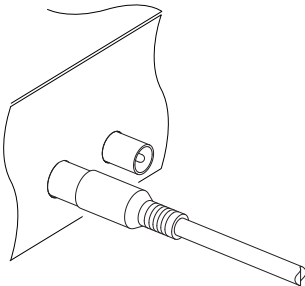

Whatever sort of connection you have between the digital receiver and the television, you need to connect the digital receiver to your television antenna so that it can receive digital television services.

Connect the antenna cable to the ANT connector.

If you have another digital receiver, link it from the RF LOOP OUT connector.

2.4.2 Connecting to your television


Between all the following connectors of the digital receiver, we recommend you to use the first connector to get best picture quality. If your television does not have the matching connector,

then use the next connector in the following order for better picture quality.

1. SCART connector (TV)
2. Composite connector (VIDEO)

You should configure audio and video settings after connecting up the digital receiver. See § 3.2 for detailed description.

To use the SCART connector

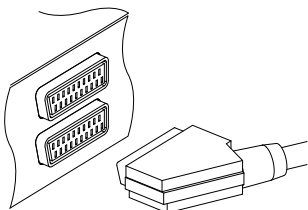


For best results with a standard television set, you should use a SCART cable, plugging one end into the TV socket on the digital receiver and the other end into a free SCART socket on your television.

Some televisions have inputs via Component connector or S-Video connector rather than SCART.

If you have such a television, use an appropriate conversion cable to link the TV socket on the digital receiver to the matching socket on your television.


If you connect with a standard SCART cable, you do not have to make audio connections because the SCART connector can output stereo audio. But if you use a conversion cable, such as SCART-to-Component, you have to make audio connections.

To use the composite video connector

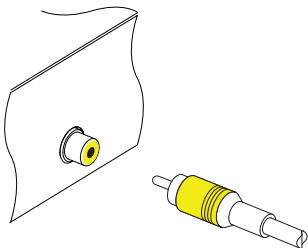


You will need to obtain a composite video cable (RCA cable) to use the composite video connector. Plug one end of the cable into the VIDEO (yellow) socket on the digital receiver, and the other end into the matching socket on your television.

To connect the audio connectors

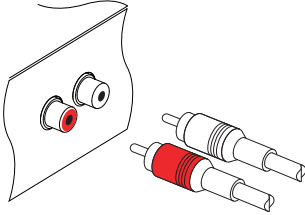


You will need to obtain an audio cable (RCA cable) to connect the audio connectors. Plug one end of the cable into the AUDIO L (white) and AUDIO R (red) sockets on the digital receiver, and the other end into the matching sockets on your television or audio system.

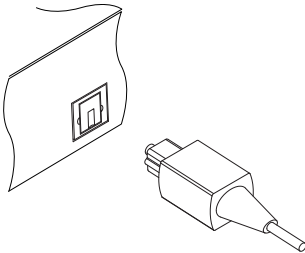

To enjoy Dolby digital audio, your television or audio system must be able to decode Dolby digital audio, and you will need to obtain a S/PDIF cable. Plug one end of the cable into the S/PDIF socket on the digital receiver, and the other end into the matching socket on your audio system.

2.4.3 Connecting to your video cassette recorder

The digital receiver can also output video to another appliance such as a video cassette recorder or video receiver through an auxiliary SCART connector.

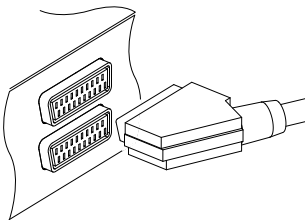

You will need to obtain a SCART cable to use the auxiliary SCART connector. Plug one end of the cable into the VCR socket on the digital receiver, and the other end into the matching socket on your video cassette recorder or suchlike.

2.5 Switching on for the first time

Now that you have your digital receiver connected, you should plug it in to a mains socket. Ensure that your television set is turned on, so that you will be able to see the display from the digital receiver.

2.5.1 Inserting batteries in the remote control


To insert the batteries, open the battery compartment by removing the lid, and then insert the batteries observing the polarity, which is marked on the base of the battery compartment.

If the digital receiver no longer reacts properly to remote control commands, the batteries may be flat. Be sure to remove used batteries. The manufacturer accepts no liability for the damage resulting from leaking batteries.

NOTE

Batteries, including those which contain no heavy metals, may not be disposed of with household waste. Please dispose of used batteries in an environmentally sound manner. Find out about the legal regulations which apply in your area.

2.5.2 Powering on and checking picture


Now, press the  button in top left corner on the remote control.

If the picture is good, you can skip to § 4.1 to search for the available television and radio services. Otherwise, you may need to temporarily connect the composite video connector (VIDEO) to your television set so that you can see the on-screen menus in order to configure the video settings.

Chapter 3

Preference Settings

3.1 Language settings

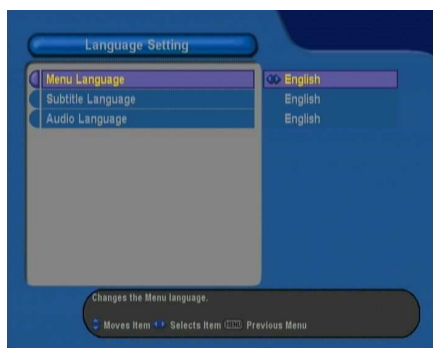

You can select the language in which the menu would be displayed. In addition to that, you can select which language of audio track and of subtitle track should be output.


Select the System Setting > Language Setting menu. You should see a screen like the left figure.

Menu language

The digital receiver supports many menu languages: Dutch, English, German, French, Italian, Russian, Turkish and so forth. Set the Menu Language option to your desired language. Once you select a language, the menu will be immediately displayed in the selected language.


Subtitle language

Set the Subtitle Language option to your desired language. When you watch a programme, the subtitle track of the selected language will be displayed if available.

Apart from this setting, you can select a subtitle track with the  button. See § 5.2.5 for detailed description.

Audio language

Set the Audio Language option to your desired language. When you watch a programme, the audio track of the selected language will be output if available.

Apart from this setting, you can select an audio track with the  button. See § 5.2.4 for detailed description.

3.2 Video and audio settings



You have to configure the video and audio settings appropriately to your television set and other appliances.

Select the System Setting > A/V Output Setting menu. You should see a screen like the left figure.

3.2.1 Television standard

The digital receiver supports two television standards. One is PAL standard, and the other is NTSC standard. PAL was adopted in European countries while NTSC is adopted in USA, Canada, Mexico and so forth.

If you have a PAL television, you have to set the TV Type option to PAL. In that case, if you switch to a service of the NTSC standard, the digital receiver will presents the pictures converting into the PAL standard. However, it is inevitable to lose a little picture quality. Likewise, the contrary case brings about the same result.

The best thing is to watch PAL services with a PAL television and to watch NTSC services with a NTSC television. However, a multi television set is able to process both of them. So if you have a multi television set, you had better set the TV Type option to Multi. Then the digital receiver will present pictures without standard conversion.


3.2.2 Colour model

Through the TV SCART connector, the digital receiver is able to output video in various colour models. If you have the digital receiver linked to your television via this connector, you should set the Video Output option to your desired colour model. If you have connected via the RCA connector labeled VIDEO on the back panel, you do not have to set this option because the digital receiver outputs CVBS video through the RCA connector independent of the SCART connector.

It is known in general that the RGB colour model provides the best video quality with little difference from the YUV colour model but the CVBS colour model does the least. So RGB would be most desirable for this option.

3.2.3 Video cassette recorder


You can have the digital receiver linked to your video cassette recorder or such an appliance via the VCR SCART connector. In that case, the digital receiver will operate differently depending on the setting of the VCR Scart Type option. If the option is set to Standard, the digital receiver will pass the video from the video cassette recorder to your television when it starts

playback. But if the option is set to **External A/V**, the digital receiver will not pass the video automatically. To pass it, you have to press the  button.

3.2.4 Television aspect ratio


If you have a wide-screen television, set the **TV Aspect Ratio** option to **16:9**.

Otherwise, if you have a normal-screen television, set the **TV Aspect Ratio** option to **4:3**.

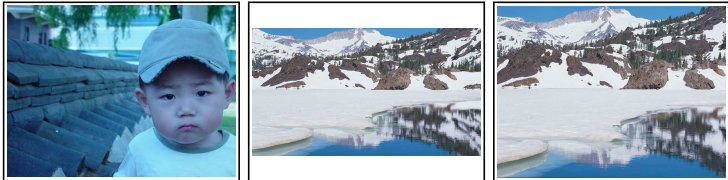

You cannot fully enjoy wide-screen programmes with your normal-screen television as the above figures show. The left figure shows a normal picture displayed in the normal screen. To watch wide-screen programmes in the shape like the centre figure, set the **16:9 Display Format** option to **Letter Box**. Wide-screen pictures then will be reduced to fit to the width of the normal screen. Otherwise, to watch them in the shape like the right figure, set it to **Center extract**. Wide-screen pictures then will be cut out on the left and right sides equally to fit to the width of the normal screen.


NOTE

When watching television, press the  button to alternate between normal-screen and wide-screen formats.

3.2.5 Sound mode


Basically, there are two audio sources as you can find two audio sockets on the back panel of the digital receiver. You can enjoy

only one source or both of them in either stereo or mono. Set the Sound Mode option as you desire.

Apart from this setting, you can change the sound mode with the  button. See § 5.2.4 for detailed description.

3.3 Local time setting

You should set your local time for timer events.

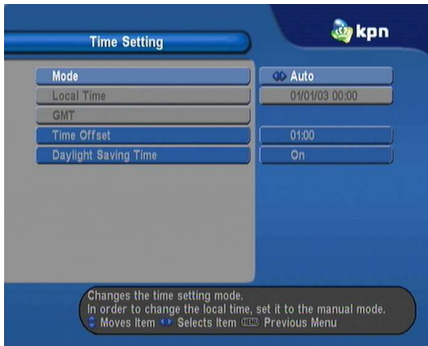

Select the System Setting > Time Setting menu. You should see a screen like the left figure.

You can set the clock manually or use the time signal, Greenwich Mean Time (GMT), carried as part of the digital television broadcast.

To use Greenwich Mean Time, take the following steps:

1. Set the Mode option to Auto; then the Time Offset option becomes enabled.
2. Set the Time Offset option to the time difference between your time zone and GMT referring to Table 3.1.
3. Make sure that your local time is correctly displayed on the Local Time option.

To set the local time yourself, set the Mode option to Manual and enter your local time to the Local Time option with the numeric buttons. The time format is *day/month/year 24-hour:minute*.

If daylight saving time is observed in your state at the moment, set the Daylight Saving Time option to On.


Table 3.1: Time offset table

Time offset	City
GMT – 12:00	Eniwetok, Kwajalein
GMT – 11:00	Midway Island, Samoa
GMT – 10:00	Hawaii
GMT – 09:00	Alaska
GMT – 08:00	Pacific Time US, Canada
GMT – 07:00	Mountain Time US, Canada
GMT – 06:00	Central Time US, Canada, Mexico City
GMT – 05:00	Eastern Time US, Canada, Bogota, Lima
GMT – 04:00	Atlantic Time Canada, La Paz
GMT – 03:30	Newfoundland
GMT – 03:00	Brazil, Georgetown, Buenos Aries
GMT – 02:00	Mid-Atlantic
GMT – 01:00	Azores, Cape Verde Islands
GMT	London, Lisbon, Casablanca
GMT + 1:00	Paris, Brussels, Copenhagen, Madrid
GMT + 2:00	South Africa, Kaliningrad
GMT + 3:00	Baghdad, Riyadh, Moscow, St. Petersburg
GMT + 3:30	Tehran
GMT + 4:00	Abu Dhabi, Muscat, Baku, Tbilisi
GMT + 4:30	Kabul
GMT + 5:00	Ekaterinburg, Islamabad, Karachi, Tashkent
GMT + 5:30	Bombay, Calcutta, Madras, New Delhi
GMT + 6:00	Almaty, Dhaka, Colombo
GMT + 7:00	Bangkok, Hanoi, Jakarta
GMT + 8:00	Beijing, Perth, Singapore, Hong Kong
GMT + 9:00	Tokyo, Seoul, Osaka, Sapporo, Yakutsk
GMT + 9:30	Adelaide, Darwin
GMT + 10:00	Eastern Australia, Guam, Vladivostok
GMT + 11:00	Magadan, Solomon Islands, New Caledonia
GMT + 12:00	Fiji, Auckland, Wellington, Kamchatka

NOTE

Daylight saving time adds one hour to the time when the option is set to On. When setting the time offset from Greenwich Mean Time, make sure that time offset does not include daylight saving time.

3.4 Parental control

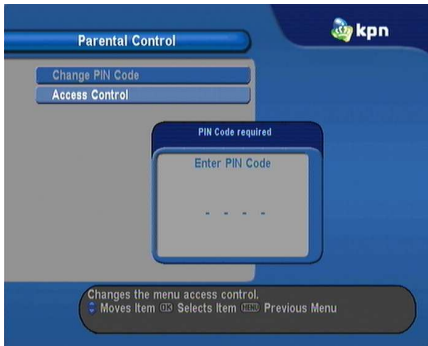


Select the System Setting > Parental Control menu. You should see a screen like the left figure, and you will be asked your Personal Identification Number (PIN). The number is initially set to '0000'.

To change the number, select the Change PIN Code menu; then an input box appears. You have to enter a desired number twice for confirmation.

You can also restrict uses of some menus. Selecting the Access Control menu displays a list of menus that you can lock. If the Time Setting item is set to Locked, you have to enter the personal identification number when accessing the Time Setting menu. If you enter a wrong number, you cannot use the menu. To release a shut item, set it to Unlocked.

3.5 Adjusting the on-screen display

You can adjust the transparency level of the on-screen display. Select the System Setting menu and set the OSD Transparency option as you desire. Its available range is from 0 to 50 percent.

You can adjust the display time of the information box. For the information box, see § 5.2.3. To adjust its display time, select the System Setting menu and set the Info Box Display Time option as you desire. Its available range is from 1 to 30 seconds. If you set this option to No Info Box, the information box will not be displayed when you switch services. However, pressing the  button will display the information box. If you

set this option to **Never Hide**, the information box will always be displayed.


In addition, you can raise or lower the position of the information box. Select the **System Setting** menu and set the **Info Box Position** option as you desire. Its available range is from -10 to $+3$ lines. The more high you set the option, the more low the information box will be positioned.

Chapter 4

Service Search

After connecting up the digital receiver, you will need to perform a service search.

4.1 Searching broadcasting services

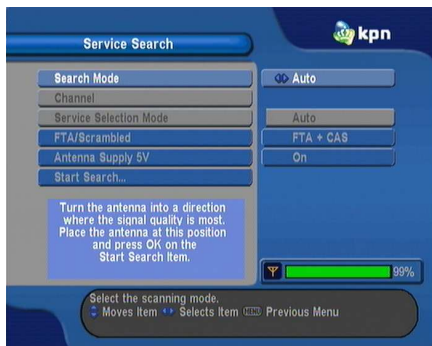

To perform service search, select the Installation > Service Search menu. You should see a screen like the left figure.

If you have an antenna booster, you should set the Antenna Supply 5V option to On to supply power to it.

You should set the Search Mode option to Auto for the first time after connecting up the digital receiver; then the digital receiver will search for all available services.

You may choose to only search for services of a specific transponder because more than one service are provided via each

transponder. To do that, set the **Search Mode** option to **Manual**, and then at the **Channel** option select your desired transponder. The number ranges from 5 to 12 in VHF and 21 to 69 in UHF.

To start service search, select the **Start Search** item; then a list box appears, in which found services will be listed. When it has completed, press the **OK** button to save found services. To stop at any time or to exit without saving, press the **EXIT** button.

4.2 Resetting to factory settings

The digital receiver maintains the following data:

- Services list
- Favourite list
- Timer list
- Preference settings


You can reset all data of the digital receiver. To do that, select the **Installation > Factory Setting** menu, and then you are asked for confirmation. If you select **Yes**, service entries, favourite entries and timer events will all be deleted, and preference options will be reset to the manufacturer's factory settings.

The digital receiver will ask for your location and language after resetting all the data. You have to designate them so that you can perform service search again.


Chapter 5

Daily Usage

5.1 Volume control


Use the ◀ and ▶ buttons to alter the volume to a comfortable level. You may need to adjust the volume on your television set too. To temporarily switch off the sound, press the  button. Press it again to restore the sound to previous level.

5.2 Watching television

To change services, press the ▲ or ▼ button. Pressing the  button switches to the previously viewed service. In addition, you can switch to your desired service by entering its service number with the numeric buttons. You can also select a service to watch in the services list.

5.2.1 The services list

To view the services list, press the  button.

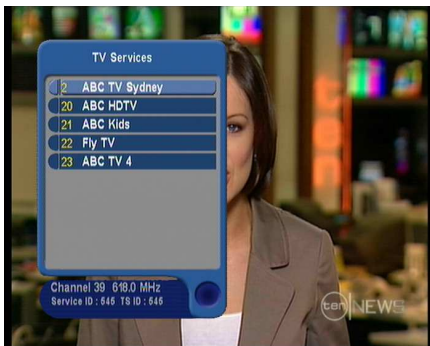

On the services list, you can see the service information:

- Service number and name
- Transponder information

A dollar sign (\$) may be marked on some entries, indicating pay service. To watch pay services, you need the subscription card.


To select a desired service, put the highlight bar on its entry with the ▲ or ▼ button and press the (OK) button; then it will be presented.

Pressing the ◀ or ▶ button skips over 10 entries up or down. Entering a service number with the numeric buttons puts the highlight bar on its entry.

You can switch between the television services list and the radio services list by pressing the (TV/R) button.

5.2.2 The favourite services list

You can select a service to watch on a favourite list as well as on the services list.

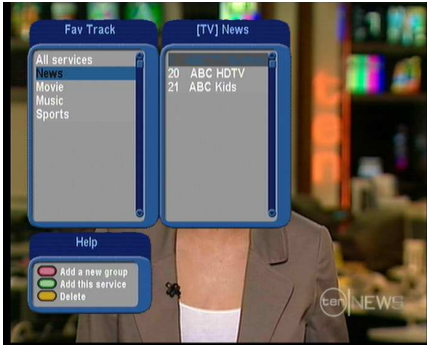

To display the favourite lists, press the **(FAV)** button. You should see a screen like the left figure. As you move the highlight bar up or down on the favourite group list at the left box, favourite services belonging to the highlighted group are listed on the right box.


For how to edit the favourite lists, refer to § 6.1.

To select a favourite service, put the highlight bar on a desired group and press the **▶** button; a highlight bar appears on its favourite services list. Once you select a desired service with the **(OK)** button, it will be presented. Otherwise, to select other group, press the **◀** button.

After you have selected a favourite service, if you then switch to another service using the **▲** or **▼** button, it will be also another favourite service of the selected group. The digital receiver will remind you what group you have selected by displaying its name at the top right of the screen whenever you switch services. If you wish to get out of the current group, select the **All services** group on the favourite group list.

Besides that, you can add or delete a favourite group or service. To add a service you are watching currently into a favourite group, put the highlight bar on a desired group and press the **(F2)** button. To create a new group, press the **(F1)** button; then the on-screen keyboard appears. Enter your desired name and save it. See § 6.2 for how to use the on-screen keyboard. To delete a group or a service, press the **(F3)** button; then you get asked for confirmation. If you select **Yes**, it will be deleted.

 

 
5.2.3 Viewing programme information



Pressing the  button displays the information box, on which you can see all of the following:




- Service number and name
- Signal level and quality
- Programme name
- Programme classification symbol
- Programme summary
- Broadcasting time
- Current time


In addition, you might see the following symbols:

- Subtitle symbol () if subtitle tracks are provided on the current programme.
- Teletext symbol () if teletext pages are provided on the current service.
- Dollar symbol (\$) if the current service is a pay service.
- Multifeed symbol () if the current programme is provided as a multifeed programme. To use this feature, refer to § 5.4.

 

Pressing the  button once more displays detailed information about the current programme. To hide the information box, press the  button.

5.2.4 Selecting audio tracks



Some programmes are provided with audio tracks in one or more languages. Pressing the  button displays available audio tracks. Once you select an audio track, it will be sounded. In addition, you can enjoy audio tracks in four sound modes:




Stereo, Mono, Left or Right. However, if a multifeed programme is provided at the moment, video tracks will be displayed. In this case, you have to press the  button once more to select an audio track.

5.2.5 Selecting subtitle tracks

  Some programmes are provided with subtitle tracks in one or more languages. If the current programme provides subtitle tracks, the subtitle symbol () will be marked on the information box. Pressing the  button displays available subtitle tracks. Once you select a subtitle track, it will be displayed.


5.2.6 Viewing teletext

On some services, such information as weather reports, news or stock quotations is provided by means of teletext. If the current service provides teletext, the teletext symbol () will be displayed on the information box. Press the  button to view teletext pages.

Select a desired page to view by entering its page number with the numeric buttons. You can zoom into a teletext page with the  button, and adjust its transparency level with the  button. To hide the teletext screen, press the  button.

5.3 Viewing electronic programme guide

The Electronic Programme Guide shows the current and scheduled programmes that are or will be available on each service with a short summary for each programme.

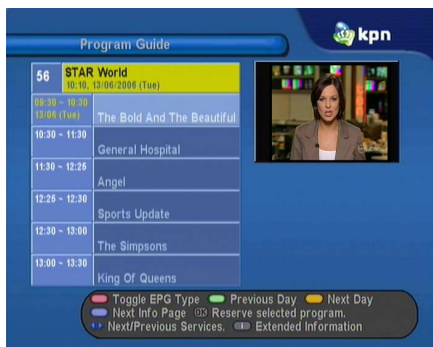

Pressing the **EPG** button displays the electronic programme guide, on which you can see the following:

- Scheduled programmes
- programme summary
- Broadcasting date
- Broadcasting time

To see detailed information of a desired programme, put the highlight bar on your choice with the **▲** or **▼** button and press the **⏏** button. To switch to another service, press the **◀** or **▶** button. You can travel over previous days with the **F2** button, and can travel over next days with the **F3** button.

To see the programme guide for radio broadcasts, press the **📻** button. To switch it back, press the **📺** button again.

Pressing the **F1** button displays the programme guide in the form of a spreadsheet. To switch it back, press the **F1** button again.

You can make a timer event on the electronic programme guide as follows:

1. Select a service you want.
2. Press the **EPG** button to display its programme guide.
3. Select a programme you want with the **OK** button, then **P** is marked up on the entry. At the same time, a timer event with the selected programme will be made in the timer list. Refer the timer list to § 5.5.
4. To remove the marking, press the **OK** button once again.

5.4 Watching multifeed programme

Some broadcasts such as sports channels can provide a variety of perspectives on a programme at a same time. We call it a multifeed programme. You can select and watch a perspective you prefer.

If a multifeed programme is provided on the current service, the multifeed symbol (Ⓜ) will be marked on the information box. Press the (Ⓜ?) button, then available video tracks will be listed. Once you select one, it will be presented. At this time, you have to press the (Ⓜ?) button once more to select audio tracks.

5.5 Making timer events

You can make your desired services to be presented at a specific time. Even if the digital receiver is in standby mode, it will switch into operation mode at the specified time. However, if you press any button on the remote control or on the front panel even just one time, the digital receiver will not switch into standby mode.



To input a timer recording, select the System Setting > Timer Setting menu; then the timer list will be displayed.

To add a new timer event, press the (F1) button, and a box like the left figure appears. Take the following steps:

1. If you want a radio programme, set the Type option to Radio; otherwise, set it to TV.

2. Set the **Service** option to the service which provides the programme you want. Pressing the **OK** button on this option displays a services list, from which you can select your desired service.
3. There are five timer modes:
 - One Time** means literally 'one time'.
 - Every Day** means literally 'every day'.
 - Every Weekend** means 'Saturday and Sunday every week'.
 - Weekly** means 'one day every week'.
 - Every Weekday** means 'from Monday to Friday every week'.

If your favourite programme is broadcasted at weekends and you wish to watch every episode of the programme, set the **Mode** option to **Every Weekend**.
4. Set the **Date** option to a desired date, on which the digital receiver will turn on. The date format is *day/month/year-day of the week*.
Set the **Wakeup Time** option to a desired time, at which the digital receiver will turn on. The time format is *hour:minute*.
5. Set the **Duration** option to a desired time, in which the digital receiver will turn off.
6. To set a timer event with the above settings, select the **OK** option; otherwise, it will not be saved and will not occur.


To delete a timer event, put the highlight bar on the entry you want to remove and press the **F2** button; then you are asked for confirmation. If you select **Yes**, it will be deleted.

Chapter 6

Listing Services

6.1 Editing the favourite list

You can make your own favourite services list. In fact, you can define multiple favourite services lists, each being a 'group' of chosen services.

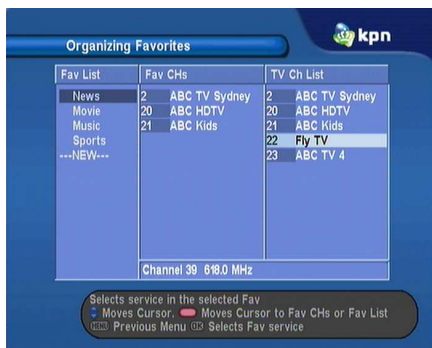

Select the Organizing Favorites menu. You should see a screen like the left figure.

There are three columns:

- Group list (left)
- Favourite list (centre)
- Services list (right)

The services list contains all available services, whereas the favourite list contains only chosen services that have been added to the highlighted group. As you move the highlight bar up or down on the group list, favourite services belonging to the highlighted group get shown in the favourite list.

You can add up to 30 groups. To add a group, select the **NEW** option in the group list; then the on-screen keyboard appears. See § 6.2 for how to use the on-screen keyboard.

To rename a group, put the highlight bar on the group entry you want and press the **F2** button; then the on-screen keyboard appears. See § 6.2 for how to use the on-screen keyboard.


To delete a group, put the highlight bar on the group entry you want and press the **F3** button; then a message box appears asking you for confirmation. If you select **Yes**, it will be deleted.

You can add a favourite service to a group by taking the following steps:

1. Put the highlight bar on a desired group entry in the group list and press the **OK** button to select it. The highlight bar then moves to the services list.
2. To add a service to the selected group, put the highlight bar on a desired service entry and press the **OK** button. The selected service entry gets added to the favourite list. Repeat this step to add more entries.
3. Press the **F1** button and the highlight bar get moved to the favourite list. You can delete a favourite entry with the **OK** button.
4. To select another group, press the **F1** button again. By pressing the **F1** button, the highlight bar gets moved to each column.

Besides, you can rearrange a group's favourites by moving a favourite entry. To move a favourite entry, put the highlight bar on the favourite entry you want and press the **F2** button; then the selected entry becomes dark. Move it to a desired place and press the **OK** button.


To add radio services, press the  button; then radio service entries get listed in the services list. To recall the television


services list after adding radio services, press the  button again.

With your favourite services list, you can select your favourite services more easily. Refer to § 5.2.2 for detailed description.

6.2 How to use on-screen keyboard



You can move the highlight key horizontally with the ◀ and ▶ buttons and vertically with the ▲ and ▼ buttons. Pressing the  button on a key enters its letter in the input line. To type a space, select the Space key. To type lower case letters or numerals, select the Other key.

To delete a letter, put the cursor to the right of the desired letter on the input line and then select the Del key. You must select the Save key to complete naming; otherwise, if you press the  button, it will not be named.

Chapter 7

Firmware Update

To check up whether there is a new variable firmware, select the Installation menu. If there is a new one, the System Software Upgrade menu will become enabled. If you select the System Software Upgrade menu, the digital receiver will ask you whether to start firmware update, displaying the information about the new firmware. If you select **Yes**, it will be started.

Index

- 16:9, [16](#)
- 16:9 Display Format, [16](#)
- 4:3, [16](#)

- A/V Output Setting, [14](#)
- Access Control, [19](#)
- ANT, [8](#)
- ANT, [9](#)
- Antenna Supply 5V, [21](#)
- AUDIO L, [11](#)
- AUDIO L/R, [8](#)
- Audio Language, [14](#)
- AUDIO R, [11](#)
- Auto, [21](#)

- Button, [4](#)

- Center extract, [16](#)
- Change PIN Code, [19](#)
- Channel, [22](#)

- Date, [30](#)
- Daylight Saving Time, [17](#)
- Duration, [30](#)
- DVB, [1](#)

- Electronic Programme Guide, [27](#)
- Every Day, [30](#)
- Every Weekday, [30](#)
- Every Weekend, [30](#)

- Factory Setting, [22](#)

- Info Box Display Time, [19](#)
- Info Box Position, [20](#)
- information box, [26](#)
- Installation, [34](#)

- keyboard, [33](#)

- Language Setting, [13](#)
- Letter Box, [16](#)
- Local Time, [17](#)

- Manual, [22](#)
- Menu Language, [13](#)
- Mode, [17](#), [30](#)
- mono, [17](#)
- multifeed, [29](#)

- NEW, [32](#)
- normal-screen television, [16](#)
- NTSC, [14](#)

- One Time, [30](#)
- Organizing Favorites, [31](#)
- OSD Transparency, [19](#)

- PAL, [14](#)
- Parental Control, [19](#)
- PIN, [19](#)

- Radio, [29](#)
- RF LOOP OUT, [8](#)
- RF LOOP OUT, [9](#)

RS-232, 8

S/PDIF, 8
S/PIDF, 11
Search Mode, 21, 22
Service, 30
Service Search, 21
services list, 23
Sound Mode, 17
Space, 33
specifications, 7, 9
Start Search, 22
stereo, 17
subtitle, 27
Subtitle Language, 14
System Setting, 19, 20
System Software Upgrade, 34

teletext, 27
time format, 17
Time Offset, 17
Time Setting, 17, 19
timer list, 29
Timer Setting, 29
transponder, 1
TV, 8
TV, 10, 29
TV Aspect Ratio, 16
TV Type, 15
Type, 29

VCR, 8
VCR, 11
VCR Scart Type, 15
VIDEO, 8
VIDEO, 10
Video Output, 15

Wakeup Time, 30
Weekly, 30
wide-screen television, 16



Correct disposal of this product

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local government office for details of where and how they can dispose this product for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Topfield continues to improve the digital receiver which this guide explains. So some explanations and illustrations in this guide could be different from the actual digital receiver.