

AKAI
CT-2119
CTV
Test Mode
Simultaneous press + & - on local panel and
then power on with main switch.
Exit:
POWER.

Allstar
3750
CTV
Hotel Mode
OFF:
Select programm 38. Simultaneous press
(3 sec) STORE & CONTROL+ on local keyboard.
ON:
Select programm 38. Simultaneous press
(3 sec) STORE & PROGRAM- on local
keyboard.

AudioTon
CTV 5502
10.3 90° MONO
CTV
Child Lock
Clear
Press UP & DOWN buttons together on tv's
local control and then switch on. You will see
SERVICE MODE. Do not press any button,
just power off the set, then on.
AudioTon
CTV 5502
10.3 90° MONO
CTV
Service Mode
Press UP & DOWN buttons together on tv's
local control and then switch on.

Beko
CTV
Service Mode Simultaneous press P+ & P- on local panel and
then power on with main switch.

Blaupunkt
MM63-13VT
FM240.00
CTV
ATS
Press button P/C on RC and switch on TV with
main switch.
Blaupunkt
MM63-13VT
FM240.00
CTV
Hotel Mode
Cancel
Press button 'i' on RC and switch on TV with
main switch.

Brandt
ICC9
CTV

Service Mode

Switch off TV with RC (st-by). Switch off TV with main switch. Wait a few sec till ST_BY LED switch off. Simultaneous press VT button on RC and switch on TV with main switch. Press VT button again. (WARNING: scart must be free.)

Continental

CT1412B

CTV

Service Mode

Press and hold P+ and P- on local panel, then switch on TV with main switch.

Ferguson

ICC9

CTV

Service Mode

Switch off TV with RC (st-by). Switch off TV with main switch. Wait a few sec till ST_BY LED switch off. Simultaneous press VT button on RC and switch on TV with main switch. Press VT button again. (WARNING: scart must be free.)

Ferguson

TX92

CTV

Hotel Mode

Cancel

Put TV into standby, then turn power off, then turn power on whilst holding standby button on remote and step through menus to vol set and increase level to max.

Finlux

17/21B60

63/71Y2

STEREO PLUS

CTV

Service Mode

MUTE --> OK (M) --> TV

Controls:

cursor buttons.

Store:

OK (M).

Exit:

TV

GoldStar

MC-51B

CTV

Service Mode

Simultaneously press MENU, VOL-, PR- on the local panel.

Graetz

BURGGRAF

STEREO 4876

Digivision

DIGI III 110°

CTV

Service Mode

Turn on 'TV Internal Service Program' switch on the digital modul (SE on display). On RC: 1=U1 V SHIFT, 2=U2 V LIN DN, 3=U3 V LIN, 4=H1

H SHIFT, 5=H2 H AMP, 6=H3 EW AMP, 7=
C, 8=C1, 9=C2, 0=H4 EW TRAPEZ...
TV=MEM0, VOL+/-=ADJUST.

Grundig
CUC1800
CTV
Child Lock

Cancel
Press VOL+, VOL-, PR-, PR+, OK.

Grundig
CUC1800
CTV
EPROM

Version Nr.

Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.

Grundig
CUC1800
CTV

Service Mode

Menu guide: 'i', 'Special functions', 'Service',
'Code 8500'.

Grundig
CUC1805
CTV

ATS Reset

Press and hold button VOL+ on the TV and
switch the mains button ON. ATS bit is set.

Grundig
CUC1805
CTV

Child Lock
Cancel

Press VOL+, VOL-, PR-, PR+, OK.

Grundig
CUC1805
CTV

Default
Values

Entering

Depress and hold the button 'P-' on the RC while
switching on with the mains button. (This is
only possible once on replacement of the NVM
or uP).

Grundig
CUC1805
CTV

EPROM

Version Nr.

Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.

Grundig
CUC1805
CTV

Service Mode

Press 'i'. Dialog Center --> Service --> 'for
authorized dealer' --> Code Number 8500.

Grundig
CUC1805

CTV
Volume
Offset
Cancel
Press and hold the 'AUX' button on the RC while
switching the TV on with the mains button.
Grundig
CUC1806
CTV
Child Lock
Cancel
General reset with number 7038.
Grundig
CUC1806
CTV
Demo Mode
Demo on: Depress and hold button 'L+' on the
TV and switch the TV on with the mains button.
Press the 'P+' button within a time of 10s.
Demo off: ATS Reset (by depressing the 'L+'
button on the TV while switching on with the
mains button).
Grundig
CUC1806
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1806
CTV
Factory
Default
Values
Resetting
Buttons 'AUX', 'OK'.
Grundig
CUC1806
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC1821
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1821
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1821
CTV
Service Mode

Menu guide: 'i', 'Special functions', 'Service',
'Code 8500'.
Grundig
CUC1822
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1822
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1822
CTV
Service Mode
Menu guide: 'i', 'Special functions', 'Service',
'Code 8500'.
Grundig
CUC1824
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1824
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1824
CTV
Service Mode
Menu guide: 'i', 'Special functions', 'Service',
'Code 8500'.
Grundig
CUC1825
CTV
ATS Reset
Press and hold button VOL+ on the TV and
switch the mains button ON. ATS bit is set.
Grundig
CUC1825
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1825
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.

(19798-300.01) indicates the EPROM version.
Grundig
CUC1825
CTV
ROM Data
Loading
Press and hold the P- buton on the TV and
switch on with the mains button. Loading
the Average Values / Emergency Data Set
(ROM Dana). This is only possible once on
replacement of the NVM or uP.
Grundig
CUC1825
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC1825
CTV
Volume
Offset
Cancel
Press and hold the 'AUX' button on the RC while
switching the TV on with the mains button.
Grundig
CUC1826
CTV
ATS Reset
Press and hold button VOL+ on the TV and
switch the mains button ON. ATS bit is set.
Grundig
CUC1826
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1826
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1826
CTV
ROM Data
Loading
Press and hold the P- buton on the TV and
switch on with the mains button. Loading
the Average Values / Emergency Data Set
(ROM Dana). This is only possible once on
replacement of the NVM or uP.
Grundig
CUC1826
CTV
Service Mode
Press 'i'. Dialog Center --> Service --> 'for
authorized dealer' --> Code Number 8500.
Grundig
CUC1826

CTV
Volume
Offset
Cancel
Press and hold the 'AUX' button on the RC while
switching the TV on with the mains button.
Grundig
CUC1827
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1827
CTV
Default
Values
Entering
Depress and hold the button 'P-' on the RC while
switching on with the mains button. (This is
only possible once on replacement of the NVM
or uP).
Grundig
CUC1827
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1827
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC1827
CTV
Volume
Offset
Cancel
Press and hold the 'AUX' button on the RC while
switching the TV on with the mains button.
Grundig
CUC1828
CTV
Child Lock
Cancel
General reset with number 7038.
Grundig
CUC1828
CTV
Demo Mode
Demo on: Depress and hold button 'L+' on the
TV and switch the TV on with the mains button.
Press the 'P+' button within a time of 10s.
Demo off: ATS Reset (by depressing the 'L+'
button on the TV while switching on with the
mains button).
Grundig
CUC1828
CTV

EPR0M
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPR0M version.
Grundig
CUC1828
CTV
Factory
Default
Values
Resetting
Buttons 'AUX', 'OK'.
Grundig
CUC1828
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC1829
CTV
Child Lock
Cancel
General reset with number 7038.
Grundig
CUC1829
CTV
Demo Mode
Demo on: Depress and hold button 'L+' on the
TV and switch the TV on with the mains button.
Press the 'P+' button within a time of 10s.
Demo off: ATS Reset (by depressing the 'L+'
button on the TV while switching on with the
mains button).
Grundig
CUC1829
CTV
EPR0M
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPR0M version.
Grundig
CUC1829
CTV
Factory
Default
Values
Resetting
Buttons 'AUX', 'OK'.
Grundig
CUC1829
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC1830
CTV
Child Lock
Cancel

General reset with number 7038.
Grundig
CUC1830
CTV
Demo Mode
Demo on: Depress and hold button 'L+' on the
TV and switch the TV on with the mains button.
Press the 'P+' button within a time of 10s.
Demo off: ATS Reset (by depressing the 'L+'
button on the TV while switching on with the
mains button).
Grundig
CUC1830
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1830
CTV
Factory
Default
Values
Resetting
Buttons 'AUX', 'OK'.
Grundig
CUC1830
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC1836
CTV
Child Lock
Cancel
General reset with number 7038.
Grundig
CUC1836
CTV
Demo Mode
Demo on: Depress and hold button 'L+' on the
TV and switch the TV on with the mains button.
Press the 'P+' button within a time of 10s.
Demo off: ATS Reset (by depressing the 'L+'
button on the TV while switching on with the
mains button).
Grundig
CUC1836
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1836
CTV
Factory
Default

Values
Resetting
Buttons 'AUX', 'OK'.
Grundig
CUC1836
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC1842
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1842
CTV
Demo Mode
Demo on: Depress and hold button 'L+' on the
TV and switch the TV on with the mains button.
Press the 'P+' button within a time of 10s.
Demo off: ATS Reset (by depressing the 'L+'
button on the TV while switching on with the
mains button).
Grundig
CUC1842
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1842
CTV
Factory
Default
Values
Resetting
Buttons 'AUX', 'OK'.
Grundig
CUC1842
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC1851
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1851
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig

CUC1851
CTV
Service Mode
Menu guide: 'i', 'Special functions', 'Service',
'Code 8500'.
Grundig
CUC1852
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1852
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1852
CTV
Service Mode
Menu guide: 'i', 'Special functions', 'Service',
'Code 8500'.
Grundig
CUC1881
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1881
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1881
CTV
Service Mode
Menu guide: 'i', 'Special functions', 'Service',
'Code 8500'.
Grundig
CUC1892
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1892
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1892

CTV
Service Mode
Menu guide: 'i', 'Special functions', 'Service',
'Code 8500'.
Grundig
CUC1894
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1894
CTV
Demo Mode
Demo on: Depress and hold button 'L+' on the
TV and switch the TV on with the mains button.
Press the 'P+' button within a time of 10s.
Demo off: ATS Reset (by depressing the 'L+'
button on the TV while switching on with the
mains button).
Grundig
CUC1894
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1894
CTV
Factory
Default
Values
Resetting
Buttons 'AUX', 'OK'.
Grundig
CUC1894
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC1929
CTV
Child Lock
Cancel
General reset with number 7038.
Grundig
CUC1929
CTV
Demo Mode
Demo on: Depress and hold button 'L+' on the
TV and switch the TV on with the mains button.
Press the 'P+' button within a time of 10s.
Demo off: ATS Reset (by depressing the 'L+'
button on the TV while switching on with the
mains button).
Grundig
CUC1929
CTV
EPROM
Version Nr.

Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1929
CTV
Factory
Default
Values
Resetting
Buttons 'AUX', 'OK'.
Grundig
CUC1929
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC1952
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1952
CTV
Demo Mode
Demo on: Depress and hold button 'L+' on the
TV and switch the TV on with the mains button.
Press the 'P+' button within a time of 10s.
Demo off: ATS Reset (by depressing the 'L+'
button on the TV while switching on with the
mains button).
Grundig
CUC1952
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1952
CTV
Factory
Default
Values
Resetting
Buttons 'AUX', 'OK'.
Grundig
CUC1952
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC1962
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig

CUC1962
CTV
Demo Mode
Demo on: Depress and hold button 'L+' on the TV and switch the TV on with the mains button. Press the 'P+' button within a time of 10s.
Demo off: ATS Reset (by depressing the 'L+' button on the TV while switching on with the mains button).
Grundig
CUC1962
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' --> OK. The version number is shown by pressing the 'AUX' button. The index 01 of the part nr. (19798-300.01) indicates the EPROM version.
Grundig
CUC1962
CTV
Factory
Default
Values
Resetting
Buttons 'AUX', 'OK'.
Grundig
CUC1962
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only for retailer', 'Code 8500'.
Grundig
CUC1983
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1983
CTV
Demo Mode
Demo on: Depress and hold button 'L+' on the TV and switch the TV on with the mains button. Press the 'P+' button within a time of 10s.
Demo off: ATS Reset (by depressing the 'L+' button on the TV while switching on with the mains button).
Grundig
CUC1983
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' --> OK. The version number is shown by pressing the 'AUX' button. The index 01 of the part nr. (19798-300.01) indicates the EPROM version.
Grundig
CUC1983
CTV
Factory
Default
Values
Resetting

Buttons 'AUX', 'OK'.
Grundig
CUC1983
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC1984
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC1984
CTV
Demo Mode
Demo on: Depress and hold button 'L+' on the
TV and switch the TV on with the mains button.
Press the 'P+' button within a time of 10s.
Demo off: ATS Reset (by depressing the 'L+'
button on the TV while switching on with the
mains button).
Grundig
CUC1984
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC1984
CTV
Factory
Default
Values
Resetting
Buttons 'AUX', 'OK'.
Grundig
CUC1984
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC2020
CTV
Band Limits
Cancelling
Depress and hold button 'i' on the RC while
switching on with the mains button. Move the
bar to 'AGC' in the Service Menu and operate
the buttons 'AUX', 'OK' in this order.
Grundig
CUC2020
CTV
Child Lock
Cancel
General reset with number 7038.
Grundig
CUC2020
CTV

Default

Values

Entering

Depress and hold the button 'P-' on the RC while switching on with the mains button.

(Additionally on replacement of the memory, the Hotel Mode and the band limits are to be deactivated and the AGC and AFC are to be readjusted).

Grundig

CUC2020

CTV

Hotel Mode

Depress and hold button 'i' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.

Grundig

CUC2020

CTV

OSD

position

Depress and hold the 'i' button on the RC while switching on with the mains button. Set the OSD position in the menu and store with 'OK'.

Grundig

CUC2020

CTV

Service Mode

Menu guide: 'i', 'Dialog Center', 'Service', 'Only for retailer', 'Code 8500'.

Grundig

CUC2030

CTV

Band Limits

Cancelling

Depress and hold button 'i' on the RC while switching on with the mains button. Move the bar to 'AGC' in the Service Menu and operate the buttons 'AUX', 'OK' in this order.

Grundig

CUC2030

CTV

Child Lock

Cancel

General reset with number 7038.

Grundig

CUC2030

CTV

Default

Values

Entering

Depress and hold the button 'P-' on the RC while switching on with the mains button.

(Additionally on replacement of the memory, the Hotel Mode and the band limits are to be deactivated and the AGC and AFC are to be readjusted).

Grundig

CUC2030

CTV

Hotel Mode

Depress and hold button 'i' on the RC while

switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.

Grundig

CUC2030

CTV

OSD

position

Depress and hold the 'i' button on the RC while switching on with the mains button. Set the OSD position in the menu and store with 'OK'.

Grundig

CUC2030

CTV

Service Mode

Menu guide: 'i', 'Dialog Center', 'Service', 'Only for retailer', 'Code 8500'.

Grundig

CUC2031

CTV

Band Limits

Cancelling

Depress and hold button 'i' on the RC while switching on with the mains button. Move the bar to 'AGC' in the Service Menu and operate the buttons 'AUX', 'OK' in this order.

Grundig

CUC2031

CTV

Child Lock

Cancel

General reset with number 7038.

Grundig

CUC2031

CTV

Default

Values

Entering

Depress and hold the button 'P-' on the RC while switching on with the mains button.

(Additionally on replacement of the memory, the Hotel Mode and the band limits are to be deactivated and the AGC and AFC are to be readjusted).

Grundig

CUC2031

CTV

Hotel Mode

Depress and hold button 'i' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.

Grundig

CUC2031

CTV

OSD

position

Depress and hold the 'i' button on the RC while switching on with the mains button. Set the OSD position in the menu and store with 'OK'.

Grundig

CUC2031

CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC2050
CTV
Band Limits
Cancelling
Depress and hold button 'i' on the RC while
switching on with the mains button. Move the
bar to 'AGC' in the Service Menu and operate
the buttons 'AUX', 'OK' in this order.
Grundig
CUC2050
CTV
Child Lock
Cancel
General reset with number 7038.
Grundig
CUC2050
CTV
Default
Values
Entering
Depress and hold the button 'P-' on the RC while
switching on with the mains button.
(Additionally on replacement of the memory, the
Hotel Mode and the band limits are to be
deactivated and the AGC and AFC are to be
readjusted).
Grundig
CUC2050
CTV
Hotel Mode
Depress and hold button 'i' on the RC while
switching on with the mains button. In the menu
line 'HOTEL' select 'ON' and leave the menu with
button 'i'. Cancelling the Hotel Mode: Repeat
the steps above but change 'HOTEL' to 'OFF'.
Grundig
CUC2050
CTV
OSD
position
Depress and hold the 'i' button on the RC while
switching on with the mains button. Set the
OSD position in the menu and store with 'OK'.
Grundig
CUC2050
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only
for retailer', 'Code 8500'.
Grundig
CUC2051
CTV
Band Limits
Cancelling
Depress and hold button 'i' on the RC while
switching on with the mains button. Move the
bar to 'AGC' in the Service Menu and operate
the buttons 'AUX', 'OK' in this order.
Grundig

CUC2051
CTV
Child Lock
Cancel
General reset with number 7038.
Grundig
CUC2051
CTV
Default
Values
Entering
Depress and hold the button 'P-' on the RC while switching on with the mains button.
(Additionally on replacement of the memory, the Hotel Mode and the band limits are to be deactivated and the AGC and AFC are to be readjusted).
Grundig
CUC2051
CTV
Hotel Mode
Depress and hold button 'i' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.
Grundig
CUC2051
CTV
OSD
position
Depress and hold the 'i' button on the RC while switching on with the mains button. Set the OSD position in the menu and store with 'OK'.
Grundig
CUC2051
CTV
Service Mode
Menu guide: 'i', 'Dialog Center', 'Service', 'Only for retailer', 'Code 8500'.
Grundig
CUC6300
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC6300
CTV
Default
Values
Entering
Depress and hold the 'i' button on the RC while switching on with the mains button. Menu guide: 'Horizontal Position', 'OK', 'OK', press 'i' to leave the menu.
Grundig
CUC6300
CTV
Hotel Mode
Depress and hold button 'i' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat

the steps above but change 'HOTEL' to 'OFF'.
Grundig
CUC6300
CTV
OSD
position
Depress and hold the 'i' button on the RC while
switching on with the mains button. Set the
OSD position in the menu and store with 'OK'.
Grundig
CUC6301
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC6301
CTV
Default
Values
Entering
Depress and hold the 'i' button on the RC while
switching on with the mains button. Menu guide:
'Horizontal Position', 'OK', 'OK', press 'i' to leave
the menu.
Grundig
CUC6301
CTV
Hotel Mode
Depress and hold button 'i' on the RC while
switching on with the mains button. In the menu
line 'HOTEL' select 'ON' and leave the menu with
button 'i'. Cancelling the Hotel Mode: Repeat
the steps above but change 'HOTEL' to 'OFF'.
Grundig
CUC6301
CTV
OSD
position
Depress and hold the 'i' button on the RC while
switching on with the mains button. Set the
OSD position in the menu and store with 'OK'.
Grundig
CUC6310
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC6310
CTV
Default
Values
Entering
Depress and hold the 'i' button on the RC while
switching on with the mains button. Menu guide:
'Horizontal Position', 'OK', 'OK', press 'i' to leave
the menu.
Grundig
CUC6310
CTV
Hotel Mode
Depress and hold button 'i' on the RC while
switching on with the mains button. In the menu

line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.
Grundig
CUC6310
CTV
OSD
position
Depress and hold the 'i' button on the RC while switching on with the mains button. Set the OSD position in the menu and store with 'OK'.
Grundig
CUC6330
CTV
Hotel Mode
Depress and hold button 'i' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.
Grundig
CUC6331
CTV
Hotel Mode
Depress and hold button 'i' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.
Grundig
CUC6360
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC6360
CTV
Default
Values
Entering
Depress and hold the button 'P-' on the RC while switching on with the mains button. (This is only possible once on replacement of the NVM or uP).
Grundig
CUC6360
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' --> OK. The version number is shown by pressing the 'AUX' button. The index 01 of the part nr. (19798-300.01) indicates the EPROM version.
Grundig
CUC6360
CTV
Hotel Mode
Depress and hold button 'P/C' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.
Grundig

CUC6360
CTV
Service Mode
Depress and hold the 'P/C' button on the RC while switching on with the mains button.
Grundig
CUC6360
CTV
Volume
Offset
Cancel
Press and hold the 'AUX' button on the RC while switching the TV on with the mains button.
Grundig
CUC6365
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC6365
CTV
Default
Values
Entering
Depress and hold the button 'P-' on the RC while switching on with the mains button. (This is only possible once on replacement of the NVM or uP).
Grundig
CUC6365
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' --> OK. The version number is shown by pressing the 'AUX' button. The index 01 of the part nr. (19798-300.01) indicates the EPROM version.
Grundig
CUC6365
CTV
Hotel Mode
Depress and hold button 'P/C' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.
Grundig
CUC6365
CTV
Service Mode
Depress and hold the 'P/C' button on the RC while switching on with the mains button.
Grundig
CUC6365
CTV
Volume
Offset
Cancel
Press and hold the 'AUX' button on the RC while switching the TV on with the mains button.
Grundig
CUC6380
CTV

Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC6380
CTV
Default
Values
Entering
Depress and hold the button 'P-' on the RC while
switching on with the mains button. (This is
only possible once on replacement of the NVM
or uP).
Grundig
CUC6380
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
CUC6380
CTV
Hotel Mode
Depress and hold button 'P/C' on the RC while
switching on with the mains button. In the menu
line 'HOTEL' select 'ON' and leave the menu with
button 'i'. Cancelling the Hotel Mode: Repeat
the steps above but change 'HOTEL' to 'OFF'.
Grundig
CUC6380
CTV
Service Mode
Depress and hold the 'P/C' button on the RC
while switching on with the mains button.
Grundig
CUC6380
CTV
Volume
Offset
Cancel
Press and hold the 'AUX' button on the RC while
switching the TV on with the mains button.
Grundig
CUC6450
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC6450
CTV
Default
Values
Entering
Depress and hold the button 'P-' on the RC while
switching on with the mains button. (This is
only possible once on replacement of the NVM
or uP).
Grundig
CUC6450
CTV

EPR0M

Version Nr.

Press button 'i' to call up the 'Dialog Center' -->

OK. The version number is shown by pressing the 'AUX' button. The index 01 of the part nr.

(19798-300.01) indicates the EPR0M version.

Grundig

CUC6450

CTV

Hotel Mode

Depress and hold button 'P/C' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.

Grundig

CUC6450

CTV

Service Mode

Depress and hold the 'P/C' button on the RC while switching on with the mains button.

Grundig

CUC6450

CTV

Volume

Offset

Cancel

Press and hold the 'AUX' button on the RC while switching the TV on with the mains button.

Grundig

CUC6460

CTV

Child Lock

Cancel

Press VOL+, VOL-, PR-, PR+, OK.

Grundig

CUC6460

CTV

Default

Values

Entering

Depress and hold the button 'P-' on the RC while switching on with the mains button. (This is only possible once on replacement of the NVM or uP).

Grundig

CUC6460

CTV

EPR0M

Version Nr.

Press button 'i' to call up the 'Dialog Center' -->

OK. The version number is shown by pressing the 'AUX' button. The index 01 of the part nr.

(19798-300.01) indicates the EPR0M version.

Grundig

CUC6460

CTV

Hotel Mode

Depress and hold button 'P/C' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.

Grundig

CUC6460
CTV
Service Mode
Depress and hold the 'P/C' button on the RC while switching on with the mains button.
Grundig
CUC6460
CTV
Volume
Offset
Cancel
Press and hold the 'AUX' button on the RC while switching the TV on with the mains button.
Grundig
CUC6469
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC6469
CTV
Default
Values
Entering
Depress and hold the button 'P-' on the RC while switching on with the mains button. (This is only possible once on replacement of the NVM or uP).
Grundig
CUC6469
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' --> OK. The version number is shown by pressing the 'AUX' button. The index 01 of the part nr. (19798-300.01) indicates the EPROM version.
Grundig
CUC6469
CTV
Hotel Mode
Depress and hold button 'P/C' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.
Grundig
CUC6469
CTV
Service Mode
Depress and hold the 'P/C' button on the RC while switching on with the mains button.
Grundig
CUC6469
CTV
Volume
Offset
Cancel
Press and hold the 'AUX' button on the RC while switching the TV on with the mains button.
Grundig
CUC7300
CTV

Default

Values

Entering

Depress and hold down button 'P-' on the RC and switch the TV on from Standby with the local 'P+' button. (This is only possible once on replacement of the NVM or uP).

Grundig

CUC7300

CTV

EPR0M

Version Nr.

Press button 'i' to call up the 'Dialog Center' -->

OK. The version number is shown by pressing the 'AUX' button. The index 01 of the part nr.

(19798-300.01) indicates the EPROM version.

Grundig

CUC7300

CTV

Hotel Mode

Depress and hold button 'P/C' while switching on from Standby with button 'P+' on the TV. Set the Hotel Mode to 'OFF' with 'OK'.

Grundig

CUC7300

CTV

Volume

Offset

Cancel

Depress and hold the 'AUX' button on the RC while switching the TV on from Standby with the local 'P+' button.

Grundig

CUC7301

CTV

Hotel Mode

Depress and hold button 'i' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.

Grundig

CUC7302

CTV

Default

Values

Entering

Depress and hold down button 'P-' on the RC and switch the TV on from Standby with the local 'P+' button. (This is only possible once on replacement of the NVM or uP).

Grundig

CUC7302

CTV

EPR0M

Version Nr.

Press button 'i' to call up the 'Dialog Center' -->

OK. The version number is shown by pressing the 'AUX' button. The index 01 of the part nr.

(19798-300.01) indicates the EPROM version.

Grundig

CUC7302

CTV

Hotel Mode

Depress and hold button 'P/C' while switching on from Standby with button 'P+' on the TV. Set the Hotel Mode to 'OFF' with 'OK'.

Grundig

CUC7302

CTV

Volume

Offset

Cancel

Depress and hold the 'AUX' button on the RC while switching the TV on from Standby with the local 'P+' button.

Grundig

CUC7303

CTV

Band Limits

Cancelling

Depress and hold button 'i' on the RC while switching on with the mains button. Move the bar to 'AGC' in the Service Menu and operate the buttons 'AUX', 'OK' in this order.

Grundig

CUC7303

CTV

Hotel Mode

Depress and hold button 'i' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.

Grundig

CUC7303

CTV

OSD

position

Depress and hold the 'i' button on the RC while switching on with the mains button. Set the OSD position in the menu and store with 'OK'.

Grundig

CUC7305

CTV

Band Limits

Cancelling

Depress and hold button 'i' on the RC while switching on with the mains button. Move the bar to 'AGC' in the Service Menu and operate the buttons 'AUX', 'OK' in this order.

Grundig

CUC7305

CTV

Hotel Mode

Depress and hold button 'i' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.

Grundig

CUC7305

CTV

OSD

position

Depress and hold the 'i' button on the RC while switching on with the mains button. Set the OSD position in the menu and store with 'OK'.

Grundig
CUC7350
CTV
Hotel Mode
Depress and hold button 'i' on the RC while switching on with the mains button. In the menu line 'HOTEL' select 'ON' and leave the menu with button 'i'. Cancelling the Hotel Mode: Repeat the steps above but change 'HOTEL' to 'OFF'.
Grundig
CUC7851
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC7851
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' --> OK. The version number is shown by pressing the 'AUX' button. The index 01 of the part nr. (19798-300.01) indicates the EPROM version.
Grundig
CUC7880
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC7880
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' --> OK. The version number is shown by pressing the 'AUX' button. The index 01 of the part nr. (19798-300.01) indicates the EPROM version.
Grundig
CUC7890
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC7890
CTV
EPROM
Version Nr.
Press button 'i' to call up the 'Dialog Center' --> OK. The version number is shown by pressing the 'AUX' button. The index 01 of the part nr. (19798-300.01) indicates the EPROM version.
Grundig
CUC7951
CTV
Child Lock
Cancel
Press VOL+, VOL-, PR-, PR+, OK.
Grundig
CUC7951
CTV
EPROM

Version Nr.
Press button 'i' to call up the 'Dialog Center' -->
OK. The version number is shown by pressing
the 'AUX' button. The index 01 of the part nr.
(19798-300.01) indicates the EPROM version.
Grundig
GV200 to GV250
VCR
Electronic
Lock Cancel
Press the 'CODE' button on the remote control
handset. Enter the numbers 4 9 3 4 on the
remote control handset in this order and confirm
with the 'OK' button. Press the STOP button.
Grundig
GV201-1
VCR
Electronic
Lock Cancel
Press the 'STANDBY' button on the remote
control handset until 'FREE' is indicated on the
display of the video recorder.
Grundig
GV25SV/5
GV45SV/5
VCR
Electronic
Lock Cancel
Press the 'STAND-BY' button on the RC until
'FREE' appears on the display of the recorder.
Grundig
GV280PC
GV280S
VCR
Electronic
Lock Cancel
Enter the numbers 4 9 3 4 on the remote control
handset in this order and confirm with the
button 'OK'. Press the STOP button.
Grundig
GV400
GV400GB
GV4000ST
VCR
Electronic
Lock Cancel
With the video recorder switched off (Stand-by)
press the Stop button on the RC until 'UNLO'
appears on the display of the recorder.
Grundig
GV4000VPS
GV4001
VCR
Electronic
Lock Cancel
With the video recorder switched off (Stand-by)
press the Stop button on the RC until 'UNLO'
appears on the display of the recorder.
Grundig
GV4003VPS
VCR
Electronic
Lock Cancel
With the video recorder switched off (Stand-by)

press the Stop button on the RC until 'FREE' appears on the display of the recorder.

Grundig

GV400VPS

GV401VPT

VCR

Electronic

Lock Cancel

Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.

Grundig

GV4010SV-VPT

GV4092..

GV4192VPS

GV4200SV-VPT

GV4400HiFi

GV4592..

VCR

Electronic

Lock Cancel

Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.

Grundig

GV402

VCR

Electronic

Lock Cancel

With the video recorder switched off (Stand-by) press the Stop button on the RC until 'UNLO' appears on the display of the recorder.

Grundig

GV404SV

GV405EURO

GV406EURO

VCR

Electronic

Lock Cancel

Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.

Grundig

GV410

VCR

Electronic

Lock Cancel

With the video recorder switched off (Stand-by) press the Stop button on the RC until 'UNLO' appears on the display of the recorder.

Grundig

GV410VPS

GV411

VCR

Electronic

Lock Cancel

Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.

Grundig

GV411-1

VCR

Electronic

Lock Cancel

Press and hold the 'STAND-BY' button on the RC (ca. 5s), until 'UNLOCKED' appears on the display of the recorder.

Grundig

GV4110ST

GV412

VCR

Electronic

Lock Cancel

With the video recorder switched off (Stand-by) press the Stop button on the RC until 'UNLO' appears on the display of the recorder.

Grundig

GV414SV

GV415EURO

GV416EURO

GV420VPT

VCR

Electronic

Lock Cancel

Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.

Grundig

GV430

GV430GB

VCR

Electronic

Lock Cancel

With the video recorder switched off (Stand-by) press the Stop button on the RC until 'UNLO' appears on the display of the recorder.

Grundig

GV430VPS

GV434SV

GV435EURO

VCR

Electronic

Lock Cancel

Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.

Grundig

GV440..

GV450..

GV460..

GV464..
GV465EURO
GV470..
VCR
Electronic
Lock Cancel
Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.
Grundig
GV500..
GV501VPT
GV505EURO
GV506EURO
VCR
Electronic
Lock Cancel
Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.
Grundig
GV5000
GV5000GB
GV5000VPS
GV5000VPS/5
VCR
Electronic
Lock Cancel
Press the 'STAND-BY' button on the RC until 'FREE' appears on the display of the recorder.
Grundig
GV5002VPS
GV5003
GV5008
GV5050
VCR
Electronic
Lock Cancel
Press the 'STAND-BY' button on the RC until 'FREE' appears on the display of the recorder.
Grundig
GV5050SV
GV5050SV/1
GV5055EURO
GV5095..
VCR
Electronic
Lock Cancel
Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.
Grundig
GV510SV
GV511
GV515EURO

GV530..
GV535EURO
GV540..
GV545EURO
GV560..
GV565EURO
VCR
Electronic
Lock Cancel
Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.
Grundig
GV5300..
VCR
Electronic
Lock Cancel
Press the 'STAND-BY' button on the RC until 'FREE' appears on the display of the recorder.
Grundig
GV5395..
GV5400..
GV5695HiFi
VCR
Electronic
Lock Cancel
Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.
Grundig
GV600
GV630
GV640HiFi
GV640NIC
GV645EURO
GV650HiFi
GV660HiFi
GV660NIC
GV665EURO
GV670SHiFi
GV670SNIC
GV690SHiFi
GV690SNIC
VCR
Electronic
Lock Cancel
Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.
Grundig
GV6096SV
GV6096SV/1
GV6396SV
GV6596HiFi
GV6596NIC

VCR
Electronic
Lock Cancel
Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.
Grundig
GV740..
GV745EURO
VCR
Electronic
Lock Cancel
Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.
Grundig
GV7400..
VCR
Electronic
Lock Cancel
Press and hold down the buttons 'STAND-BY' and 'SELECT' simultaneously on the RC until key symbol disappears from the display of the recorder.
Grundig
GV7497NIC
VCR
Electronic
Lock Cancel
Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.
Grundig
GV8..
KV8..
SE8..
VCR
Electronic
Lock Cancel
Press and hold down the buttons 'STAND-BY' and 'SELECT' simultaneously on the RC until key symbol disappears from the display of the recorder.
Grundig
GVP600ICNEURO
VCR
Electronic
Lock Cancel
Press the 'STAND-BY' button on the RC until 'FREE' appears on the display of the recorder.
Grundig
KV5001VPS/5
KV5301VPS/5
VCR
Electronic

Lock Cancel

Press the 'STAND-BY' button on the RC until 'FREE' appears on the display of the recorder.

Grundig

MV4005

MV4105

VCR

Electronic

Lock Cancel

With the video recorder switched off (Stand-by) press the Stop button on the RC until 'UNLO' appears on the display of the recorder.

Grundig

SE4100VPS

SE4104SV

SE4120SV

VCR

Electronic

Lock Cancel

Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.

Grundig

SE5102SV

SE5104SV

SE5106HiFi

VCR

Electronic

Lock Cancel

Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.

Grundig

SE6102SV

SE6104SV

SE6106HiFi

VCR

Electronic

Lock Cancel

Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.

Grundig

SE7104SV

VCR

Electronic

Lock Cancel

Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.

Grundig

SE7105

VCR

Electronic

Lock Cancel

Press and hold down the buttons 'STAND-BY' and 'SELECT' simultaneously on the RC until key symbol disappears from the display of the recorder.

Grundig

SE7106HiFi

VCR

Electronic

Lock Cancel

Press the 'CODE' button on the remote control handset. Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the 'OK' button. Press the 'STAND-BY' button or disconnect the recorder from the mains.

Grundig

TVR3700

VCR

Electronic

Lock Cancel

Press and hold STOP button on the RC and depress the PLAY button on the video recorder. Press the 'STAND-BY' button or disconnect the video recorder from the mains.

Grundig

TVR3701

TVR3705

TVR3710

TVR3720

TVR3730

VCR

Electronic

Lock Cancel

Press the cursor buttons on the RC in this order: VOL+, VOL-, PR+, PR-.

Grundig

TVR4500

TVR4510

VCR

Electronic

Lock Cancel

Interconnect the service test points on the keyboard control unit for a short period. Switch the unit off and disconnect it from mains.

Grundig

TVR5100

TVR5130

TVR5500

VCR

Electronic

Lock Cancel

Press the cursor buttons on the RC in this order: VOL+, VOL-, PR+, PR-.

Grundig

TVR5510

VCR

Electronic

Lock Cancel

Interconnect the service test points on the keyboard control unit for a short period.

Switch the unit off and disconnect it from mains.

Grundig

TVR5530

VCR

Electronic

Lock Cancel

Press the cursor buttons on the RC in this order: VOL+, VOL-, PR+, PR-.

Grundig

VS200 to VS267

VCR

Electronic

Lock Cancel

Switch the video recorder off. Remove the top of the cabinet. Unplug the B1 connector on the sequence control. Switch the recorder on. After approx. 2 seconds, re-insert the B1 connector. Switch the video recorder off. Re-fit the top of the cabinet.

Grundig

VS300 to VS460

VCR

Electronic

Lock Cancel

Switch the video recorder off. Remove the top of the cabinet. Switch the recorder on. Interconnect the service test points on the keyboard control unit for a short period. Press the STOP button. Switch the video recorder off. Re-fit the top of cabinet.

Grundig

VS500

VCR

Electronic

Lock Cancel

Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the button '0000'. Press the STOP button.

Grundig

VS505 to VS510

VCR

Electronic

Lock Cancel

Enter the numbers 4 9 3 4 on the remote control handset in this order and confirm with the button 'OK'. Press the STOP button.

Grundig

VS520 to VS550

VCR

Electronic

Lock Cancel

Switch the video recorder off. Remove the top of the cabinet. Switch the recorder on. Interconnect the service test points on the keyboard control unit for a short period. Press the STOP button. Switch the video recorder off. Re-fit the top of cabinet.

Grundig

VS600 to VS960

VCR

Electronic

Lock Cancel

Enter the numbers 4 9 3 4 on the remote control

handset in this order and confirm with the button 'OK'. Press the STOP button.

ITT
STEREO PLUS
CTV
Service Mode
MUTE --> OK (M) --> TV
Controls:
cursor buttons.
Store:
OK (M).
Exit:
TV

LG
MC64
CTV
Service Mode
Simultaneous press OK on RC & local panel.
LG
MC84
CTV
Service Mode
Simultaneous press OK on RC & local panel.

Loewe.
Art.-Nr. 64420
66426 66449
66450 66460
66480 66490
C9000
CTV
TV Service
Mode
Simultaneous press CM on the RC & "Service"
key on the control panel.
Select:
MEM IN/OUT.
Adjust:
VOL +/-.
Store:
X.
Exit:
TV.

Loewe.
Art.-Nr. 64420
66426 66449
66450 66460
66480 66490
C9000
CTV
VT Service
Mode
Simultaneous press VT on the RC & "Service"
key on the control panel.
Select:
MEM IN/OUT.
Adjust:
VOL +/-.
Store:
X.
Exit:
TV.

Loewe.
C9003
CTV
Service Mode
On the local control press function key five times
(indication "Service" will appear), afterwards
within a sec. press key "MEN" on the remote
control.

Store:
X.

Exit:
TV.

Loewe.
Q2200
CTV

Service Mode
Go to 'SERVICE' in menu and then quick press
'MENU' on the RC.

Select:
yellow cursors.

Adjust:
+/-.

Store:
'X'.

Exit:
'TV'.

Luxor
5585-21A1
7057-27
63/7954
STEREO PLUS
CTV
Service Mode
MUTE --> OK (M) --> TV
Controls:
cursor buttons.
Store:
OK (M).
Exit:
TV

Mitsubishi
CT21M5E
CTV
Service Mode
Press S701 (on board) and button 9 (in 5s).
Store:
'0'.
Exit:
stand-by.

NEC
XExx
XPxx
XVxx
MON
Service Mode
Select DISPLAY MODE. Press PROCEED.
Press and hold RESET. Then simultaneous
press + & -. 'Warning Entering Service Menu...'
appears. Press PROCEED for enter. Be
careful! You can damage a monitor!

Nokia
6364, 7364
2B-F
CTV
Service Mode
Quick press: --\-, MENU, TV.
Nokia
EUROSTEREO
CTV
Service Mode
In 1s press buttons '-/--', 'MENU', 'TV'.
Select:
PR+/- .
Adjust:
VOL+/- .
Store:
fill-dot-symbol
on RC (near 'i' button).
Exit:
'STANDBY'.
Nokia
63/7168 55A1-0
45H1-0 55Y2-0
63/7157 63/7177
STEREO PLUS
CTV
Service Mode
MUTE --> OK (M) --> TV
Controls:
cursor buttons.
Store:
OK (M).
Exit:
TV
Nokia
STEREO PLUS
CTV
Service Mode
i --> M --> PROGR.
Controls:
cursor buttons.
Store:
M.
Exit:
TV

Nordmende
DC1
CTV
Service Mode
Switch to Standby. Switch off with the mains
switch. Press and hold red button on RC and
then switch on with the mains switch (cca 10s).
Select:
numbers buttons.
Adjust:
+/- .
Store:
red button.
Exit:
'MUTE'.
Nordmende
DC2
CTV

Service Mode

Switch to Standby. Switch off with the mains switch. Press and hold red button on RC and then switch on with the mains switch (cca 10s).

Select:

numbers buttons.

Adjust:

+/-.

Store:

red button.

Exit:

'MUTE'.

Nordmende

Color 3038

F15-03 110°

CTV

MDA2061

Replacement

After replacement of the MDA2061 (IR73) the TV receiver acts as follows: a) All programme storages have stored Ch00. b) The indicator shows German function characters. c) PAL and SECAM EAST standard reception is possible (not NTSC and/or SECAM WEST).

If required to change according to paragr. b and c then switch off the set by the mains switch.

Press both buttons + and - for volume on TV and simultaneously switch the set on with the mains switch. Keep the two volume buttons pressed until the display indicates Pr. After 8s the display indicates __. Now the following buttons can be pressed on the RC, thus additional corresponding segments will be illuminated: Button '1' function symbols indicate international display. Reversible to German display with button '2'. Button '5' additional SECAM WEST and/or NTSC reception (Multistandard). Reversible to Single Standard with button '3'.

Store:

Stand-By.

Nordmende

ICC10

CTV

Service Mode

Switch to Stand By. Switch off with the mains switch. Press and hold 'VT' on RC then switch on with the mains switch.

Nordmende

ICC9

CTV

Service Mode

Switch off TV with RC (st-by). Switch off TV with main switch. Wait a few sec till ST_BY LED switch off. Simultaneous press blue button on RC and switch on TV with main switch. Press blue button again. (WARNING: scart must be free.)

Palladium

TV-100

CTV

Service Mode

Simultaneous press red & blue buttons on RC

then (in 5 sec.) simultaneously press P- & P+ on local keyboard.

Commands:

arrows.

Store:

OK.

Exit:

TV.

Panasonic

EURO-1

CTV

Service Mode

In Sound-Menu Low-tone-regel to MAX and High-tone-regel to MIN. Press VOL- on TV and RESET on RC in some time.

Select:

red

and green buttons.

Adjust:

yellow and blue buttons.

Store:

'STORE'.

Exit:

switch off.

Panasonic

EURO-2

CTV

Service Mode

In Sound-Menu Low-tone-regel to MAX and High-tone-regel to MIN. Press 'F' button on TV. Then press VOL- on TV and REVEAL on RC in some time.

Select:

red and green buttons.

Adjust:

yellow and blue buttons.

Store:

'STR'.

Exit:

'N' on RC.

Panasonic

MX-3

MX-3C

CTV

Hotel Mode

ON:

Press simultaneously 'OFF TIMER' on RC and 'CH.UP' local.

OFF:

Press simultaneously 'OFF TIMER' on RC and 'VOL-' local.

Panasonic

MX-3

MX-3C

CTV

Service Mode

Simultaneously press 'RECALL' on RC and 'VOL-' local. Exit: 'NORMAL' on RC.

Philips

ANUBIS B

CTV

Hotel Mode

ON:

Set HOTEL ON in Service Menu. Select
programm 38. Simultaneous press (3 sec)
INSTALL & P- on local keyboard.

OFF:

Set HOTEL OFF in Service Menu.

Philips

ANUBIS B

CTV

Service Mode

Simultaneously press VOL+ & P- on RC.

Exit: STANDBY.

Philips

Anubis S

CTV

Hotel Mode

OFF:

Select programm 38. Simultaneous press
(3 sec) PR+ & VOL- on local keyboard.

ON:

Select programm 38. Simultaneous press
(3 sec) STORE & PR- on local keyboard.

Philips

L7.1A

CTV

Service Mode

With special service RC. Or short M25, M25
on board and then switch on TV.

Exit:

st-by.

Philips

L9.1

CTV

Hotel Mode

Select program 38 on the TV. Simultaneously
press the keys VOLUME- and VOLUME+ on
the keyboard of the TV and the OSD key of
the remote control.

Philips

L9H

CTV

Service Mode This model also supports the 062596 sequence
followed by [MENU] (service default) or
[i+]/[OSD] (service mode).

Philips

MD1.2E

CTV

Service Mode

There is a small Service jumper to short on the
small signal PCB. When the TV is in this first
level service mode, you can go in the second
level service mode by pressing both MENU
and - keys on top of the TV at the same time.
There you can read much parameters and
proceed with most of the adjustments. In fact
this method let you use an ordinary Remote
control but you also need to open the back
cover. With the special service remote control,
a special code is sent to enter the service mode.

Philips

MG3.1E

CTV

Service Mode

Option 1: In the TV-set itself is a 3-pin connector with which either SERVICE-DEFAULT or SERVICE-MODE can be activated. This connector is depicted 0356 (SERVICE-PINS) on page K7 (TXT&CONTROL). Shorting pins 1-2 will activate SERVICE-MODE. Shorting pins 2-3 will activate SERVICE-DEFAULT. Option 2: Activate these modes using the remote control. Obviously option 2 is the preferred method because the settings have to be changed using a remote control anyway.... To activate SERVICE-DEFAULT: Press 0 6 2 5 9 6 and then the [menu] button. The message 'Service Default' appears and channel 'SER T' will be selected. This only sets some settings to a preset value (color/brightness/volume and such). This mode is primarily intended to be used when the non volatile memory has been replaced. It is then loaded with the default values. To activate SERVICE-MODE: Press 0 6 2 5 9 6 and then the [i+] button. After pressing 0 6 2 5 9 6 the message 'Dealer' should have appeared. Do not worry about the channel changing while you press the numbers. Service technicians have the means of entering service mode using a special remote control.

Philips
29PT9416
MG7.1
CTV

Service Mode

Use the standard remote control an key in a special sequence 0 6 2 5 9 6 followed by pressing the 'MENU' button. If the main menu also appears with the service menu just press 'MENU' again to clear it. The other way is to short the two service pins on the signal panel (pins 2 and 3 of connector 0356). The advantage of this last method is that all the software protections are turned off.

Philips
Y6
CTV

Service Mode

Use the standard remote control an key in a special sequence 0 6 2 5 9 6 followed by pressing the 'MENU' button. If the main menu also appears with the service menu just press 'MENU' again to clear it.

Philips
VR210/58

VCR
Modulator
off

Without cassette. Press and hold SYSTEM till 'G591' appears. Press and hold CLEAR(CL) till 'MOFF' appears.

Exit:
TV/STANBY.
Philips

VR210/58
VCR
Modulator
on

Without cassette. Press and hold SYSTEM till 'MOFF' appears. Press and hold CLEAR(CL) till 'G591' appears.

Exit:

TV/STANBY.

Philips

VR220/58

VCR

Child Lock

Cancel

Press CHILD LOCK (key-simbol) on the RC for 5s with the VCR switched on.

Philips

VR220/58

VCR

Modulator

on/off

Without cassette. Press and hold STOP on the RC and then press STOP/EJECT on VCR.

Select the line 'MODULATOR' on the TV screen or 'MOD+' in the display with P+/- . In the display select 'OFF' / 'MOD-' (modulator off) with VOL- or 'MOD+' (modulator on). Confirm with OK.

Exit with MENU

Philips

VR220/58

VCR

Modulator

preset

Without cassette. Hold the STOP button on the RC. In addition press the STOP/EJECT button on the VCR until the pre-set modulator frequency appears in the display, e.g. 'M591' (591MHz or 36 ch. UHF). Select line 'OPTIMIZE FREQUENCY' using P+/- . Enter new modulator frequency with the numbers 0-9. In line 'SOUND SYSTEM' select the TV system using VOL+/- . 'G' = PAL B/G. 'K' = SECAM D/K. Confirm with OK. 'STORED' will appear briefly on the screen.

Philips

VR220/58

VCR

Reset to

factory

settings

Disconnect from the mains power supply. Press and hold the STANDBY/ON button on the device and reconnect to the mains power supply. Release the button when 'OSD' appears in the VCR display.

Philips

VR400/58

VCR

Auto ST-BY

off

Press and hold STOP till [] appears.

Philips

VR400/58

VCR

Modulator

off

Without cassette. Press and hold SYSTEM till 'G591' appears. Press and hold CLEAR(CL) till

'MOFF' appears.

Exit:

TV/STANBY.

Philips

VR400/58

VCR

Modulator

on

Without cassette. Press and hold SYSTEM till

'MOFF' appears. Press and hold CLEAR(CL) till

'G591' appears.

Exit:

TV/STANBY.

Philips

VR400/58

VCR

Modulator

preset

Without cassette. VCR st-by. Press and hold

SYSTEM till 'G591' appears.

System change:

SELECT.

Freq. Change:

P +/- .

Store:

OK.

Exit:

TV/STANBY.

Revox

D-TV

C9003

CTV

Service Mode

On the local control press function key five times

(indication "Service" will appear), afterwards

within a sec. press key "MEN" on the remote

control.

Store:

X.

Exit:

TV.

Saba

ULTRACOLOR

T55U42 T55U43

T63U42 T63U43

ICC5115ML 110

ICC5116MM 90°

CTV

Combination

Lock Cancel

Switch off set with main switch. Switch on set

with main switch and during doing this press

the buttons + and - of volume control on the

set's control board simultaneously until the

display lights. Display: SS... Press the button

'S' on the RC. Switch off with RC. Now the

combination lock is unlocked and one can

switch on again in the normal manner.

Saba

ICC9

CTV

Service Mode

Switch off TV with RC (st-by). Switch off TV with main switch. Wait a few sec till ST_BY LED switch off. Simultaneous press VT button on RC and switch on TV with main switch. Press VT button again. (WARNING: scart must be free.)

Saba

T7032VT

TX92

CTV

Hotel Mode

Cancel

Put TV into standby, then turn power off, then turn power on whilst holding standby button on remote and step through menus to vol set and increase level to max.

Salora

28N8S

2B-F

CTV

Service Mode

Quick press: --\-, MENU, TV.

Salora

17/21SF 25/28X71

25/28SP50

STEREO PLUS

CTV

Service Mode

MUTE --> OK (M) --> TV

Controls:

cursor buttons.

Store:

OK (M).

Exit:

TV

Samsung

CB-14F1 CB-20P30

CB-20H1 CB-20S20

CB-21H1 CB-21P30

CB-21S20 CB-3373

CB-5020 CB-5073

CB-5079 CB-5320

CB-5373 CB-5379

S15A

CTV

Service Mode

STAND-BY --> DISPLAY --> P.STD -->

MUTE --> POWER ON.

Controls:

VOL +/-, CH +/-.

Exit:

POWER OFF.

Samsung

CK5038

SCT11B

CTV

Service Mode

STAND-BY --> P.STD --> HELP --> SLEEP -->

POWER ON.

Controls:

VOL +/-, CH +/-.

Exit:

STATUS.

Samsung
CX5944 CX6844
SCT12B
CTV
Service Mode
STAND-BY --> P.STD --> HELP --> SLEEP -->
POWER ON.
FACTORY MODE: set PSL=15 and PVA=63.
Controls:
VOL +/-, CH +/-.

Exit:
STATUS
Samsung
CB-14V10 CB-3373
CB-14V20 CB-5073
CB-20P30 CB-5079
CB-20S10 CB-5373
CB-20S20
CB-21P30
CB-21S10
CB-21S20

SCT13B
CTV
Service Mode
STAND-BY --> P.STD --> HELP --> SLEEP -->
POWER ON.
Controls:
VOL +/-, CH +/-.

Exit:
STATUS.
Samsung

CS7272
SCT51A
CTV

Service Mode
PICTURE OFF --> SLEEP --> P.STD -->
MUTE --> PICTURE ON

Samsung
CS-721
CS-723

SCT52A
CTV

Service Mode
PICTURE OFF --> SLEEP --> P.STD -->
MUTE --> PICTURE ON

Samsung
TVP3350
TVP5050
SCV11A
SCV11B

CTV/VCR Service Mode
STAND-BY --> P.STD --> MENU -->
SLEEP --> POWER ON

Schneider
DTV 1
CTV

Service Mode
Simultaneous press Service-button on digi-
bord & button C on RC.

Selection:
Bass +/-.

Adjust:
Volume +/-.

Store:
T.
Exit:
TV.
Schneider
DTV 100
CTV
Service Mode
Simultaneous press red & blue buttons on RC
then (in 5 sec.) simultaneous press P- & P+
on local keyboard.
Commands:
arrows.
Store:
OK.
Exit:
TV.
Schneider
DTV 2
CTV
Service Mode
Like DTV 1 or simultaneous press Service-
button (down right on RC) & C button on RC.
Selection:
Bass +/-.
Adjust:
Volume +/-.
Store:
IDEAL.
Exit:
TV.
Schneider
DTV 3
CTV
Service Mode
Simultaneous press red & blue buttons on RC
then (in 5 sec.) simultaneous press P- &
VOL+ on local keyboard.
Selection:
wheel.
Adjust:
ring.
Store:
red button.
Exit:
OFF.
Schneider
TV 4
CTV
Service Mode
Simultaneous press red & blue buttons on RC
then (in 5 sec.) simultaneous press P- &
VOL+ on local keyboard.
Selection:
P +/-.
Adjust:
VOL +/-.
Store:
auto.
Exit:
OFF.
Schneider
STV7128
TV 8

CTV
Service Mode
Simultaneous press red & blue buttons on RC
then (in 5 sec.) simultaneous press P- &
VOL+ on local keyboard.
Selection:
P +/-.
Adjust:
VOL +/-.
Store:
auto.
Exit:
OFF.
Schneider
TV 9

CTV
Service Mode
Simultaneous press red & blue buttons on RC
then (in 5 sec.) simultaneous press P- &
VOL+ on local keyboard.
Selection:
P +/-.
Adjust:
VOL +/-.
Store:
auto.
Exit:
OFF.
Schneider
STV355FST

CTV
Service Mode
MENU --> SERVICE --> OK --> 089

SEG
11AK18
CTV
Service Mode
MENU 1 6 7 5
SEG
11AK19
CTV
Service Mode
MENU 4 7 2 5

Seleco
STEREO PLUS
CTV
Service Mode
MUTE --> OK (M) --> TV
Controls:
cursor buttons.
Store:OK (M).
Exit:TV

Sharp
4BSA
CTV
Service Mode
Short conntacts 2 & 6 on bord TB connector
and press button 'MODE' on RC. Remove short.
Store:auto.
Exit:'MODE'.
Sharp

63CS-03S

CS

CTV

Service Mode

Press and hold buttons VOL- and PR+ on the local keyboard and then switch on with main switch.

Store:'POWER'.

Sharp

D3000

CTV

Service Mode

Press Service-button on Digi-modul.

Store:on/off.

Exit:Service button.

Sharp

Euro-DS1

CTV

Service Mode

Short contacts 2 & 6 on Digi Modul Service Slot and then press button 'MODE' on RC.

Store:(romb-symbol) on RC.

Exit:standby, switch off, switch on, remove short.

Sharp

54AT-15SC

CTV

Service Mode

Press and hold buttons VOL- and PR+ on the local keyboard and then switch on with main switch.

Store:'POWER'.

Sharp

DV-5401S

CTV

Service Mode

Locate place for 2 buttons on local keyboard (main board) S754-MODE and S755-PRESET.

Enter:short S754 (-SERV-).

Commands:CH +/-.

Store:short S755.

Siemens

FS369M4

CS9409

CTV

Service Mode

Info Center' --> 'Special Functions' --> 'Service'

--> Code Number 089

Siemens

SAT

Programm

Lock

Unlock: Press key-symbol and 6 1 0 1.

Silva

STV355FST

CTV

Service Mode

MENU --> SERVICE --> OK --> 089

Sony

KV-E2531

KV-E2931

KV-E3431

AE-2

CTV

Service Mode

Turn on the main power switch of the set while pressing any two buttons on the front panel.

'TT' will appear on the upper right corner of the screen. Press the 'MENU' button on the RC.

In menu select 'DEMO' and press 'OK'. Select DEVICE corresponding to the adjustment you need. Store: OK. Exit: turn off.

Sony

KV-2170

KV-2180

KV-2540

BE4

CTV

Service Mode

? --> 5 --> VOL+ --> TV --> MENU

Exit: 00

Sony

KV-B2911

CTV

Service Mode

Turn on the main power switch of the set while pressing any two buttons on the front panel.

'TT' will appear on the upper right corner of the screen. Press the 'MENU' button on the RC.

In menu select 'DEMO' and press 'OK'. Select DEVICE corresponding to the adjustment you need. Store: OK. Exit: turn off.

Sony

KV-G21M1

CTV

Service Mode

Switch TV to STANDBY.

DISPLAY --> 5 --> VOL+ --> POWER

Telefunken

ICC9

CTV

Service Mode

Switch off TV with RC (st-by). Switch off TV with main switch. Wait a few sec till ST_BY LED

switch off. Simultaneous press VT button on RC

and switch on TV with main switch. Press VT button again. (WARNING: scart must be free.)

Telefunken

STEREO PLUS

CTV

Service Mode

MUTE --> OK (M) --> TV

Controls:cursor buttons.

Store:OK (M).

Exit:TV

Telefunken

TX-90

CTV

Service Mode

Switch off TV with RC (st-by). Switch off TV with main switch. Wait a few sec till ST_BY LED

switch off. Simultaneous press VT button on RC

and switch on TV with main switch. Press VT button again.

Telefunken

TX-91

CTV

Service Mode

Switch off TV with RC (st-by). Switch off TV with main switch. Wait a few sec till ST_BY LED switch off. Simultaneous press VT button on RC and switch on TV with main switch. Press VT button again.

Thomson

ICC19

CTV

Service Mode

Switch to Standby. Switch off with the mains switch. Press and hold blue button and then switch on with the mains switch. Press blue button again. Exit: switch off with mains switch.

Thomson

ICC19

CTV

Service Mode

Switch to Standby. Switch off with the mains switch. Press and hold 'PROG-' and 'VOL-' and then switch on with the mains switch. Exit: switch off with mains switch.

Thomson

ICC9

CTV

Service Mode

Switch off TV with RC (st-by). Switch off TV with main switch. Wait a few sec till ST_BY LED switch off. Simultaneous press VT button on RC and switch on TV with main switch. Press VT button again. (WARNING: scart must be free.)

Thomson

TX-90

CTV

Service Mode

Switch off TV with RC (st-by). Switch off TV with main switch. Wait a few sec till ST_BY LED switch off. Simultaneous press VT button on RC and switch on TV with main switch. Press VT button again.

Thomson

TX-91

CTV

Service Mode

Switch off TV with RC (st-by). Switch off TV with main switch. Wait a few sec till ST_BY LED switch off. Simultaneous press VT button on RC and switch on TV with main switch. Press VT button again.

Toshiba

a2150

S5E

CTV

Service Mode

Press 'MUTE' button. Press and hold 'MUTE' button and press 'MENU' on local keyboard. Select: PR nr.. Adjust: VOL+/- . Store: auto. Exit: 'STANDBY'. Test picture: 'AV'.

Toshiba

2876DD

2988DG

CTV

Service Mode

Press 'MUTE' button. Press and hold 'MUTE' button and press 'MENU' on local keyboard.

Select:PR+/-.

Adjust:VOL+/-.

Store:auto.

Exit:'STANDBY'. Test picture: 'AV'.

Universum

6000

CTV

Service Mode

Switch on with main switch. Press 'MENU', 'TV', 'i'. If TV is still in st-by press 2x'TV', 'i'.

Select and adjust with cursors. Store: 'OK'.

Exit: switch off with main switch.