

MEDION MD7457 FIRMWARE UPDATING GUIDE

October 2004

© Neobahamuth, 2004. All rights reserved. <http://www.md7457.tech.nu>

Disclaimer: The authors are in no way responsible for any resulting damages from the use of this software. No duplication of any material herein is authorized without the express consent of Neobahamuth. Please review the Terms and Conditions of the Web site.

Note: For the latest support and troubleshooting information, please visit <http://www.md7457.tech.nu>.

Welcome to the Medion MD7457 firmware updating guide!

This file contains information to help you burn a CD-R/RW and update the player's firmware with it.

CONTENTS

- A. Introduction
- B. Getting the Firmware
- C. Burning the CD-R/RW
- D. Updating the Player's Firmware
- E. Troubleshooting

A. Introduction

The Medion MD7457 is firmware upgradeable. This means that you can upgrade the player with new functions, bug fixes and modifications by upgrading ("flashing") the player. In order to do this, you must first download the appropriate firmware, burn it on a CD-R/RW and insert it into the player to update it.

This guide will explain everything step by step.


B. Getting the Firmware

To get started you must first download the appropriate firmware from the site. After you have downloaded it (and unzipped it if necessary), you will be ready to start burning it on a CD-R/RW.

C. Burning the CD-R/RW

Now that you have the appropriate firmware you can start burning it on a CD-R/RW. In this example we used Nero Burning ROM.

- Unzip the file (with WinZip/WinRAR). Make sure the unzipped file name is **MTT1389.BIN** . (all caps)
- Open your CD/DVD burning program. e.g. Nero Burning ROM
- Choose "File" > "New" .
- Select "CD-ROM (ISO)".
- Choose "No Multisession"

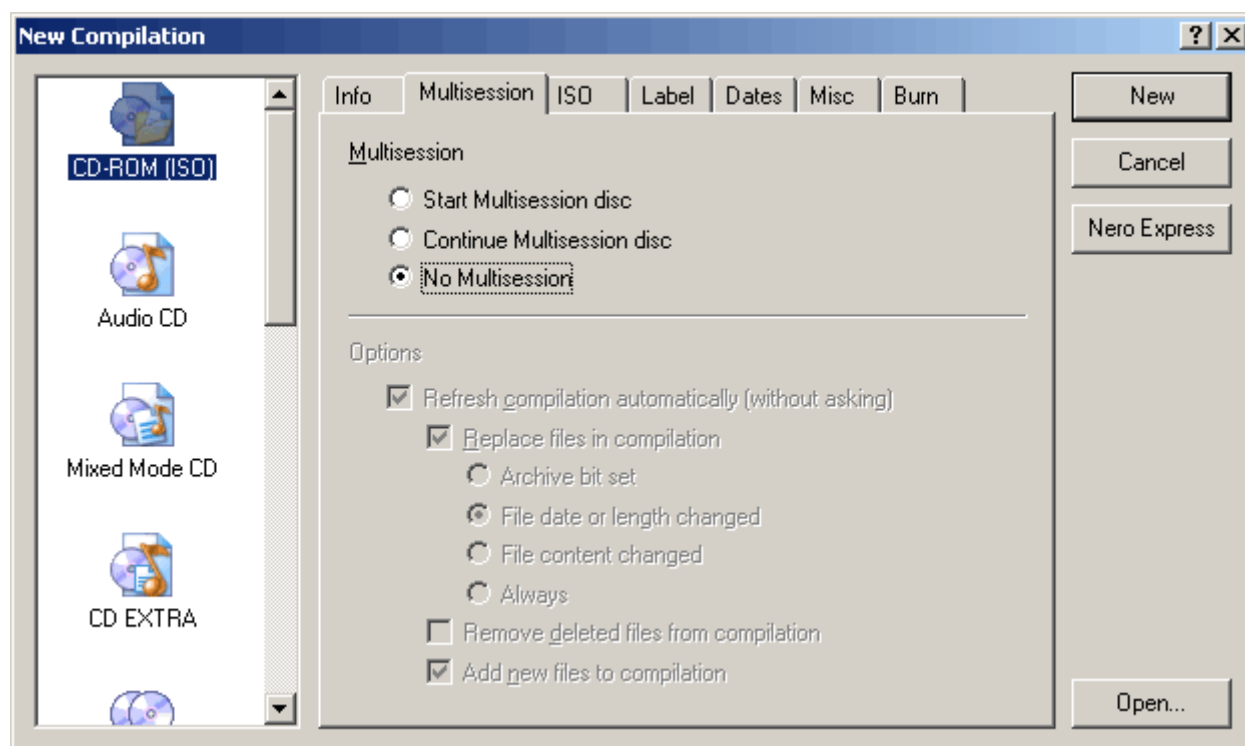


- Go to the **"ISO"** tab and choose:


File name length: **"Max. of 11 = 8 + 3 chars"**

Format: **"Mode 1"**


Character set: **"ISO 9660 (standard ISO CD-ROM)"**
and **deselect** **"Joliet"**

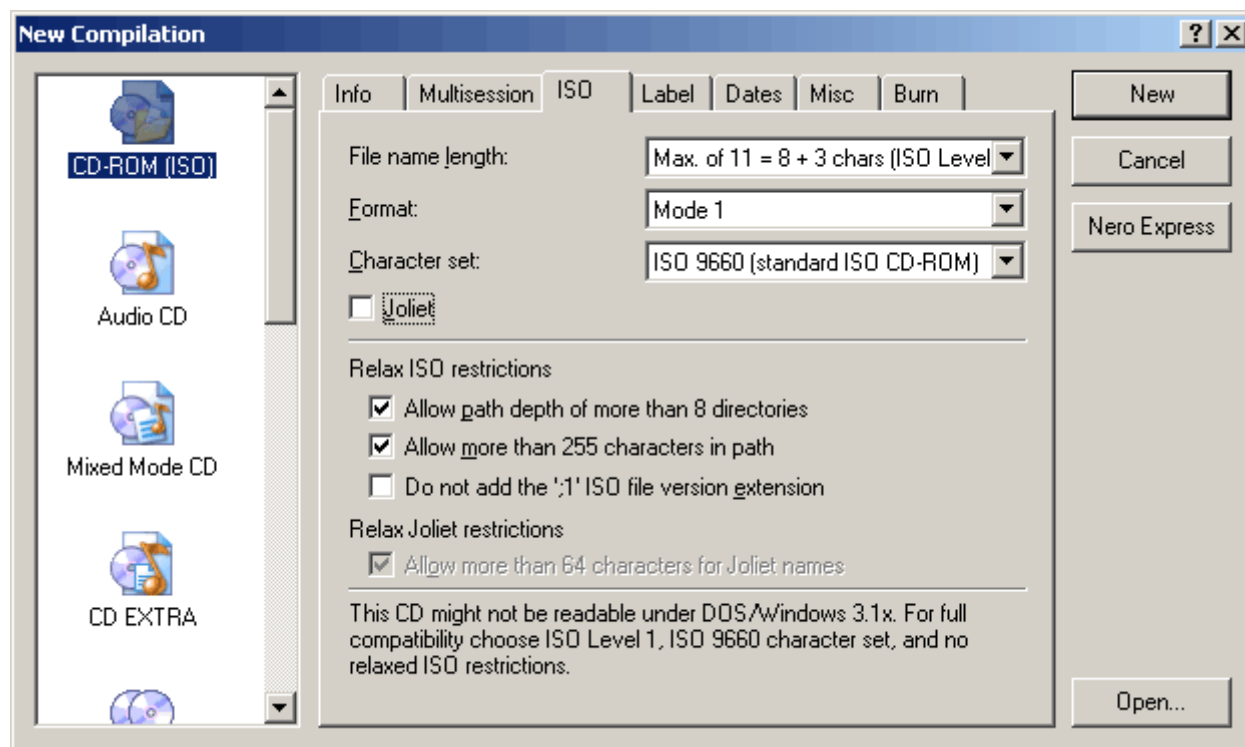


- Go to the **"Label"** tab and enter **"CORETEK"** as the ISO 9660 volume label

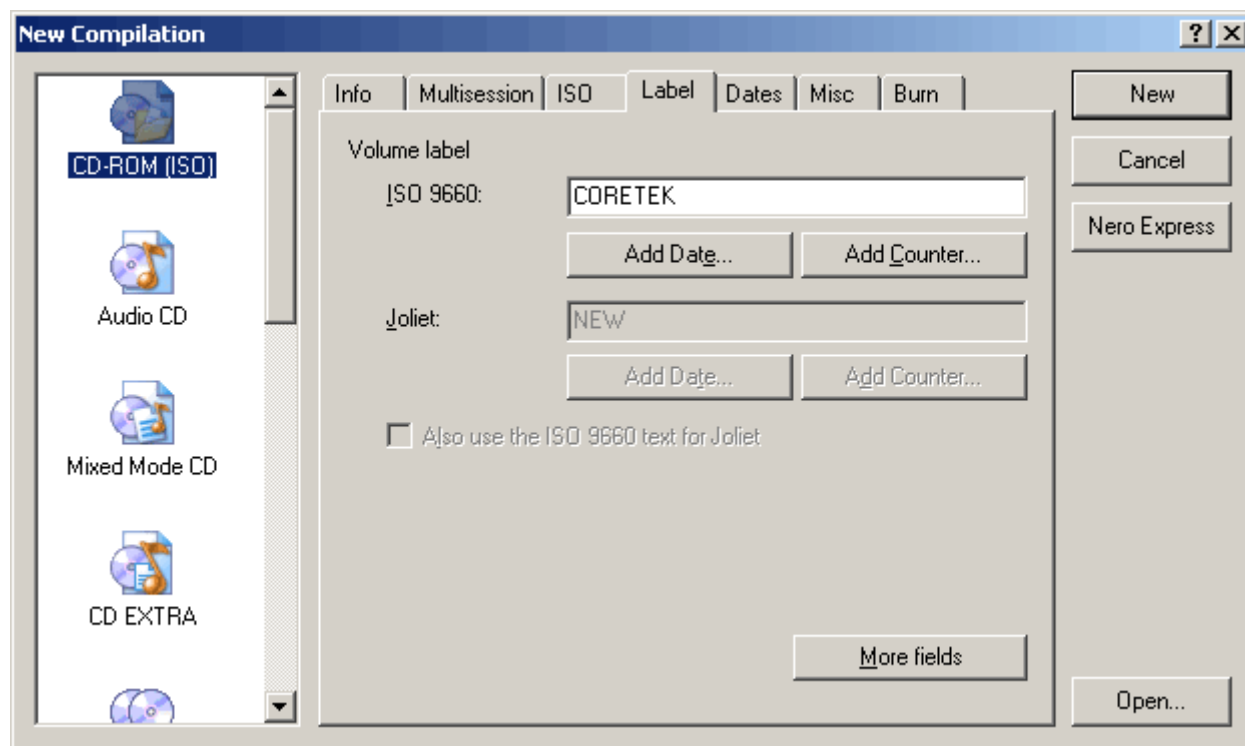

- Click the **"New"** button.
- Drag the **MTT1389.BIN** file from your hard disk (on the right) to the contents of CD (on the left).

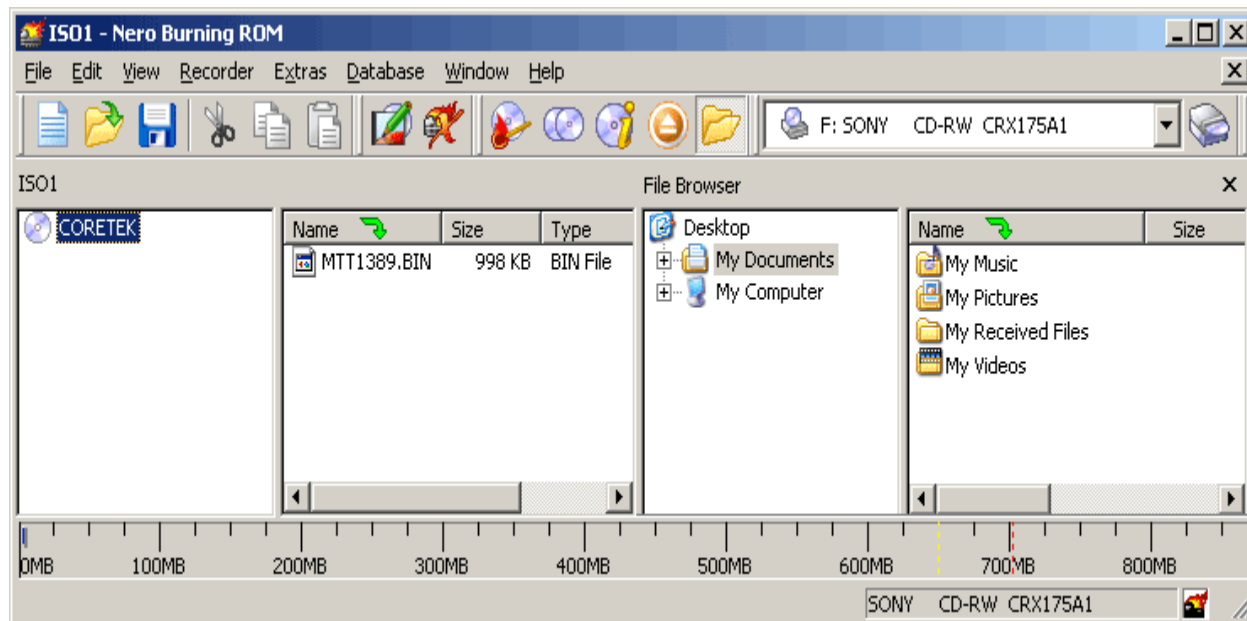


- To start burning, go to **"Recorder" > "Burn Compilation"** or click on the  button.
- On the next screen select the following options:

"Write"


"Finalize CD (No further writing possible!)"

Write speed: choose the lowest speed possible, e.g. **"4x"** or **"8x"**

Write method: **"Disc-at-once"**

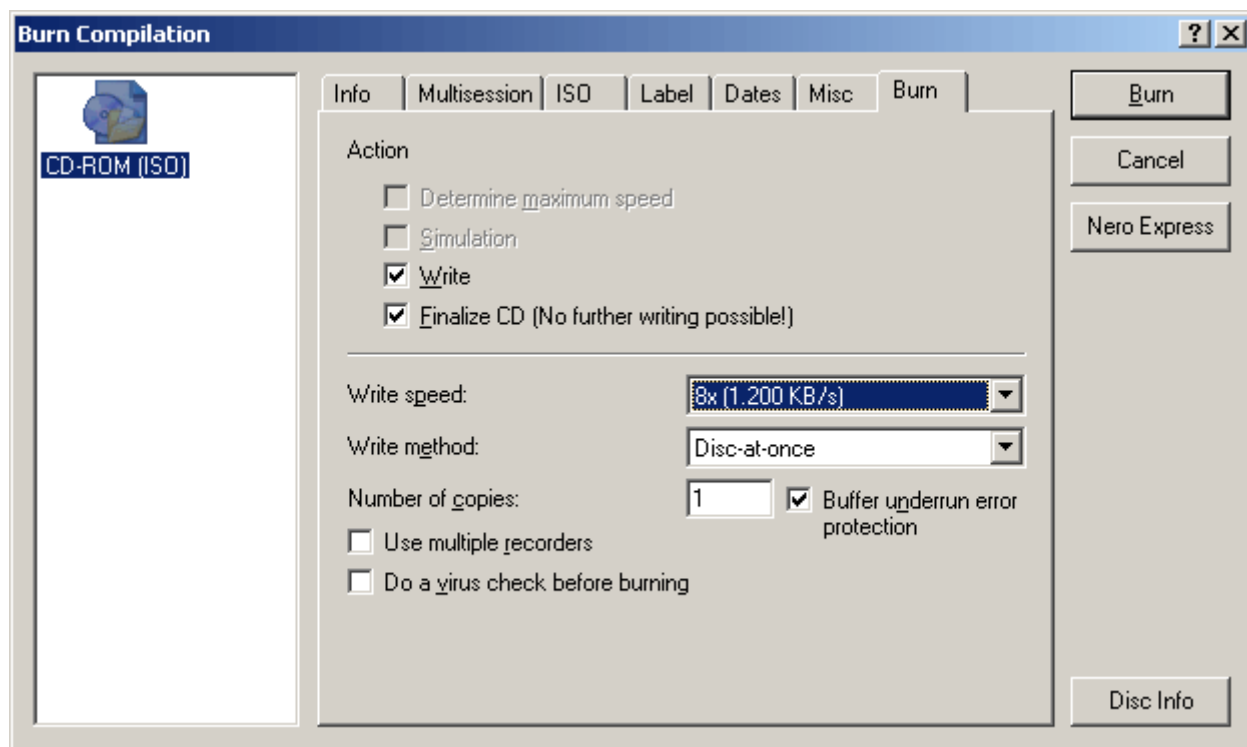

- Click "**Burn**" to start the actual burning.

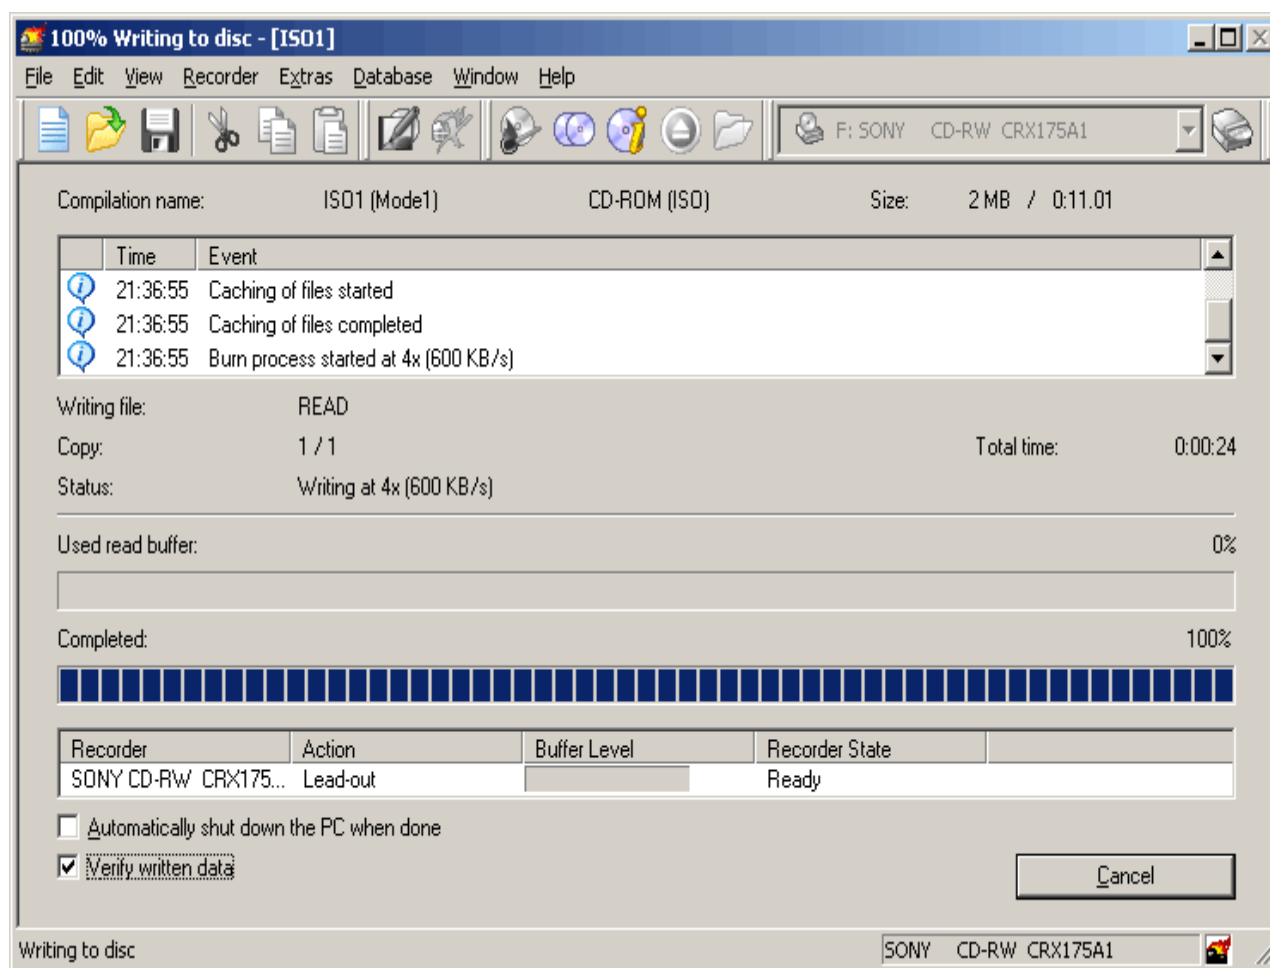

- When burning is complete, you will have a disc named **CORETEK** containing a **MTT1389.BIN** file!

D. Updating the Player's Firmware

Now that you have the firmware update CD-R/RW you can start updating the player with it.

- **switch on** the player
- **insert** the update **CD-R/RW**
- **close** the **CD tray**
- **wait** until the CD-ROM is loaded
- this **message appears**

"Upgrade File DETECTED"
"Upgrade?"
"Press Play To Start"



- press "**PLAY**"
- "**File Copying**" appears on the screen
- "**Upgrading**" appears on the screen
- the **CD tray opens**
- **after** about **3 min.** the **player** will automatically **restart**
- this **message appears again**:

"Upgrade File DETECTED"
"Upgrade?"
"Press Play To Start"

- press "**STOP**"
- **remove** the update **CD-R/RW**



- finished

(If the buttons on the player stop responding after this update --> press "**KEYLOCK**" on the remote control.)

E. Troubleshooting

For the latest support and troubleshooting information, please visit <http://www.md7457.tech.nu>.

© Neobahamuth, 2004. All rights reserved. <http://www.md7457.tech.nu>

Disclaimer: The authors are in no way responsible for any resulting damages from the use of this software. No duplication of any material herein is authorized without the express consent of Neobahamuth. Please review the Terms and Conditions of the Web site.