

Service Manual

Plasma Television


Model No. **TX-P50U30E**

TX-P50U30J

TX-PR50U30

TX-PR50U31

GPF14D-E Chassis

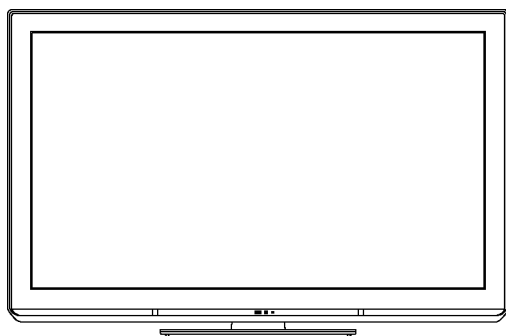

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

TABLE OF CONTENTS

	PAGE		PAGE
1 Safety Precautions	3	11.3. Block (2/4) Diagram	39
1.1. General Guidelines	3	11.4. Block (3/4) Diagram	40
1.2. Touch-Current Check	3	11.5. Block (4/4) Diagram	41
2 Warning	4	12 Wiring Connection Diagram	42
2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices	4	12.1. Caution statement.	42
2.2. About lead free solder (PbF)	5	12.2. Wiring (1)	42
3 Service Navigation	6	12.3. Wiring (2)	43
3.1. PCB Layout	6	12.4. Wiring (3)	44
3.2. Applicable signals	7	12.5. Wiring (4)	44
4 Specifications	8	12.6. Wiring (5)	45
5 Technical Descriptions	10	13 Schematic Diagram	
5.1. Specification of KEY for CI Plus, DTCP-IP and One-to-One	10	14 Printed Circuit Board	
6 Service Mode	11	15 Exploded View	
6.1. How to enter into Service Mode	11		
6.2. Option - Mirror	13		
6.3. Service tool mode	13		
6.4. Hotel mode	14		
6.5. Data Copy by SD Card	15		
7 Troubleshooting Guide	18		
7.1. Check of the IIC bus lines	18		
7.2. Power LED Blinking timing chart	19		
7.3. No Power	19		
7.4. No Picture	20		
7.5. Local screen failure	21		
8 Service Fixture & Tools	22		
8.1. SC jig	22		
9 Disassembly and Assembly Instructions	23		
9.1. Remove the Rear cover	23		
9.2. Remove the AC inlet	23		
9.3. Remove the P-Board	23		
9.4. Remove the Side terminal cover	23		
9.5. Remove the Tuner unit	23		
9.6. Remove the A-Board	24		
9.7. Remove the Speakers	24		
9.8. Remove the SU-Board	24		
9.9. Remove the SD-Board	24		
9.10. Remove the SC-Board	25		
9.11. Remove the SS-Board	25		
9.12. Remove the Stand bracket and the Hanger metals	25		
9.13. Remove the C1-Board	26		
9.14. Remove the C2-Board	26		
9.15. Remove the C3-Board	26		
9.16. Remove the Plasma panel section from the Cabinet assy	26		
9.17. Remove the Radiator plate	27		
9.18. Remove the Attachment metal bottom	27		
9.19. Remove the Attachment metal top	27		
9.20. Remove the Glass holders	27		
9.21. Remove the K-Board	27		
9.22. Replace the Plasma panel	28		
10 Measurements and Adjustments	29		
10.1. Adjustment	29		
11 Block Diagram	37		
11.1. Main Block Diagram	37		
11.2. Block (1/4) Diagram	38		

1 Safety Precautions

1.1. General Guidelines

1. When conducting repairs and servicing, do not attempt to modify the equipment, its parts or its materials.
2. When wiring units (with cables, flexible cables or lead wires) are supplied as repair parts and only one wire or some of the wires have been broken or disconnected, do not attempt to repair or re-wire the units. Replace the entire wiring unit instead.
3. When conducting repairs and servicing, do not twist the Fasten connectors but plug them straight in or unplug them straight out.
4. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
5. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
6. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

1.2. Touch-Current Check

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a measuring network for touch currents between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use Leakage Current Tester (Simpson 228 or equivalent) to measure the potential across the measuring network.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reserve the AC plug in the AC outlet and repeat each of the above measure.
6. The potential at any point (TOUCH CURRENT) expressed as voltage U_1 and U_2 , does not exceed the following values:

For a. c.: $U_1 = 35 \text{ V}$ (peak) and $U_2 = 0.35 \text{ V}$ (peak);

For d. c.: $U_1 = 1.0 \text{ V}$,


Note:

The limit value of $U_2 = 0.35 \text{ V}$ (peak) for a. c. and $U_1 = 1.0 \text{ V}$ for d. c. correspond to the values 0.7 mA (peak) a. c. and 2.0 mA d. c.

The limit value $U_1 = 35 \text{ V}$ (peak) for a. c. correspond to the value 70 mA (peak) a. c. for frequencies greater than 100 kHz .

7. In case a measurement is out of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

Measuring network for TOUCH CURRENTS

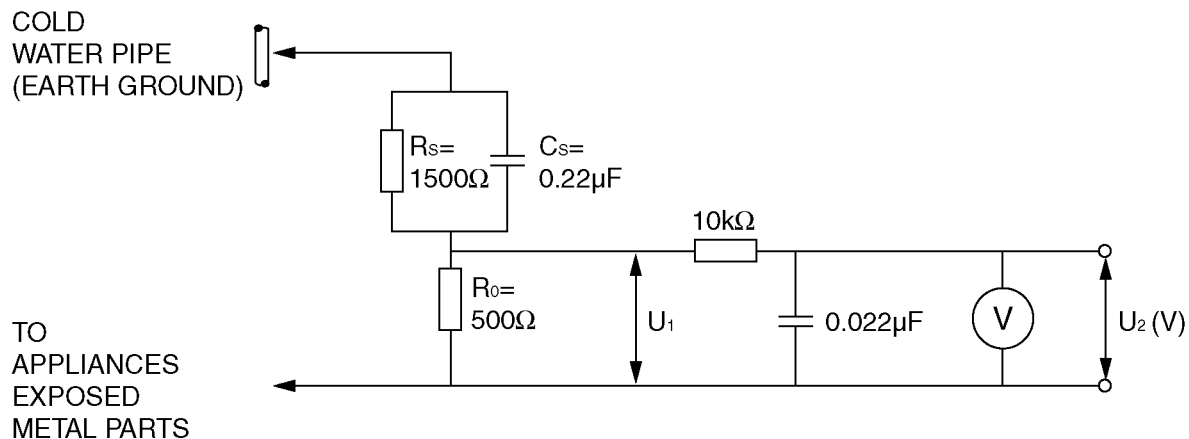

Resistance values in ohms (Ω)

V: Voltmeter or oscilloscope
(r.m.s. or peak reading)

Input resistance: $\geq 1 \text{ M}\Omega$

Input capacitance: $\leq 200 \text{ pF}$

Frequency range: 15 Hz to 1 MHz and d.c. respectively

NOTE - Appropriate measures should be taken to obtain the correct value in case of non-sinusoidal waveforms.

Figure 1

2 Warning

2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor [chip] components. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as [anti-static (ESD protected)] can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise ham less motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

2.2. About lead free solder (PbF)

Note: Lead is listed as (Pb) in the periodic table of elements.

In the information below, Pb will refer to Lead solder, and PbF will refer to Lead Free Solder.

The Lead Free Solder used in our manufacturing process and discussed below is (Sn+Ag+Cu).


That is Tin (Sn), Silver (Ag) and Copper (Cu) although other types are available.

This model uses Pb Free solder in it's manufacture due to environmental conservation issues. For service and repair work, we'd suggest the use of Pb free solder as well, although Pb solder may be used.

PCBs manufactured using lead free solder will have the PbF within a leaf Symbol **PbF** stamped on the back of PCB.




Caution

- Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 ~ 70 °F (30~40 °C) higher. Please use a high temperature soldering iron and set it to 700 ± 20 °F (370 ± 10 °C).
- Pb free solder will tend to splash when heated too high (about 1100 °F or 600 °C).
If you must use Pb solder, please completely remove all of the Pb free solder on the pins or solder area before applying Pb solder. If this is not practical, be sure to heat the Pb free solder until it melts, before applying Pb solder.
- After applying PbF solder to double layered boards, please check the component side for excess solder which may flow onto the opposite side. (see figure below)

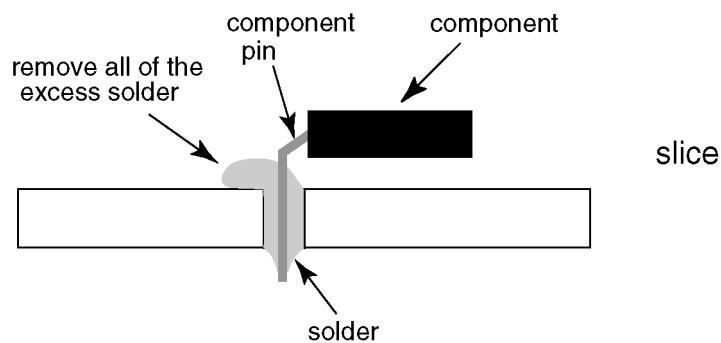

Suggested Pb free solder


There are several kinds of Pb free solder available for purchase. This product uses Sn+Ag+Cu (tin, silver, copper) solder. However, Sn+Cu (tin, copper), Sn+Zn+Bi (tin, zinc, bismuth) solder can also be used.

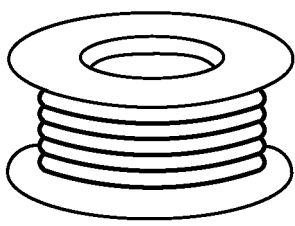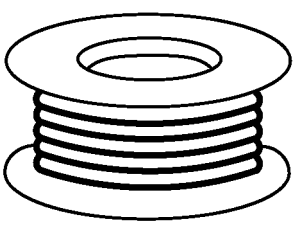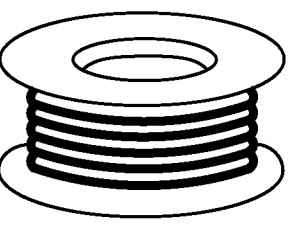0.3mm X 100g	0.6mm X 100g	1.0mm X 100g
		


3 Service Navigation

3.1. PCB Layout

Remove the Rear cover

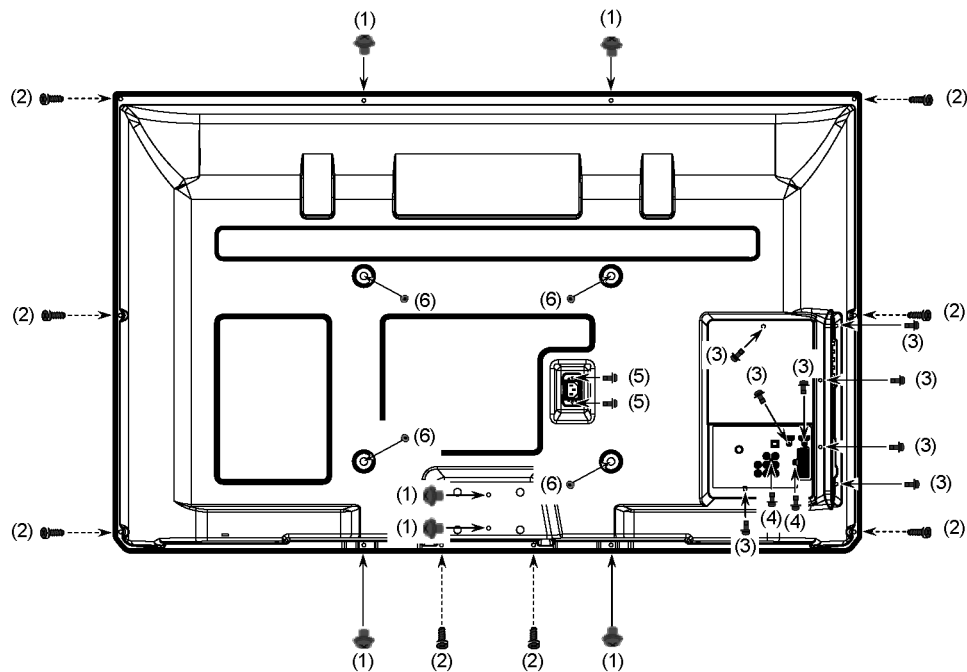

- Remove:
- 6screws (1) THEL052Z
 - 8screws (2) XTB4+12GFJK
 - 8screws (3) THEJ0409
 - 2screws (4) XTV3+10JFJK
 - 2screws (5) XYN3+F10FJK
 - 4screws (6) TKKL5493

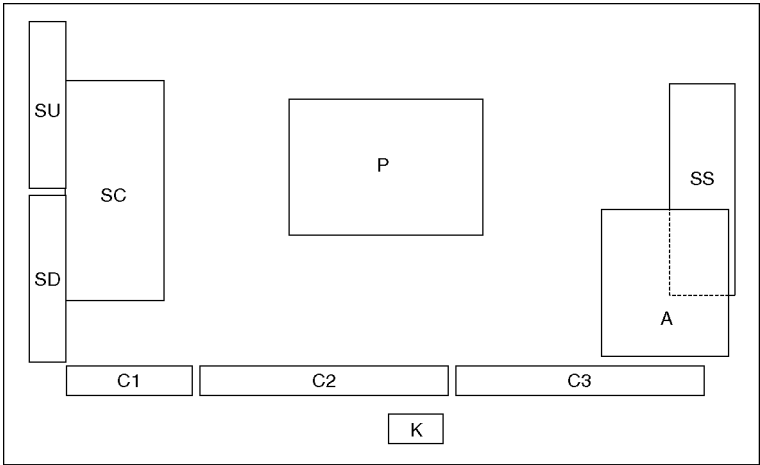

Board Name	Function	Board Name	Function
P	Power Supply Non serviceable. P-Board should be exchange for service.	C1	Data Driver (Lower Right)
A	Main AV input, processing	C2	Data Driver (Lower Center)
K	Remote receiver, Power LED, C.A.T.S sensor	C3	Data Driver (Lower Left)
		SC	Scan Drive
		SS	Sustain Drive
		SU	Scan out (Upper) Non serviceable. SU-Board should be exchanged for service.
		SD	Scan out (Lower) Non serviceable. SD-Board should be exchanged for service.

3.2. Applicable signals

COMPONENT (Y, P_B, P_R), HDMI

* Mark: Applicable input signal

Signal name	COMPONENT	HDMI
525 (480) / 60i, 60p	*	*
625 (576) / 50i, 50p	*	*
750 (720) / 60p, 50p	*	*
1,125 (1,080) / 60i, 50i	*	*
1,125 (1,080) / 60p, 50p, 24p		*

PC (from HDMI terminal)

Applicable input signal for PC is basically compatible to HDMI standard timing.

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 × 480 @60 Hz	31.47	60.00
750 (720) / 60p	45.00	60.00
1,125 (1,080) / 60p	67.50	60.00

Note

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.
- PC signal is magnified or compressed for display, so that it may not be possible to show fine detail with sufficient clarity.

4 Specifications

Power Source	AC 220-240 V, 50 / 60 Hz	
Power Consumption		
Rated Power Consumption	295 W (E/J), 310 W (R)	
On mode Average Power Consumption (E/J)	156W	
(based on IEC 62087 Ed.2 measurement method)		
Standby Power Consumption	0.40 W	
	15.00 W (With monitor out recording)	
Display panel		
Aspect Ratio	16:9	
Visible screen size	127 cm (diagonal)	
	1,105 mm (W) × 622 mm (H)	
Number of pixels	2,073,600 (1,920 (W) × 1,080 (H)) [5,760 × 1,080 dots]	
Sound		
Speaker	(160 mm × 40 mm) × 2, 6 Ω	
Audio Output	20 W (10 W + 10 W)	
Headphones	M3 (3.5 mm) stereo mini Jack × 1	
Receiving Systems / Band name (E/J)	PAL B, G, H, I, SECAM B, G, SECAM L, L' VHF E2 - E12 VHF H1 - H2 (ITALY) VHF A - H (ITALY) UHF E21 - E69 CATV (S01 - S05) CATV S1 - S10 (M1 - M10) CATV S11 - S20 (U1 - U10) CATV S21 - S41 (Hyperband) PAL D, K, SECAM D, K VHF R1 - R2 VHF R3 - R5 VHF R6 - R12 UHF E21 - E69 PAL 525/60 Playback of NTSC tape from some PAL Video recorders (VCR) M.NTSC Playback from M. NTSC Video recorders (VCR) NTSC (AV input only) Playback from NTSC Video recorders (VCR) DVB-T Digital terrestrial services (MPEG2 and MPEG4-AVC (H.264)) DVB-C Digital cable services (MPEG2 and MPEG4-AVC (H.264)) • Check the latest information on the available services at the following website. (English only) http://panasonic.jp/support/global/cs/tv/	
Receiving Systems / Band name (R)	PAL D, K, SECAM D, K VHF R1 - R2 VHF R3 - R5 VHF R6 - R12 UHF E21 - E69 PAL 525/60 Playback of NTSC tape from some PAL Video recorders (VCR) M.NTSC Playback from M. NTSC Video recorders (VCR) NTSC (AV input only) Playback from NTSC Video recorders (VCR) DVB-T Digital terrestrial services (MPEG2 and MPEG4-AVC(H.264)) DVB-C Digital cable services (MPEG2 and MPEG4-AVC(H.264)) • Check the latest information on the available services at the following website. (English only) http://panasonic.jp/support/global/cs/tv/	
Aerial input	VHF / UHF	
Operating Conditions		
	Temperature:	0 °C- 35 °C
	Humidity:	20 % - 80 % RH (non-condensing)
Connection Terminals		
AV1 (SCART)	21 Pin terminal (Audio/Video in, Audio/Video out, RGB in, Q-Link)	
AV2 input	VIDEO:	RCA PIN Type × 1 1.0 V [p-p] (75 Ω)
	AUDIO L-R:	RCA PIN Type × 2 0.5 V [rms]
COMPONENT input	Y:	1.0 V [p-p] (including synchronization)
	P _B , P _R :	±0.35 V [p-p]
HDMI 1 / 2 input	TYPE A Connectors	
	HDMI1 :	HDMI (Version 1.3 with Deep Colour, x.v.Colour™)
	HDMI2 :	HDMI (Version 1.4 with Audio Return Channel), Deep Colour, x.v.Colour™
	• This TV supports [HDAVI Control 5] function.	
Card slot	SD CARD slot × 1	
	Common Interface slot × 1	
AUDIO OUT	RCA PIN Type × 2	0.5 V [rms] (high impedance)
DIGITAL AUDIO OUT	PCM / Dolby Digital / DTS, Fiber optic	
Dimensions (W × H × D)	1,212 mm × 782 mm × 324 mm (With Pedestal)	
	1,212 mm × 747 mm × 93 mm (TV only)	

Mass

34.0 kg Net (With Pedestal)
30.5 kg Net (TV only)

Note

- Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.
- This equipment complies with the EMC standards listed below.
EN55013, EN61000-3-2, EN61000-3-3, EN55020

5 Technical Descriptions

5.1. Specification of KEY for CI Plus, DTCP-IP and One-to-One

5.1.1. General information:

1. EEPROM (IC8902) for spare parts has the seed of KEY for each.
2. The final KEY data will be generated by Peaks IC (IC8000) when SELF CHECK was done and are stored in both Peaks IC (IC8000) and EEPROM (IC8902).

Three KEY are not generated for all models.

The necessary KEY are only generated and stored depend on the feature of models.

5.1.2. Replacement of ICs:

When Peaks IC (IC8000) is replaced, EEPROM (IC8902) should be also replaced with new one the same time.

When EEPROM (IC8902) is replaced, Peaks IC (IC8000) is not necessary to be replaced the same time.

After the replacement of IC, SELF CHECK should be done to generate the final KEY data.

How to SELF CHECK: While pressing [VOLUME (-)] button on the main unit, press [MENU] button on the remote control for more than 3 seconds.

TV will be forced to the factory shipment setting after this SELF CHECK.

5.1.3. Model and Keys:

Model No.	Keys		
	One-to-One (For USB Rec.)	CI Plus	DTCP-IP
TX-P50U30E	None	Yes	None
TX-P50U30J	None	Yes	None
TX-PR50U30	None	None	None
TX-PR50U31	None	None	None


6 Service Mode

6.1. How to enter into Service Mode

6.1.1. Purpose

After exchange parts, check and adjust the contents of adjustment mode.

While pressing [VOLUME (-)] button of the main unit, press [0] button of the remote control three times within 2 seconds.

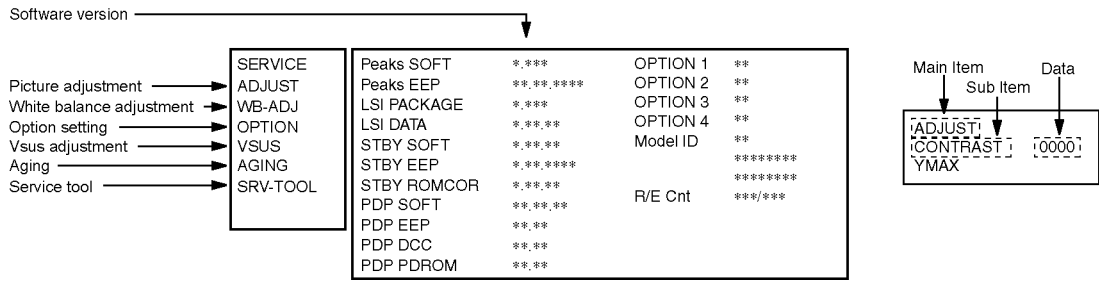

6.1.2. Key command

- [1] button...Main items Selection in forward direction
- [2] button...Main items Selection in reverse direction
- [3] button...Sub items Selection in forward direction
- [4] button...Sub items Selection in reverse direction
- [RED] button...All Sub items Selection in forward direction
- [GREEN] button...All Sub items Selection in reverse direction
- [VOL] button...Value of sub items change in forward direction (+), in reverse direction (-)

6.1.3. How to exit

Switch off the power with the [POWER] button on the main unit or the [POWER] button on the remote control.

6.1.4. Contents of adjustment mode

- Value is shown as a hexadecimal number.
- Preset value differs depending on models.
- After entering the adjustment mode, take note of the value in each item before starting adjustment.

Main item	Sub item	Sample Data	Remark
ADJUST	CONTRAST	1EE	
	COLOR	36	
	TINT	00	
	SUB-BRT	800	
	H-POS	0	
	H-AMP	0	
	V-POS	0	
	V-AMP	0	
WB-ADJ	R-CUT	80	
	G-CUT	80	
	B-CUT	80	
	R-DRV	FF	
	G-DRV	E9	
	B-DRV	91	
	ALL-CUT	80	
	ALL-DRV	FF	
OPTION	Panel-Type	50FHD	Factory Preset
	Boot	ROM	
	STBY-SET	00	
	EMERGENCY	ON	
	Y/C Delay	0	
	OPT 1	*1	
	OPT 2	11101110	
	OPT 3	00000001	
	OPT 4	*2	
	EDID-CLK	MID	
	MIRROR	00 (See Option-Mirror)	
	AMR-SELECT	OFF	
VSUS		LOW	See Vsus selection
AGING	ALL WHITE		Built-in test patterns can be displayed.
	ALL BLUE WITH WHITE OUTSIDE FRAME		
	ALL GREEN		
	ALL RED		
	LOW STEP WHITE		
	LOW STEP BLUE		
	LOW STEP GREEN		
	LOW STEP RED		
	WHITE DIAGONAL STRIPE		
	RED DIAGONAL STRIPE		
	GREEN DIAGONAL STRIPE		
	BLUE DIAGONAL STRIPE		
	A-ZONE & B-ZONE		
	1% WINDOW		
	COLOR BAR		
	9 POINTS BRIGHT MEASURE		
	2 DOT OUTSIDE FRAME		
	ALL BLUE		
	DOUBLE FIXED 1% WINDOW		
	VERTICAL LINE SCROLL		
	ON/OFF OR WHITE		
	R/G/B/W ROTATION		
	HALF FIXED ALL WHITE		
	ALL WHITE WITH COUNT DISPLAY		
SRV-TOOL			See Service tool mode

	Destination	TX-P50U30E/J	TX-PR50U30/31
	Check sum	d2a9	d228
*1	OPT1	00000100	10000100
*2	OPT4	00010000	00000000

6.2. Option - Mirror

Picture can be reversed left and right or up and down.

00 : Default (Normal picture is displayed)

01 : Picture is reversed left and right.

02 : Picture is reversed up and down.

00



01



02



Hint : If the defective symptom (e.g. Vertical bar or Horizontal bar) is moved by selection of this mirror, the possible cause is in A-board.

6.3. Service tool mode

6.3.1. How to access

1. Select [SRV-TOOL] in Service Mode.
2. Press [OK] button on the remote control.

SRV-TOOL			
Display of TD2Microcode version →	TD2Microcode:00750004		
Display of Flash ROM maker code →	Flash ROM : AD - F1		
Display of SOS History →	PTCT : 00 . 00 . 00 . 00 . 00	Time 00000:40 On/Off 0000022	POWER ON TIME/COUNT Press [MUTE] button (3 sec)

6.3.2. Display of SOS History

SOS History (Number of LED blinking) indication.

From left side; Last SOS, before Last, three occurrence before, 2nd occurrence after shipment, 1st occurrence after shipment.
This indication will be cleared by [Self-check indication and forced to factory shipment setting].

6.3.3. POWER ON Time, On/Off

Note : To display TIME/COUNT menu, highlight position, then press MUTE for 3 sec.

Time : Cumulative power on time, indicated hour : minute by decimal

On/Off : Number of On/Off switching by decimal

Note : This indication will not be cleared by either of the self-checks or any other command.

6.3.4. Exit

1. Disconnect the AC cord from wall outlet or switch off the power with [Power] button on the main unit.

6.4. Hotel mode

1. Purpose

Restrict a function for hotels.

2. Access command to the Hotel mode setup menu

In order to display the Hotel mode setup menu:

While pressing [VOLUME (-)] button of the main unit, press [AV] button of the remote control three times within 2 seconds.

Then, the Hotel mode setup menu is displayed.

Hotel Mode	
Hotel Mode	Off
Initial INPUT	Off
Initial POS	Off
Initial VOL Level	Off
Maximum VOL Level	100
Button Lock	Off
Remote Lock	Off
Private Information	Keep

Select


 EXIT
 Change
 RETURN

3. To exit the Hotel mode setup menu

Disconnect AC power cord from wall outlet.

4. Explain the Hotel mode setup menu


Item	Function
Hotel Mode	Select hotel mode On/Off
Initial INPUT	Select input signal modes. Set the input, when each time power is switched on. Selection : Off/Analogue/DVB-C/DVB-T/AV1/AV2/COMPONENT/HDMI1/HDMI2 • Off: give priority to a last memory. However, Euro model is compulsorily set to TV. • AVnS/AVnC: only Euro model selectable
Initial POS	Select programme number. Selection : Off/0 to 99 • Off: give priority to a last memory
Initial VOL Level	Adjust the volume when each time power is switched on. Selection/Range : Off/0 to 100 • Off: give priority to a last memory
Maximum VOL Level	Adjust maximum volume. Range : 0 to 100
Button Lock	Select local key conditions. Selection : Off/SETUP/MENU/ALL • Off: altogether valid • SETUP: only F-key is invalid (Tuning guide (menu) can not be selected.) • MENU: only F-key is invalid (only Volume/Mute can be selected.) • ALL: altogether invalid.
Remote Lock	Select remote control key conditions. Selection : Off/SETUP/MENU • Off: altogether valid • SETUP: only Setup menu is invalid • MENU: Picture/Sound/Setup menu are invalid
Private Information	Select private information for VIERA Cast is Keep or Reset if Hotel mode is set to [On] when TV power on. Selection : Keep/Reset • Keep: private information for VIERA Cast is keep • Reset: private information for VIERA Cast is reset

6.5. Data Copy by SD Card

6.5.1. Purpose


(a) Board replacement (Copy the data when exchanging A-board):

When exchanging A-board, the data in original A-board can be copied to SD card and then copy to new A-board.

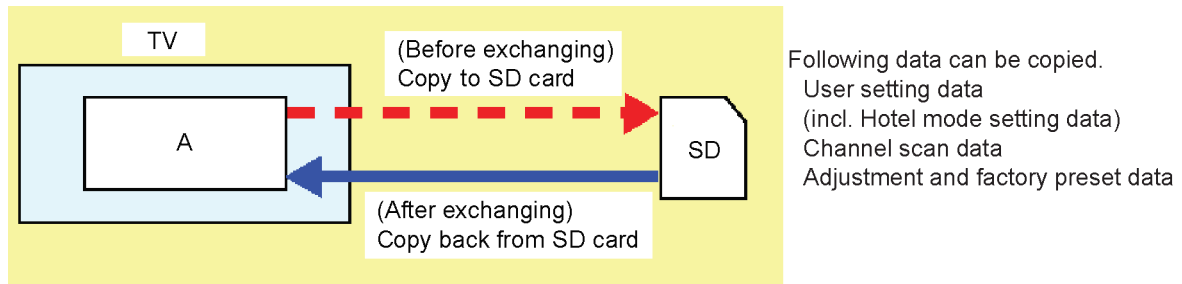

(b) Hotel (Copy the data when installing a number of units in hotel or any facility):

When installing a number of units in hotel or any facility, the data in master TV can be copied to SD card and then copy to other TVs.

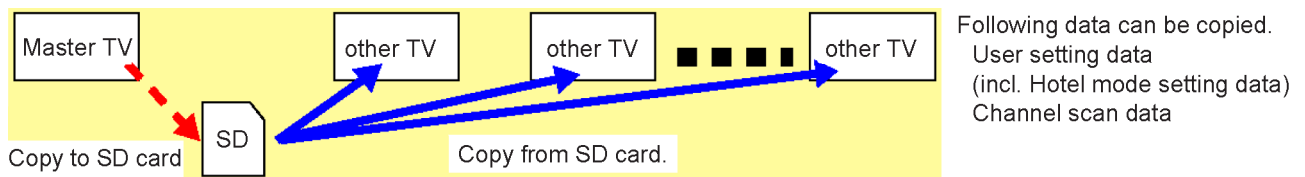

6.5.2. Preparation

Make pwd file as startup file for (a) or (b) in a empty SD card.

1. Insert a empty SD card to your PC.
2. Right-click a blank area in a SD card window, point to New, and then click text document. A new file is created by default (New Text Document.txt).
3. Right-click the new text document that you just created and select rename, and then change the name and extension of the file to the following file name for (a) or (b) and press ENTER.

File name:

- (a) For Board replacement : boardreplace.pwd
- (b) For Hotel : hotel.pwd

Note:

Please make only one file to prevent the operation error.

No any other file should not be in SD card.


6.5.3. Data copy from TV set to SD Card

1. Turn on the TV set.
2. Insert SD card with a startup file (pwd file) to SD slot.
On-screen Display will be appeared according to the startup file automatically.
3. Input a following password for (a) or (b) by using remote control.
(a) For Board replacement : 2770
(b) For Hotel : 4850
Data will be copied from TV set to SD card.
It takes around 2 to 6 minutes maximum for copying.
4. After the completion of copying to SD card, remove SD card from TV set.
5. Turn off the TV set.

Note:

Following new folder will be created in SD card for data from TV set.

- (a) For Board replacement : user_setup
- (b) For Hotel : hotel

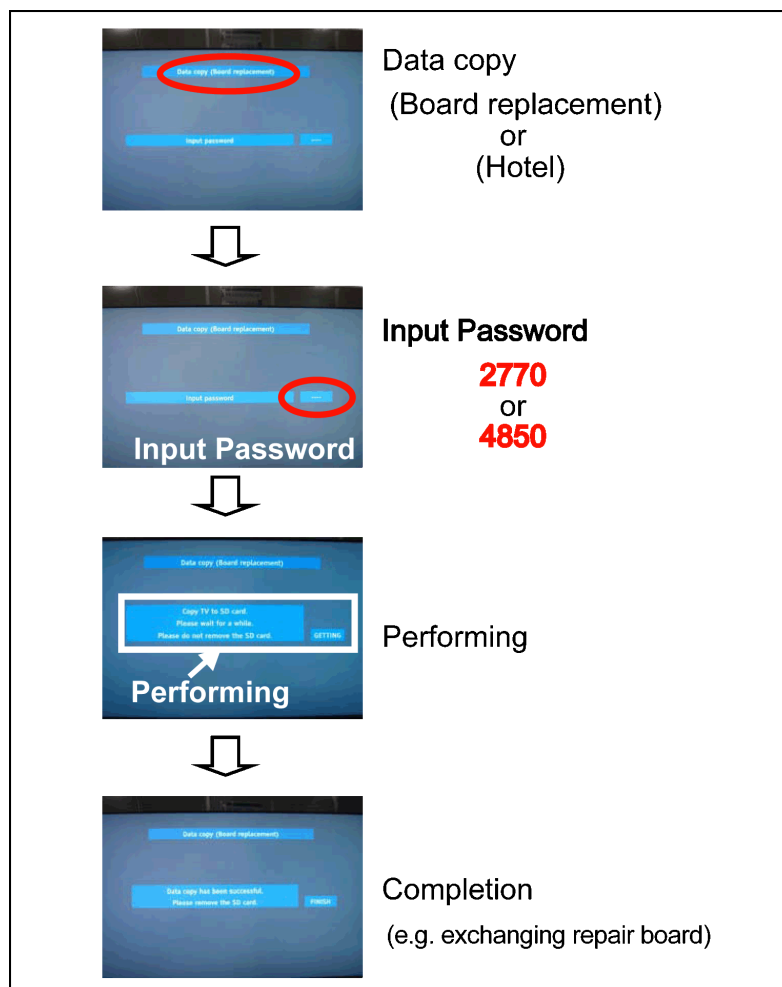


6.5.4. Data copy from SD Card to TV set

1. Turn on the TV set.
2. Insert SD card with Data to SD slot.
On-screen Display will be appeared according to the Data folder automatically.
3. Input a following password for (a) or (b) by using remote control.
(a) For Board replacement : 2771
(b) For Hotel : 4851
Data will be copied from SD card to TV set.
4. After the completion of copying to SD card, remove SD card from TV set.
(a) For Board replacement : Data will be deleted after copying (Limited one copy).
(b) For Hotel : Data will not be deleted and can be used for other TVs.
5. Turn off the TV set.

Note:

1. Depending on the failure of boards, function of Data copy for board replacement does not work.
2. This function can be effective among the same model numbers.

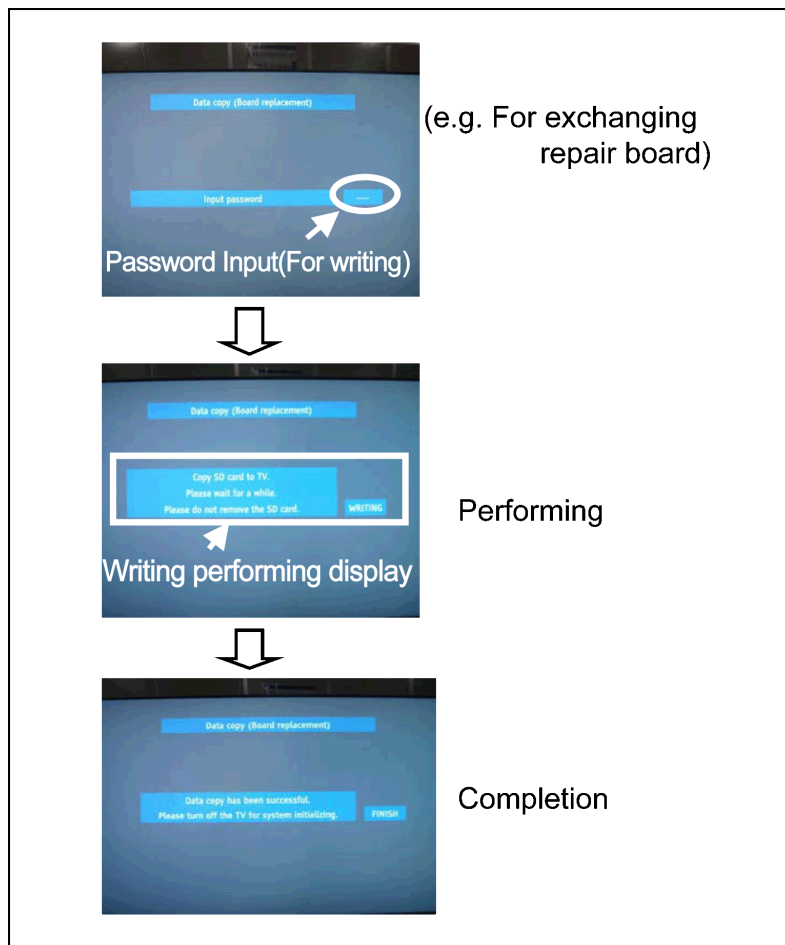

7 Troubleshooting Guide

Use the self-check function to test the unit.

1. Checking the IIC bus lines
2. Power LED Blinking timing

7.1. Check of the IIC bus lines

7.1.1. How to access

7.1.1.1. Self-check indication only:

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [OK] button on the remote control for more than 3 seconds.

7.1.1.2. Self-check indication and forced to factory shipment setting:

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [MENU] button on the remote control for more than 3 seconds.

7.1.2. Screen display

50FHD SET	Panasonic 2011 PDP SELF CHECK COMPLETE
--------------	---

TUN STBY MEM1 MEM2 AVSW PD5 TEMP ID	OK OK OK OK OK OK OK OK	PEAKS-SOFT PEAKS-EEP LSI-PACKAGE LSI-RELEASE STBY-SOFT STBY-EEP STBY-ROMCORR PDP-MCU PDP-EEP PDP-DCC PDP-PDROM	*** *** *** *** *** *** *** *** *** *** *** ***
--	--	--	--

SUM MODEL ID	*** *** ***** *****
-----------------	------------------------------

7.1.3. Check Point

Confirm the following parts if NG was displayed.

DISPLAY	Check Ref. No.	Description	Check P.C.B.
TUN	TU4801	TUNER	A-Board
STBY	IC8000	PEAKS-sLD2 (STM)	A-Board
MEM1	IC8902	PEAKS EEPROM	A-Board
MEM2	IC8901	STM EEPROM	A-Board
AVSW	IC3001	AUDIO/VIDEO SW	A-Board
PD5	IC9300	PD5L	A-Board
TEMP	IC2001	TEMP SENSOR	A-Board
ID			A-Board

7.1.4. Exit

Disconnect the AC cord from wall outlet or switch off the power with [Power] button on the main unit.

7.2. Power LED Blinking timing chart

1. Subject

Information of LED Flashing timing chart.

2. Contents

When an abnormality has occurred the unit, the protection circuit operates and reset to the stand by mode. At this time, the defective block can be identified by the number of blinks of the Power LED on the front panel of the unit.

Blinking Times	Contents	Check point
1	Panel information SOS PD5 Start SOS	-
3	P+ 3.3V SOS	A-Board
4	Power SOS	P-Board
5	P+ 5V SOS	A-Board
6	Driver SOS1 (SC Energy recovery circuit) (A-SC FPC DET)	SC-Board A-SC FPC
7	Driver SOS2 (SU/SD Connector DET) (SU/SD Scan and Logic IC)	SU-Board SD-Board *
8	Driver SOS3 (SS FPC DET) (SS Energy recovery circuit)	SS-Board SS FPC
9	Discharge Control SOS	A-Board
10	Sub 5V SOS Sub 3.3V SOS BE (sLD) SOS Tuner power SOS	A-Board SC-Board SS-Board P-Board
12	Sound SOS	A-Board Speaker
13	Emergency SOS	A-Board


*Use SC jig to isolate the board.

7.3. No Power


First check point

There are following 3 states of No Power indication by power LED.


1. No lit
2. Green is lit then turns red blinking a few seconds later. (See 7.2.)
3. Only red is lit.

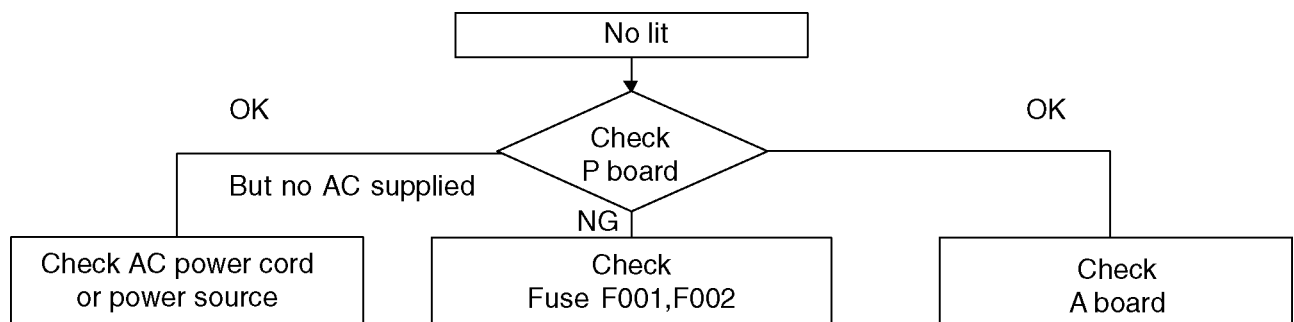

7.4. No Picture

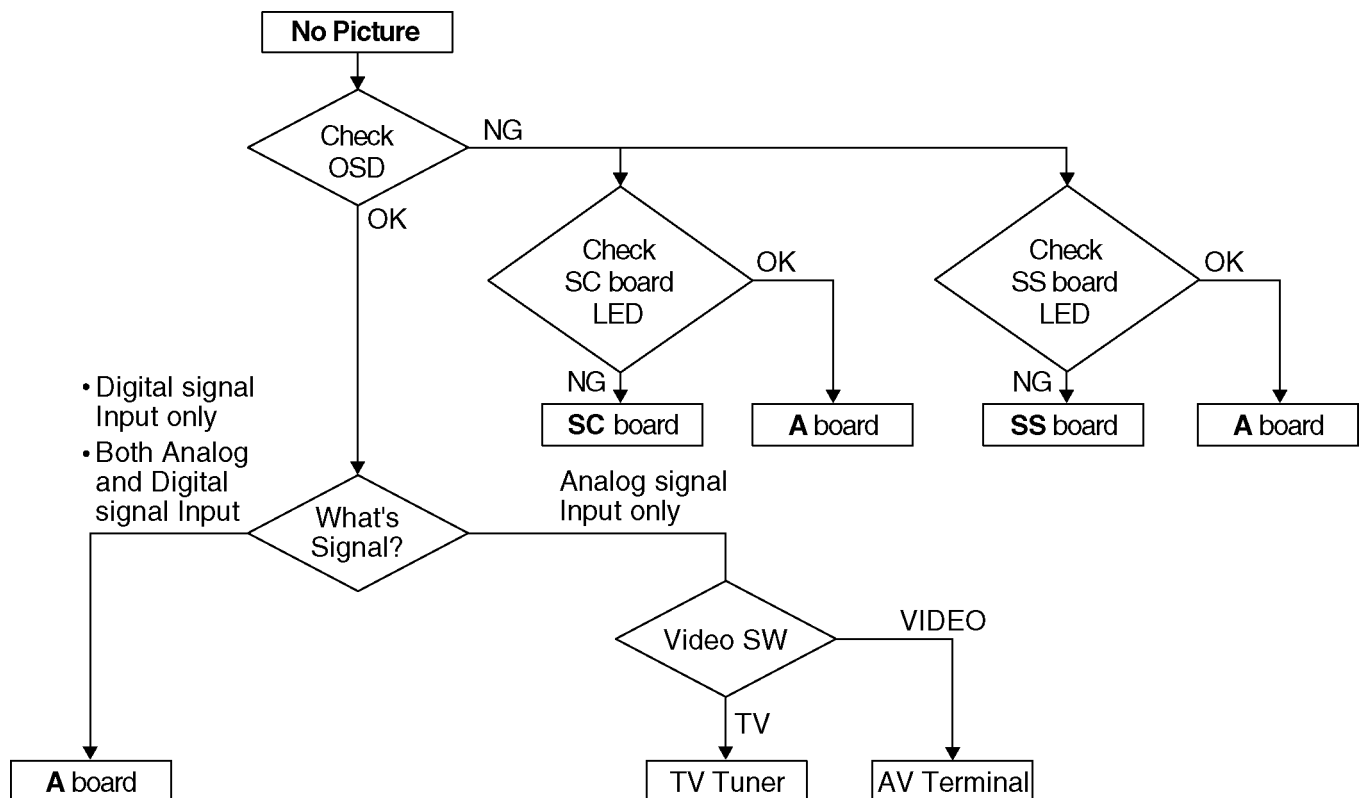

Drive circuits LED indicator

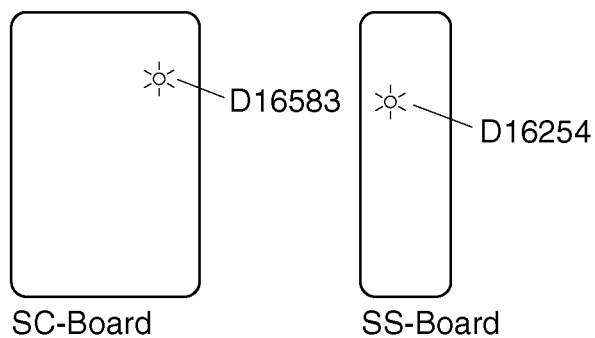

7.5. Local screen failure

Plasma display may have local area failure on the screen. Fig-1 is the possible defect P.C.B. for each local area.

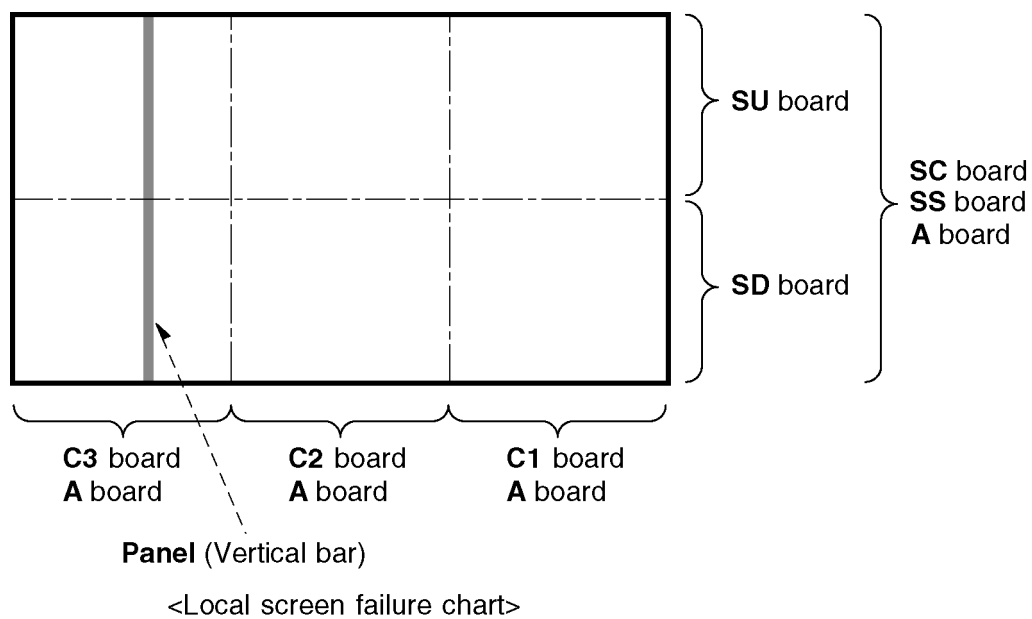


Fig-1

8 Service Fixture & Tools

8.1. SC jig

Purpose:

To find the failure board (SC or SU/SD) when the power LED is blinking 7 times.

SC jig:

Jumper connector to connect to SC50 connector on SC board

Part number:


TZSC09187

How to use:

Caution: Remove SC jig from SC board after inspection.

1. Remove all connector between SC board and SU/SD board to isolate SC board from both SU and SD board electrically.
Note: The board will be damaged if all connector is not removed (for example; remove connector only for SU board and stay connecting with SD board. The board will be damaged.)
2. Connect SC jig to connector SC50 at left bottom side of SC board
3. Turn on the TV/Display Unit and confirm the power LED blinking.
LED blinking: Possible cause of failure is in SC board
No LED blinking (Lighting or no lighting): Possible cause of failure is in SU or SD board
4. After inspection, turn off the TV/Display Unit and wait a few minutes to discharge.
5. Remove SC jig from SC board.

Remark: This SC jig can be used for all 2011 Plasma TV and Plasma Display.

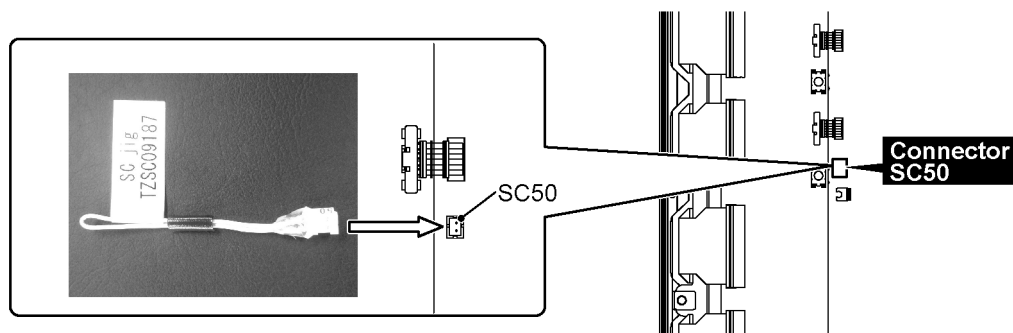

9 Disassembly and Assembly Instructions

9.1. Remove the Rear cover


1. See PCB Layout (Section 3)

9.2. Remove the AC inlet

Caution:

To remove P.C.B. wait 1 minute after power was off for discharge from electrolysis capacitors.

1. Disconnect the connector (P9).
2. Remove the screw (×1 ➡) and remove the AC inlet.

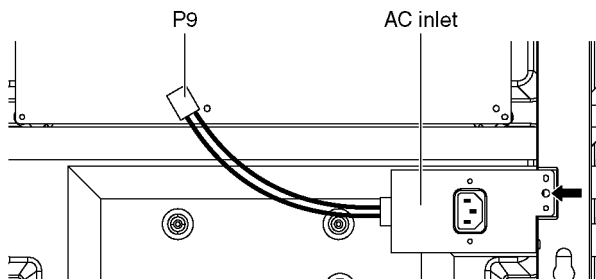


9.3. Remove the P-Board

Caution:


To remove P.C.B. wait 1 minute after power was off for discharge from electrolysis capacitors.

1. Disconnect the connectors (P2, P6, P9, P11, P34 and P35).
2. Remove the screws (×5 ➡) and remove the P-Board.

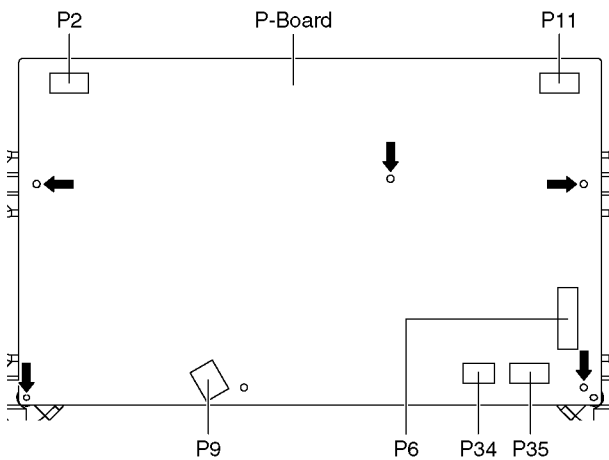


9.4. Remove the Side terminal cover

1. Remove the screws (×2 ➡).
2. Remove the Side terminal cover.

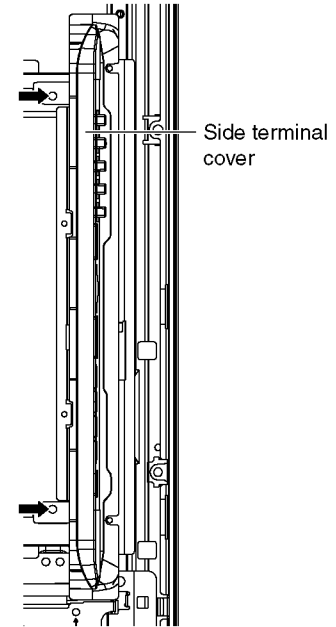


9.5. Remove the Tuner unit

1. Remove the Side terminal cover. (See section 9.4.)
2. Unlock the cable clampers to free the cable.
3. Disconnect the connectors (A1, A6, A11 and A35).
4. Disconnect the flexible cables (A20, A31 and A32).
5. Remove the screws (×3 ➡) and remove the Tuner unit.

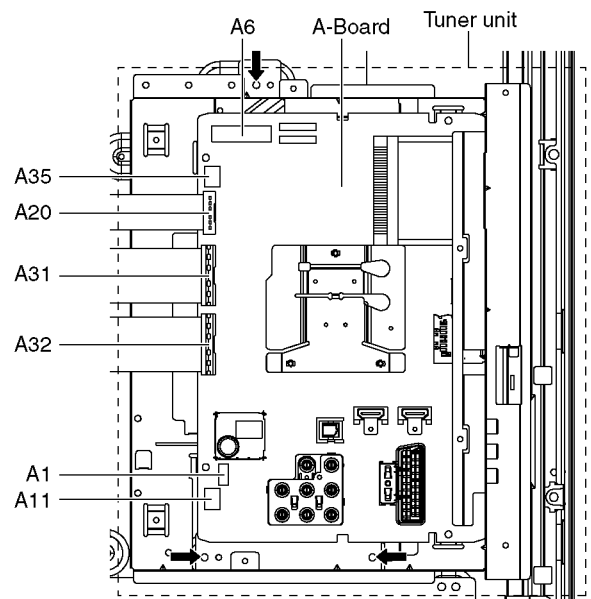


9.6. Remove the A-Board

1. Remove the Tuner unit. (See section 9.5.)
2. Remove the screws (×2 ➡) and remove the A-Board.

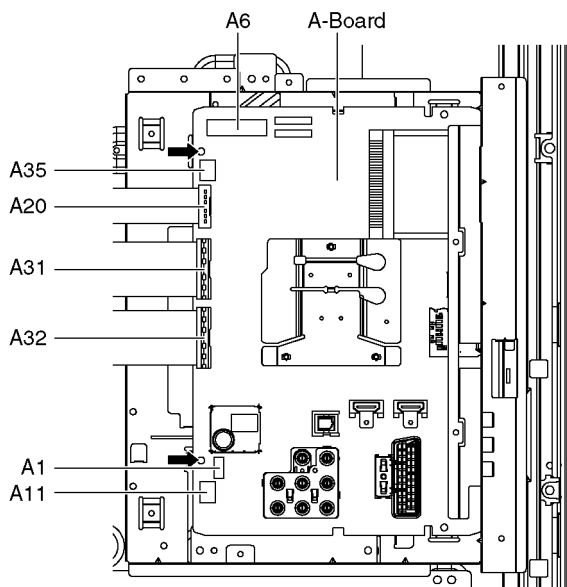


9.7. Remove the Speakers

1. Unlock the cable claspers to free the cable.
2. Disconnect the Speaker terminal.
3. Remove the screws (×2 ➡ each) and remove the Speakers (L, R).

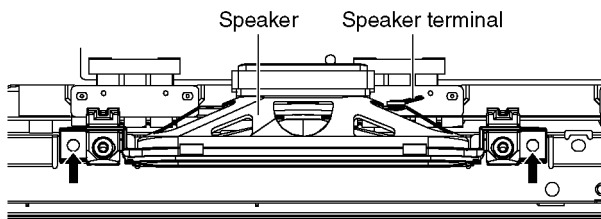


9.8. Remove the SU-Board

1. Disconnect the flexible cables (SU1, SU2, SU3, SU4 and SU5) connected to the SU-Board.
2. Disconnect the flexible cable (SU11-SD11) and the bridge connector (SC41-SU41).
3. Remove the screws (×2 ➡, ×2 ⇨) and remove the SU-Board.

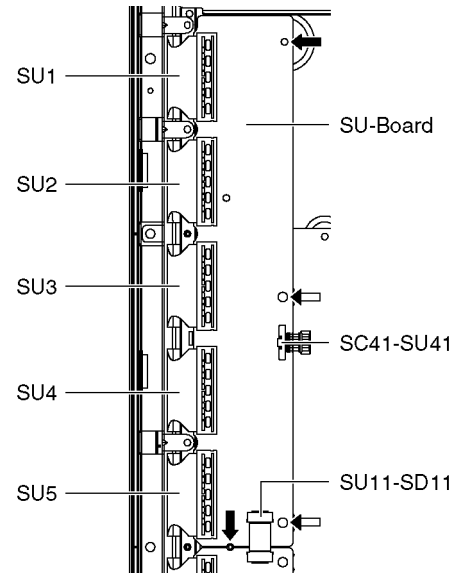


9.9. Remove the SD-Board

1. Disconnect the flexible cables (SD1, SD2, SD3, SD4 and SD5) connected to the SD-Board.
2. Disconnect the flexible cable (SU11-SD11) and the bridge connectors (SC42-SD42 and SC46-SD46).
3. Remove the screws (×2 ➡, ×2 ⇨) and remove the SD-Board.

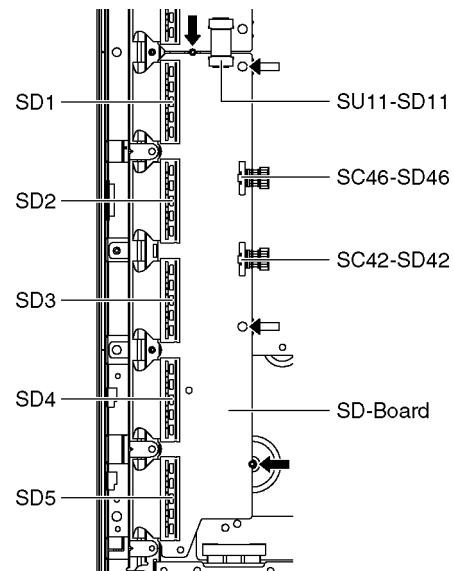


9.10. Remove the SC-Board

1. Remove the SU-Board and SD-Board. (See section 9.8. and 9.9.)
2. Disconnect the connector (SC2).
3. Disconnect the flexible cable (SC20).
4. Remove the screws (×7 ➡) and remove the SC-Board.

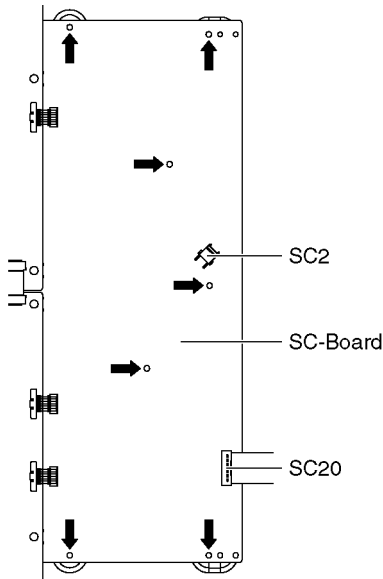


9.11. Remove the SS-Board

1. Remove the Tuner unit. (See section 9.5.)
2. Disconnect the connector (SS11).
3. Disconnect the flexible cable (SS33).
4. Disconnect the flexible cables (SS53, SS54 and SS56).
5. Remove the screws (×5 ➡) and remove the SS-Board.

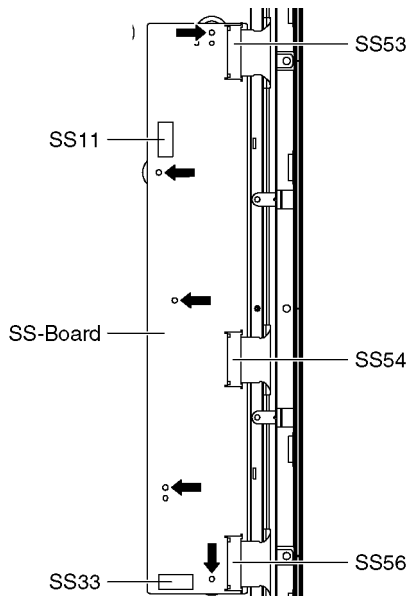


9.12. Remove the Stand bracket and the Hanger metals

1. Remove the Plasma panel section from the servicing stand and lay on a flat surface such as a table (covered by a soft cloth) with the Plasma panel surface facing downward.
2. Unlock the cable claspers to free the cable.
3. Remove the AC inlet. (See section 9.2.)
4. Remove the Stand bracket fastening screws (×5 ➡) and remove the Stand bracket.

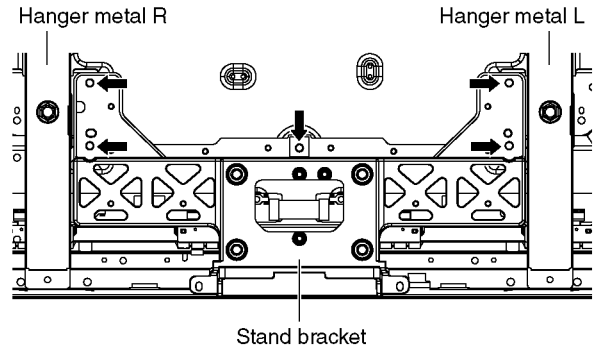


5. Remove the Hanger metals (L, R) fastening screws (×2 ➡ each) and remove the Hanger metals (L, R).

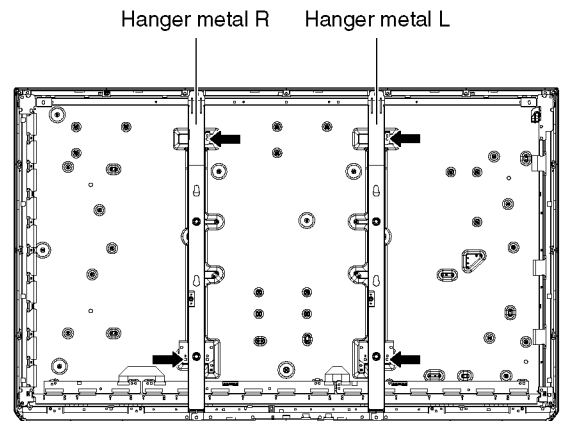


9.13. Remove the C1-Board

1. Disconnect the flexible cables (CB1, CB2 and CB3).
2. Disconnect the flexible cable (C10).
3. Remove the screws (×3 ➡) and remove the C1-Board.

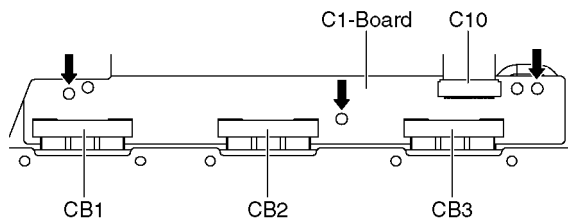


9.14. Remove the C2-Board

1. Remove the Stand bracket and the Hanger metal R. (See section 9.12.)
2. Disconnect the flexible cables (CB4, CB5, CB6, CB7, CB8 and CB9).
3. Disconnect the flexible cables (C20, C21 and C26).
4. Remove the screws (×4 ➡) and remove the C2-Board.

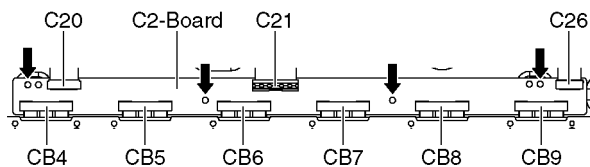


9.15. Remove the C3-Board

1. Remove the Stand bracket and the Hanger metal L. (See section 9.12.)
2. Disconnect the flexible cables (CB10, CB11, CB12, CB13, CB14 and CB15).
3. Disconnect the flexible cables (C31, C33 and C36).
4. Disconnect the connector (C35).
5. Remove the screws (×4 ➡) and remove the C3-Board.

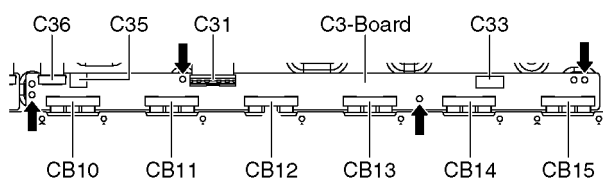


9.16. Remove the Plasma panel section from the Cabinet assy

1. Remove the Plasma panel fastening screws (×4 ➡) and remove the Cabinet assy.

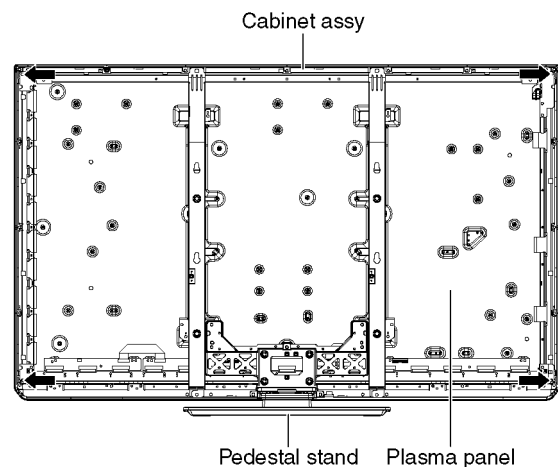


2. For leaving the Cabinet assy from the Plasma panel, pull the bottom of the Cabinet assy forward, lift, and remove.

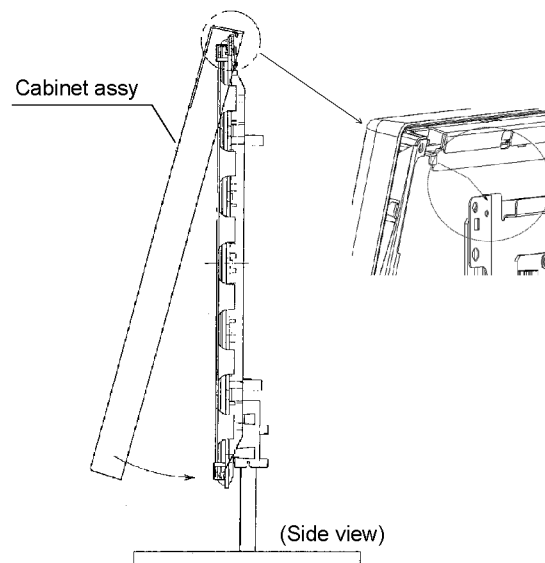


9.17. Remove the Radiator plate

1. Remove the Stand bracket and the Hanger metals. (See section 9.12.)
2. Remove the screws (×15 ➡) and remove the Radiator plate.




9.18. Remove the Attachment metal bottom

1. Remove the Radiator plate. (See section 9.17.)
2. Remove the screws (×1 ➡ each) and remove the Attachment metal bottom (L, R).

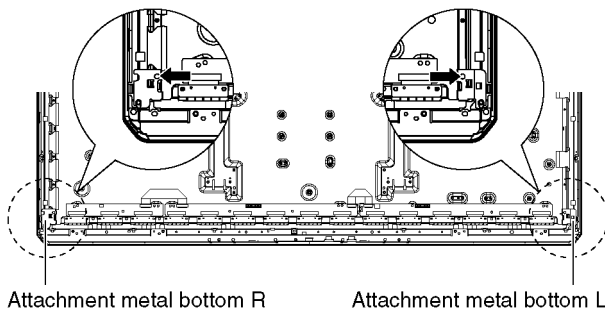


9.19. Remove the Attachment metal top

1. Remove the Cabinet assy. (See section 9.16.)
2. Remove the screws (×3 ➡, ×2 ⇨) and remove the Attachment metal top (L, R).

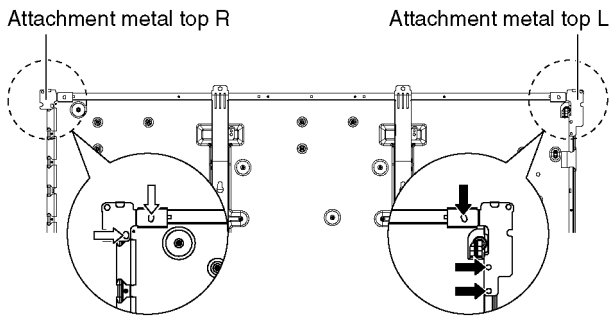


9.20. Remove the Glass holders

1. Remove the Cabinet assy. (See section 9.16.)
2. Remove the screws (×7 ⇨).
3. Remove the Glass holder top.
4. Remove the screws (×7 ➡).
5. Remove the Glass holder bottom.
6. Remove the screws (×4 ➡).
7. Remove the Glass holder side (L, R).

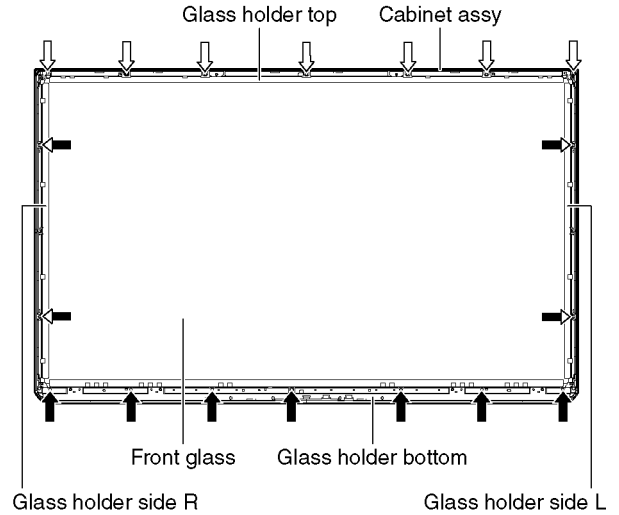

9.21. Remove the K-Board

1. Remove the Glass holder bottom. (See section 9.20.)
2. Remove the claw (×1 ⇨).
3. Disconnect the connector (K1) and Remove the K-Board from LED Panel.

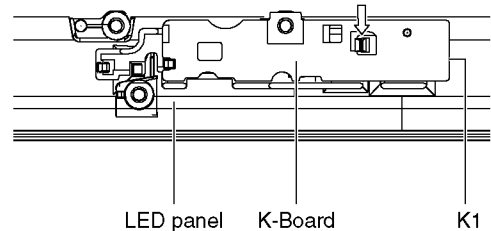

9.22. Replace the Plasma panel

Caution:

A new Plasma panel itself without Hanger metals is fragile.

To avoid the damage to new Plasma panel, carry a new Plasma panel taking hold of the Hanger metals after assembling the Hanger metals and the Stand bracket.

1. Place a carton box packed a new Plasma panel on the flat surface of the work bench.
2. Open a box and without taking a new Plasma panel;
Attach the C1-Board, C2-Board and the C3-Board, connect the flexible cables from the Plasma panel to the C1-Board, C2-Board and the C3-Board, and fit the Flexible cable holders.
3. Attach the Hanger metals and the Stand bracket to the new Plasma panel.
4. Place the Plasma panel on the servicing stand taking hold of the Hanger metals.
5. Attach the Cabinet assy and each P.C.Board and so on, to the new Plasma panel.

***When fitting the Cabinet assy, be careful not to allow any debris, dust or handling residue to remain between the Front glass and Plasma panel.**

10 Measurements and Adjustments

10.1. Adjustment

10.1.1. Vsus selection


Caution:

When Plasma panel or A-board is replaced, Vsus should be set to LOW.

Procedure

1. Go into main item [VSUS] in Service Mode. LOW will be displayed.
2. Press [OK] button to go to TEST stage.
White pattern without On-Screen Display will be displayed during TEST and CONF stage. Press [5] button to display the On-Screen Display.
3. In LOW setting
If no several dead pixel is visible remarkably in white pattern, press [3] button to go to CONF stage.
4. Press [OK] button in CONF stage to store LOW.
5. Exit Service Mode by pressing [Power] button.

Vsus selection in Service mode

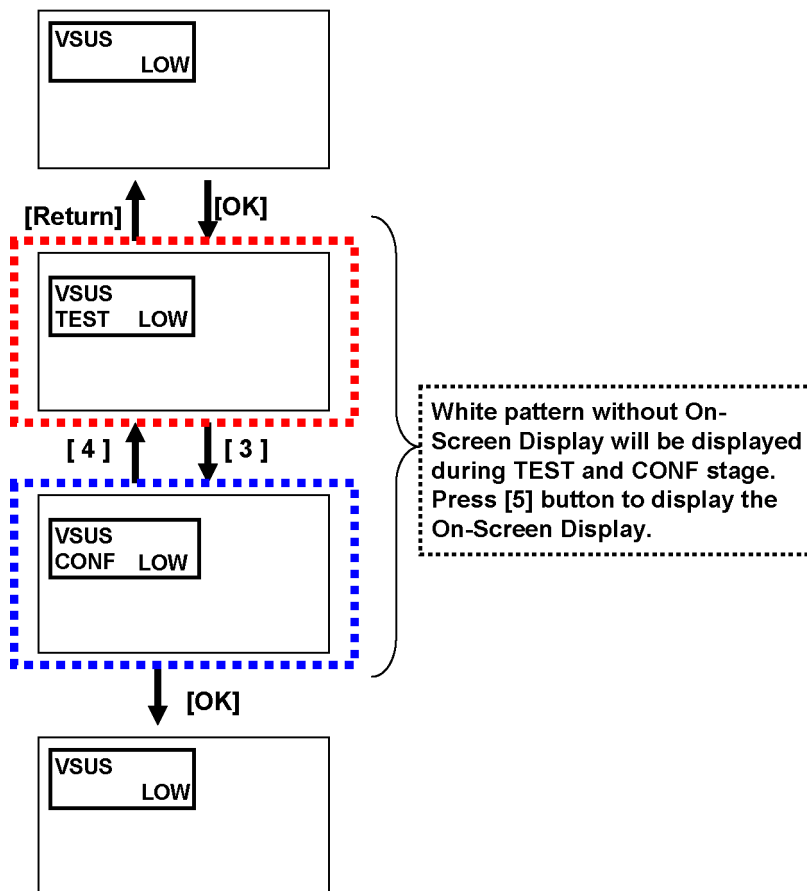

10.1.2. Sub-Contrast adjustment

Name of measuring instrument	Connection	Remarks
RF generator Base Band signal generator HD signal generator		
Steps		Remarks
Connect IIC cable (bus controller-cable) after banner OSD appear. And after SRQ-L, begin an adjustment 2 seconds later. Adjustment of TV (RF system) Note: In adjustment, you must setting to modulation of signal at 90%. 1. Receive a RF PAL 100% Full White or Split Colour bar shown as below. 2. Goes into service mode. 3. Push a [1] or [2] key, and goes into adjustment mode for [CONTRAST]. Adjustment 1. The colour key yellow button of remote control is pushed. 2. The OSD character of sub-contrast becomes red. (Inside under automatic adjustment) 3. The OSD character of sub-contrast returns to black. When [NG] is displayed, adjustment failure. 4. End.		Note: Sub-contrast adjustment is unadjusted for AV/ HD input. But, when needing the adjustment chosen manually, please refer to [alternative method].

Steps	Remarks
<u>Another procedure</u> Connect IIC cable (bus controller-cable) after banner OSD appear. And after SRQ-L, begin an adjustment 2 seconds later. Adjustment of AV system 1. PAL 100% Full White or Split Colour bar receive AV1(or AV2), shown as below. 2. Goes into service mode. 3. Push [1] or [2] key, and goes into adjustment mode for [Contrast]. Adjustment 1. The colour key yellow button of remote control is pushed. 2. The OSD character of sub-contrast becomes red. (Inside under automatic adjustment) 3. The OSD character of sub-contrast returns to black. When [NG] is displayed, adjustment failure. 4. End.	

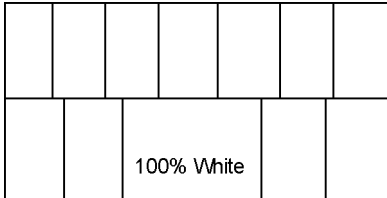
Steps	Remarks
Another procedure Connect IIC cable (bus controller-cable) after banner OSD appear. And after SRQ-L, begin an adjustment 2 seconds later. Adjustment of HD system 1. At 1080i 100% Full White or Split colour bar receive component signal, as shown below.  2. Goes into service mode. 3. Push [1] or [2] key, and goes into adjustment mode for [Contrast]. Adjustment 1. The colour key yellow button of remote control is pushed. 2. The OSD character of sub-contrast becomes red. (Inside under automatic adjustment) 3. The OSD character of sub-contrast returns to black. When [NG] is displayed, adjustment failure. 4. End.	

Table1, Sub-contrast Adustment initial data in Peaks EEPROM

06E0	Y Gain Standard for NTSC-G:RF (L)	Setting data
06E1	Y Gain Standard for NTSC-G:RF (H)	
06E2	Y Gain Standard for PAL-G:RF (L)	
06E3	Y Gain Standard for PAL-G:RF (H)	
06E4	Y Gain Standard for NTSC-G:ELSE (L)	
06E5	Y Gain Standard for NTSC-G:ELSE (H)	
06E6	Y Gain Standard for PAL-G:ELSE (L)	
06E7	Y Gain Standard for PAL-G:ELSE (H)	
06E8	Y Gain Standard for YUV (L)	
06E9	Y Gain Standard for YUV (H)	

10.1.3. White balance adjustment

The adjusting method is different according to the PEAKS EEPROM version.

[copy adjustment] : Peaks EEPROM ver.1.00-

[Differential and copy adjustment] : Peaks EEPROM ver.1.01-

Name of measuring instrument	Connection	Remarks
W/ B pattern Color analyzer (Minolta CA-100 or equivalent)	Panel surface	
Steps		Remarks
[copy adjustment] Connect IIC cable (bus controller-cable) after banner OSD appear. And after SRQ-L, begin an adjustment 2 seconds later. • Make sure the front panel to be used on the final set is fitted. • Make sure a color signal is not being shown before adjustment. • Put the color analyzer where there is little colour variation. Note: Copy Adjustment method in service mode. When you push [OK] key in each item, Adjustment data is copied between HD data and SD data.		Picture menu : Dynamic ASPECT : 16:9 Condition is same at alternative method too.
1. Enter the service mode. Please receive the Analog-RF. Or, please select CVBS/YUV/HDMI. (No inputting is possible.) (Forbid Analog-RF with no signal.) 2. A number key [1] or [2] are operated and [WB-ADJ] is displayed. Check that the color temp is [COOL]. 3. A number key [0] is operated and select [METHOD 01]. 4. A number key [5] is operated and [INNER PATTERN] is displayed. INNER PATTERN 5. Select [G-CUTOFF] item, using the number-key [3] or [4], and set to [80], using the volume-key [+] or [-]. Also, [B-CUTOFF] and [R-CUTOFF] set to [80]. 6. Set [G-DRIVE] at [D0]. 7. Touch the signal receiver of color analyzer to the INNER PATTERN center, and adjust B drive and R drive so x, y become the [COLOR TEMP COOL] in the below table1. 8. All RGB drive increase so that the maximum drive value of RGB may become [FF]. ([ALL-DRIVE] set to [FF].) 9. Set color temp to [NORMAL] using [7] key. 10. Fix G-CUTOFF, B-CUTOFF and R-CUTOFF at [80]. 11. Set [G-DRIVE] at [D0]. 12. Adjust B-DRIVE and R-DRIVE so the INNER PATTERN x, y become the [COLOR TEMP NORMAL] in the below table1. 13. All RGB drive increase so that the maximum drive value of RGB may become [FF]. ([ALL-DRIVE] set to [FF].) 14. Set color temp to [WARM] using [7] key. 15. Fix G-CUTOFF, B-CUTOFF and R-CUTOFF at [80]. 16. Set [G-DRIVE] at [D0]. 17. Adjust B-DRIVE and R-DRIVE so the INNER PATTERN x, y become the [COLOR TEMP WARM] in the below table1. 18. All RGB drive increase so that the maximum drive value of RGB may become [FF]. ([ALL-DRIVE] set to [FF].) 19. Confirm [METHOD=01]. Please refer table2-3 to address. Asking matter to execute white balance difference adjustment. Please feed back the DAC value in the adjusted each color temperature in an internal pattern.		METHOD=01 copy adjustments

Steps	Remarks
[Differential and copy adjustment] Execute adjustment for color temp. [NORMAL], and set data for color temp. [COOL], [WARM] by data shift WB of HD (or PAL) copies the adjustment data from an adjusted format side. Note: The adjustment does only color temp. [NORMAL]. A adjustment value difference from [NORMAL] is written to EEPROM as for [COOL] and [WARM] by operating a [OK] key. As for WB of HD (or RF), the adjustment data from an adjusted format side is copied simultaneously. Text color of the adjusted value changes into red → black at the same time too.	
1. Enter the service mode. Please receive the Analog-RF. Or, please select CVBS/YUV/HDMI. (No inputting is possible.). (Forbid Analog-RF with no signal.) 2. A number key [1] and [2] are operated and [WB-ADJ] is displayed. Check that the color temp is [NORMAL]. 3. A number key [0] is operated and select [METHOD 03]. 4. A number key [5] is operated and [INNER PATTERN] is displayed. INNER PATTERN 5. Select [G-CUTOFF] item, using the number-key [3] or [4], and set to [80], using the volume-key [+] or [-]. Also, [B-CUTOFF] and [R-CUTOFF] set to [80]. 6. Set [G-DRIVE] at [D0]. 7. Touch the signal receiver of color analyzer to the INNER PATTERN center, and adjust B drive and R drive so x, y become the [COLOR TEMP NORMAL] in the table 1. 8. All RGB drive increase so that the maximum drive value of RGB may become [FF]. ([ALL-DRIVE] set to [FF].) 9. A number key [0] is operated and select [METHOD=01]. Please refer table2-3 to address.	METHOD=03 Differential and copy adjustment

Table 1-1, Color temp. target value (This data is target data by CA-100 PAVCCZ.)

COLOR TEMP	x	y
COOL	0.277	0.286
NORMAL	0.300	0.321
WARM	0.314	0.338

Table 1-2, Color temp. target value (This data is target data by CS-2000 PAVCCZ.)

COLOR TEMP	x	y
COOL	0.277	0.279
NORMAL	0.299	0.314
WARM	0.313	0.329

Table 2, Peaks EEP addresses (adjustment data)


signal / temp	Meaning of value	address
SD High	R-Cutoff for SD High	A0-070c
	G-Cutoff for SD High	A0-070d
	B-Cutoff for SD High	A0-070e
	R-Drive for SD High	A0-070f
	G-Drive for SD High	A0-0710
	B-Drive for SD High	A0-0711
SD Middle	R-Cutoff for SD Middle	A0-0712
	G-Cutoff for SD Middle	A0-0713
	B-Cutoff for SD Middle	A0-0714
	R-Drive for SD Middle	A0-0715
	G-Drive for SD Middle	A0-0716
	B-Drive for SD Middle	A0-0717
SD Low	R-Cutoff for SD Low	A0-0718
	G-Cutoff for SD Low	A0-0719
	B-Cutoff for SD Low	A0-071a
	R-Drive for SD Low	A0-071b
	G-Drive for SD Low	A0-071c
	B-Drive for SD Low	A0-071d
HD High	R-Cutoff for HD High	A0-071e
	G-Cutoff for HD High	A0-071f
	B-Cutoff for HD High	A0-0720
	R-Drive for HD High	A0-0721
	G-Drive for HD High	A0-0722
	B-Drive for HD High	A0-0723
HD Middle	R-Cutoff for HD Middle	A0-0724
	G-Cutoff for HD Middle	A0-0725
	B-Cutoff for HD Middle	A0-0726
	R-Drive for HD Middle	A0-0727
	G-Drive for HD Middle	A0-0728
	B-Drive for HD Middle	A0-0729
HD Low	R-Cutoff for HD Low	A0-072a
	G-Cutoff for HD Low	A0-072b
	B-Cutoff for HD Low	A0-072c
	R-Drive for HD Low	A0-072d
	G-Drive for HD Low	A0-072e
	B-Drive for HD Low	A0-072f

Table 3, Peaks EEP addresses (DIFF setting)


signal / temp	Meaning of value	address
SD High	R-Cutoff difference for SD High	A0-0730
	G-Cutoff difference for SD High	A0-0731
	B-Cutoff difference for SD High	A0-0732
	R-Drive difference for SD High	A0-0733
	G-Drive difference for SD High	A0-0734
	B-Drive difference for SD High	A0-0735
SD Middle	R-Cutoff difference for SD Middle	A0-0736
	G-Cutoff difference for SD Middle	A0-0737
	B-Cutoff difference for SD Middle	A0-0738
	R-Drive difference for SD Middle	A0-0739
	G-Drive difference for SD Middle	A0-073a
	B-Drive difference for SD Middle	A0-073b
SD Low	R-Cutoff difference for SD Low	A0-073c
	G-Cutoff difference for SD Low	A0-073d
	B-Cutoff difference for SD Low	A0-073e
	R-Drive difference for SD Low	A0-073f
	G-Drive difference for SD Low	A0-0740
	B-Drive difference for SD Low	A0-0741
HD High	R-Cutoff difference for HD High	A0-0742
	G-Cutoff difference for HD High	A0-0743
	B-Cutoff difference for HD High	A0-0744
	R-Drive difference for HD High	A0-0745
	G-Drive difference for HD High	A0-0746
	B-Drive difference for HD High	A0-0747
HD Middle	R-Cutoff difference for HD Middle	A0-0748
	G-Cutoff difference for HD Middle	A0-0749
	B-Cutoff difference for HD Middle	A0-074a
	R-Drive difference for HD Middle	A0-074b
	G-Drive difference for HD Middle	A0-074c
	B-Drive difference for HD Middle	A0-074d
HD Low	R-Cutoff difference for HD Low	A0-074e
	G-Cutoff difference for HD Low	A0-074f
	B-Cutoff difference for HD Low	A0-0750
	R-Drive difference for HD Low	A0-0751
	G-Drive difference for HD Low	A0-0752
	B-Drive difference for HD Low	A0-0753

11 Block Diagram


11.1. Main Block Diagram

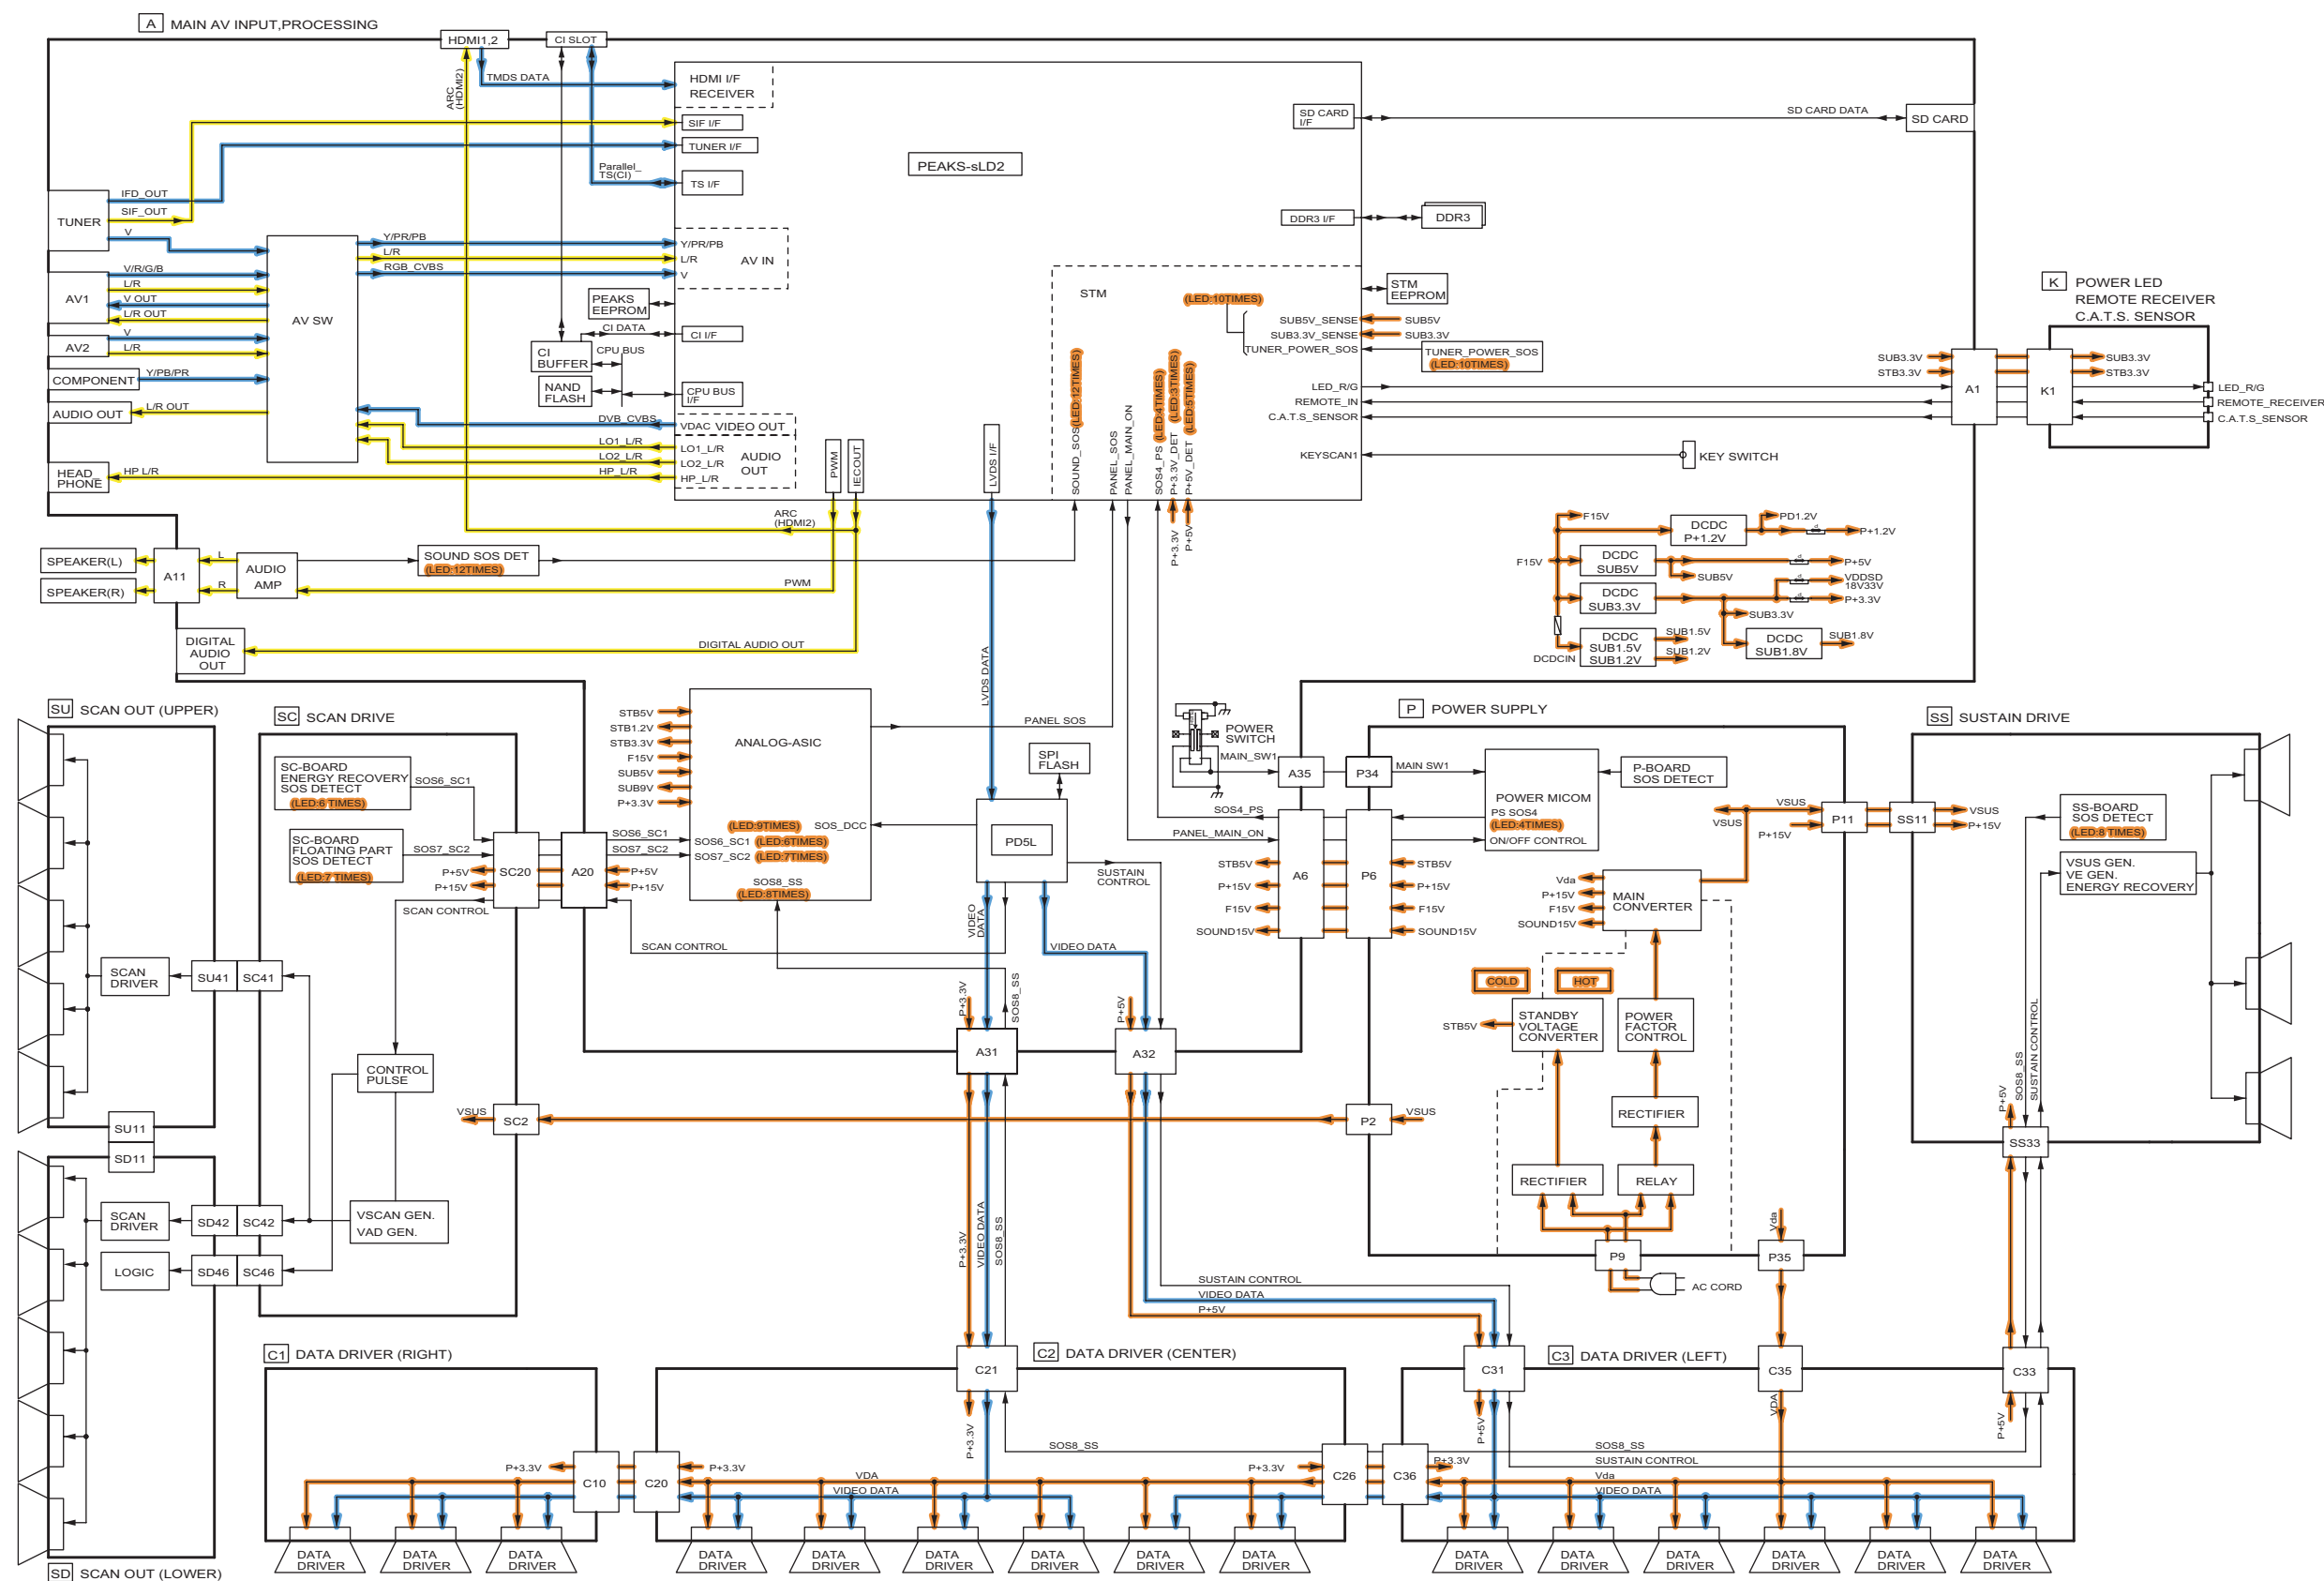


11.2. Block (1/4) Diagram

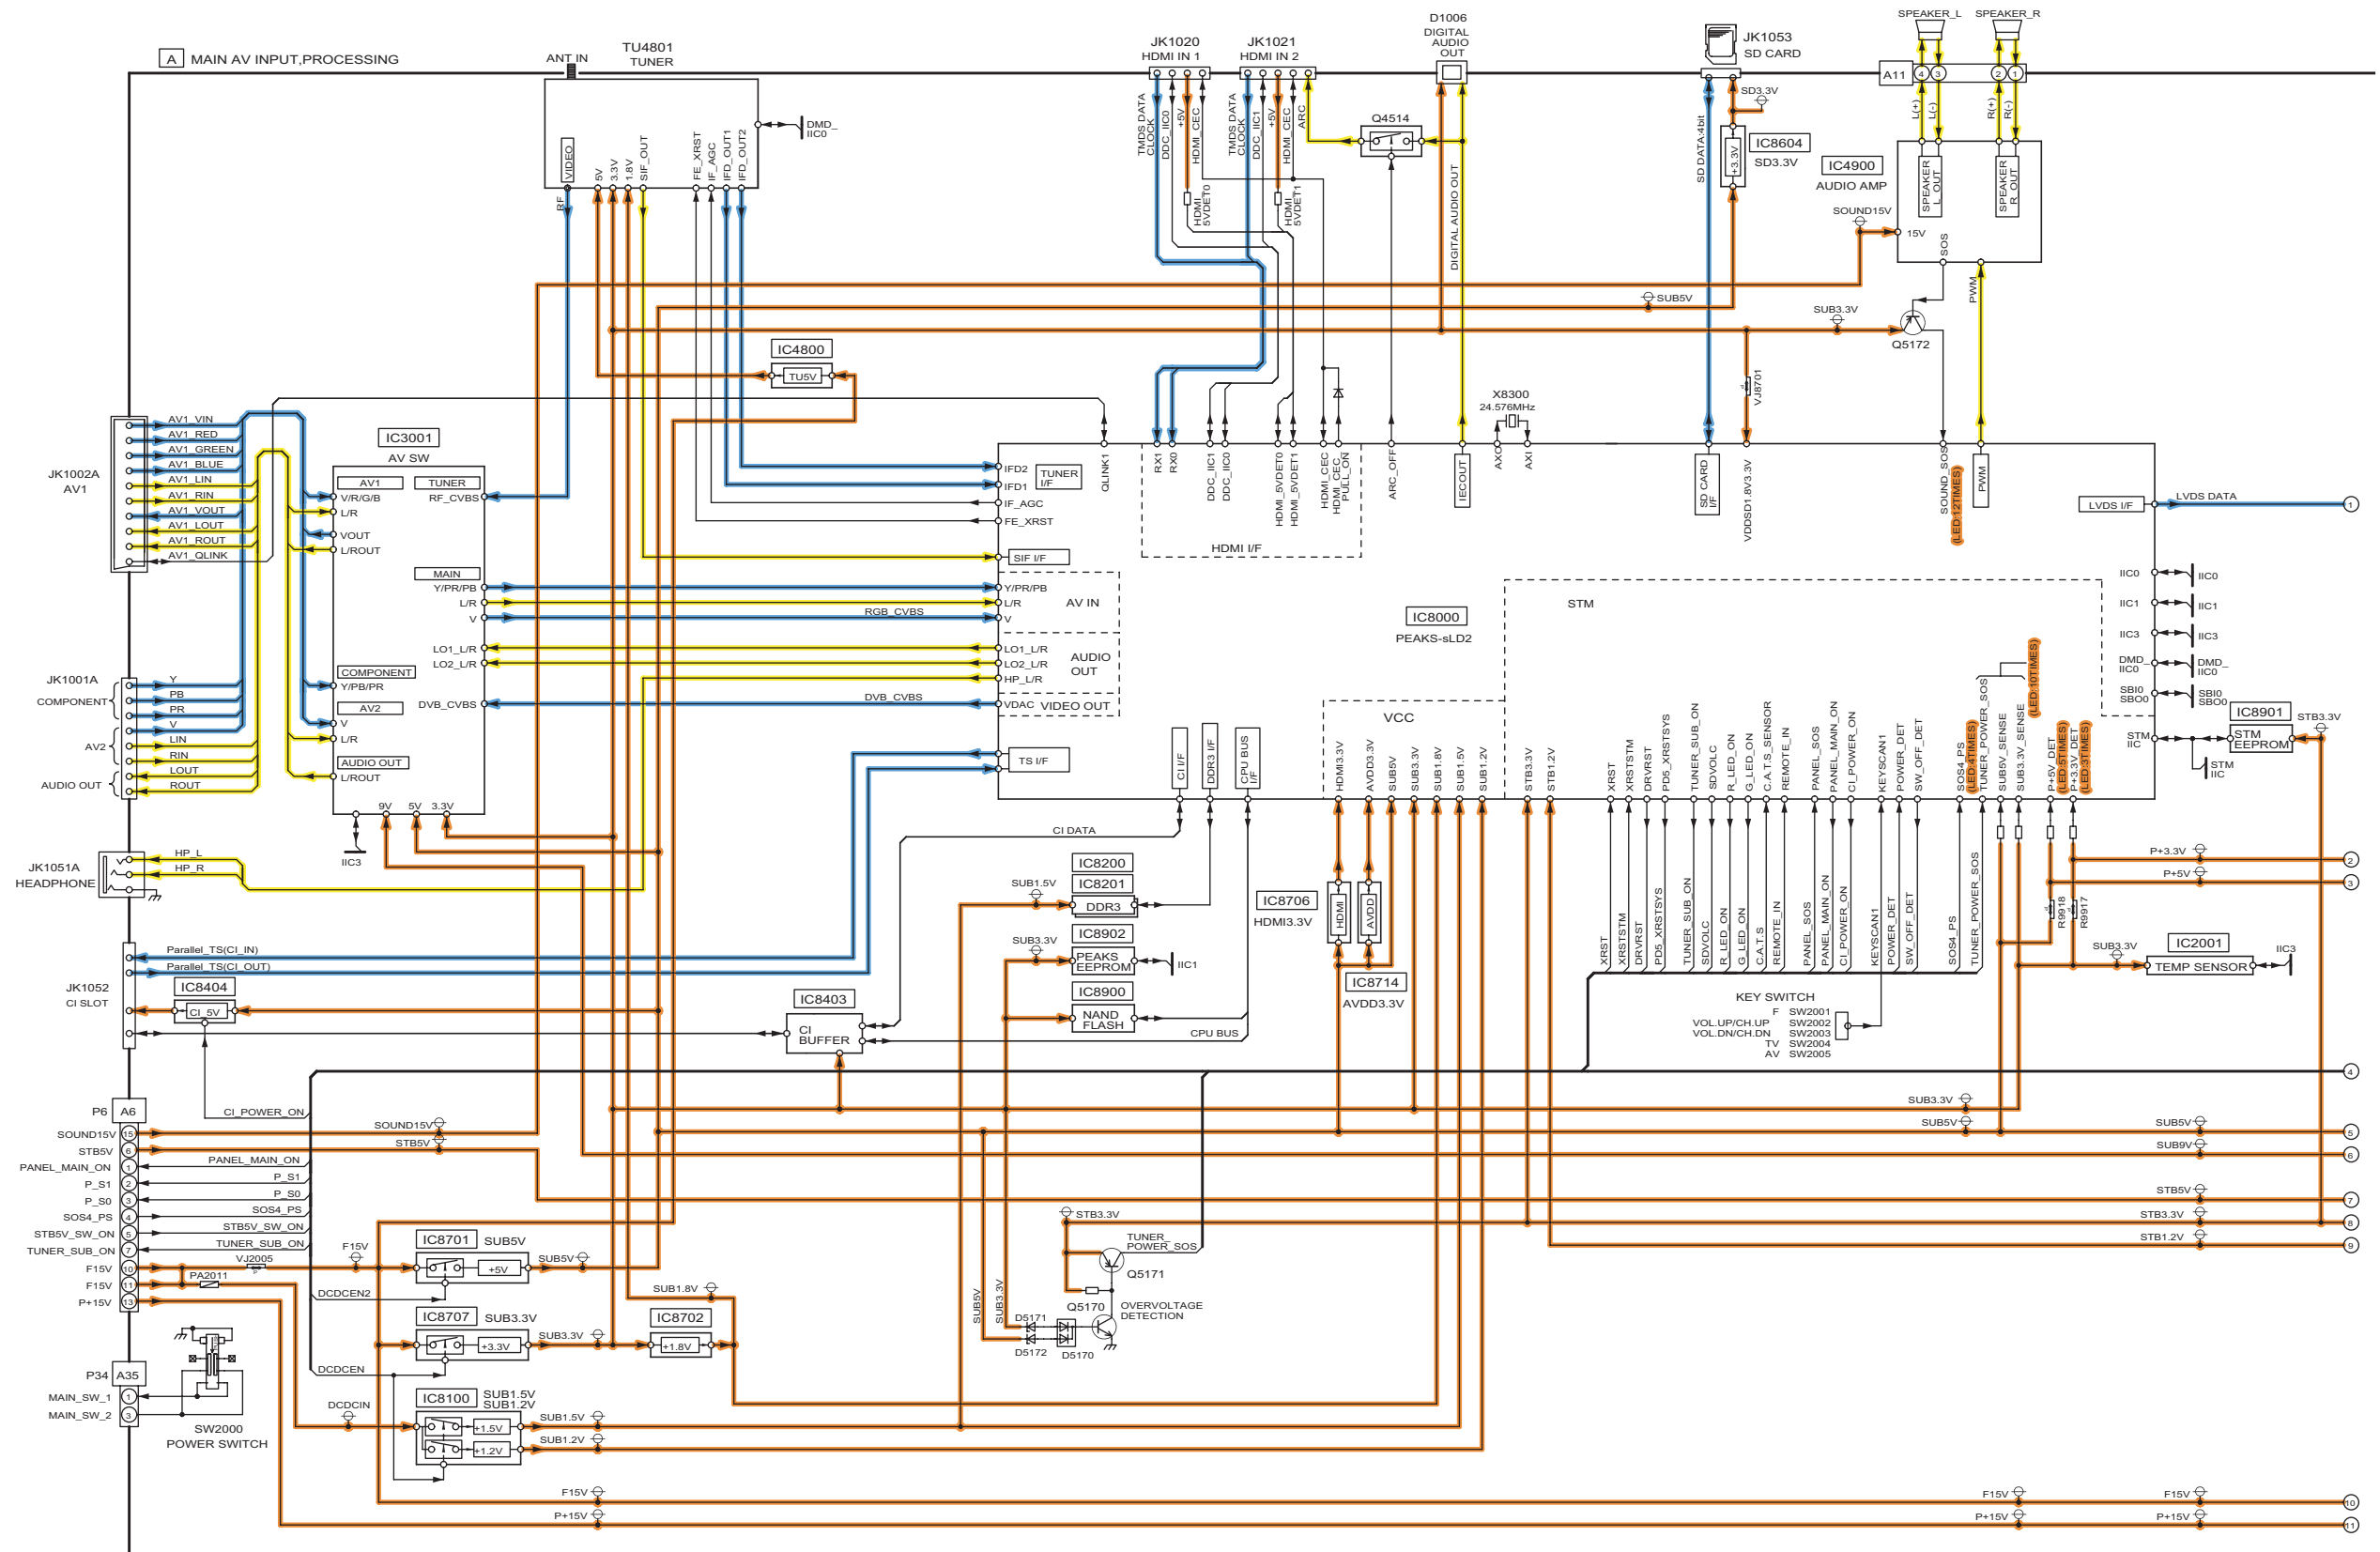


11.3. Block (2/4) Diagram

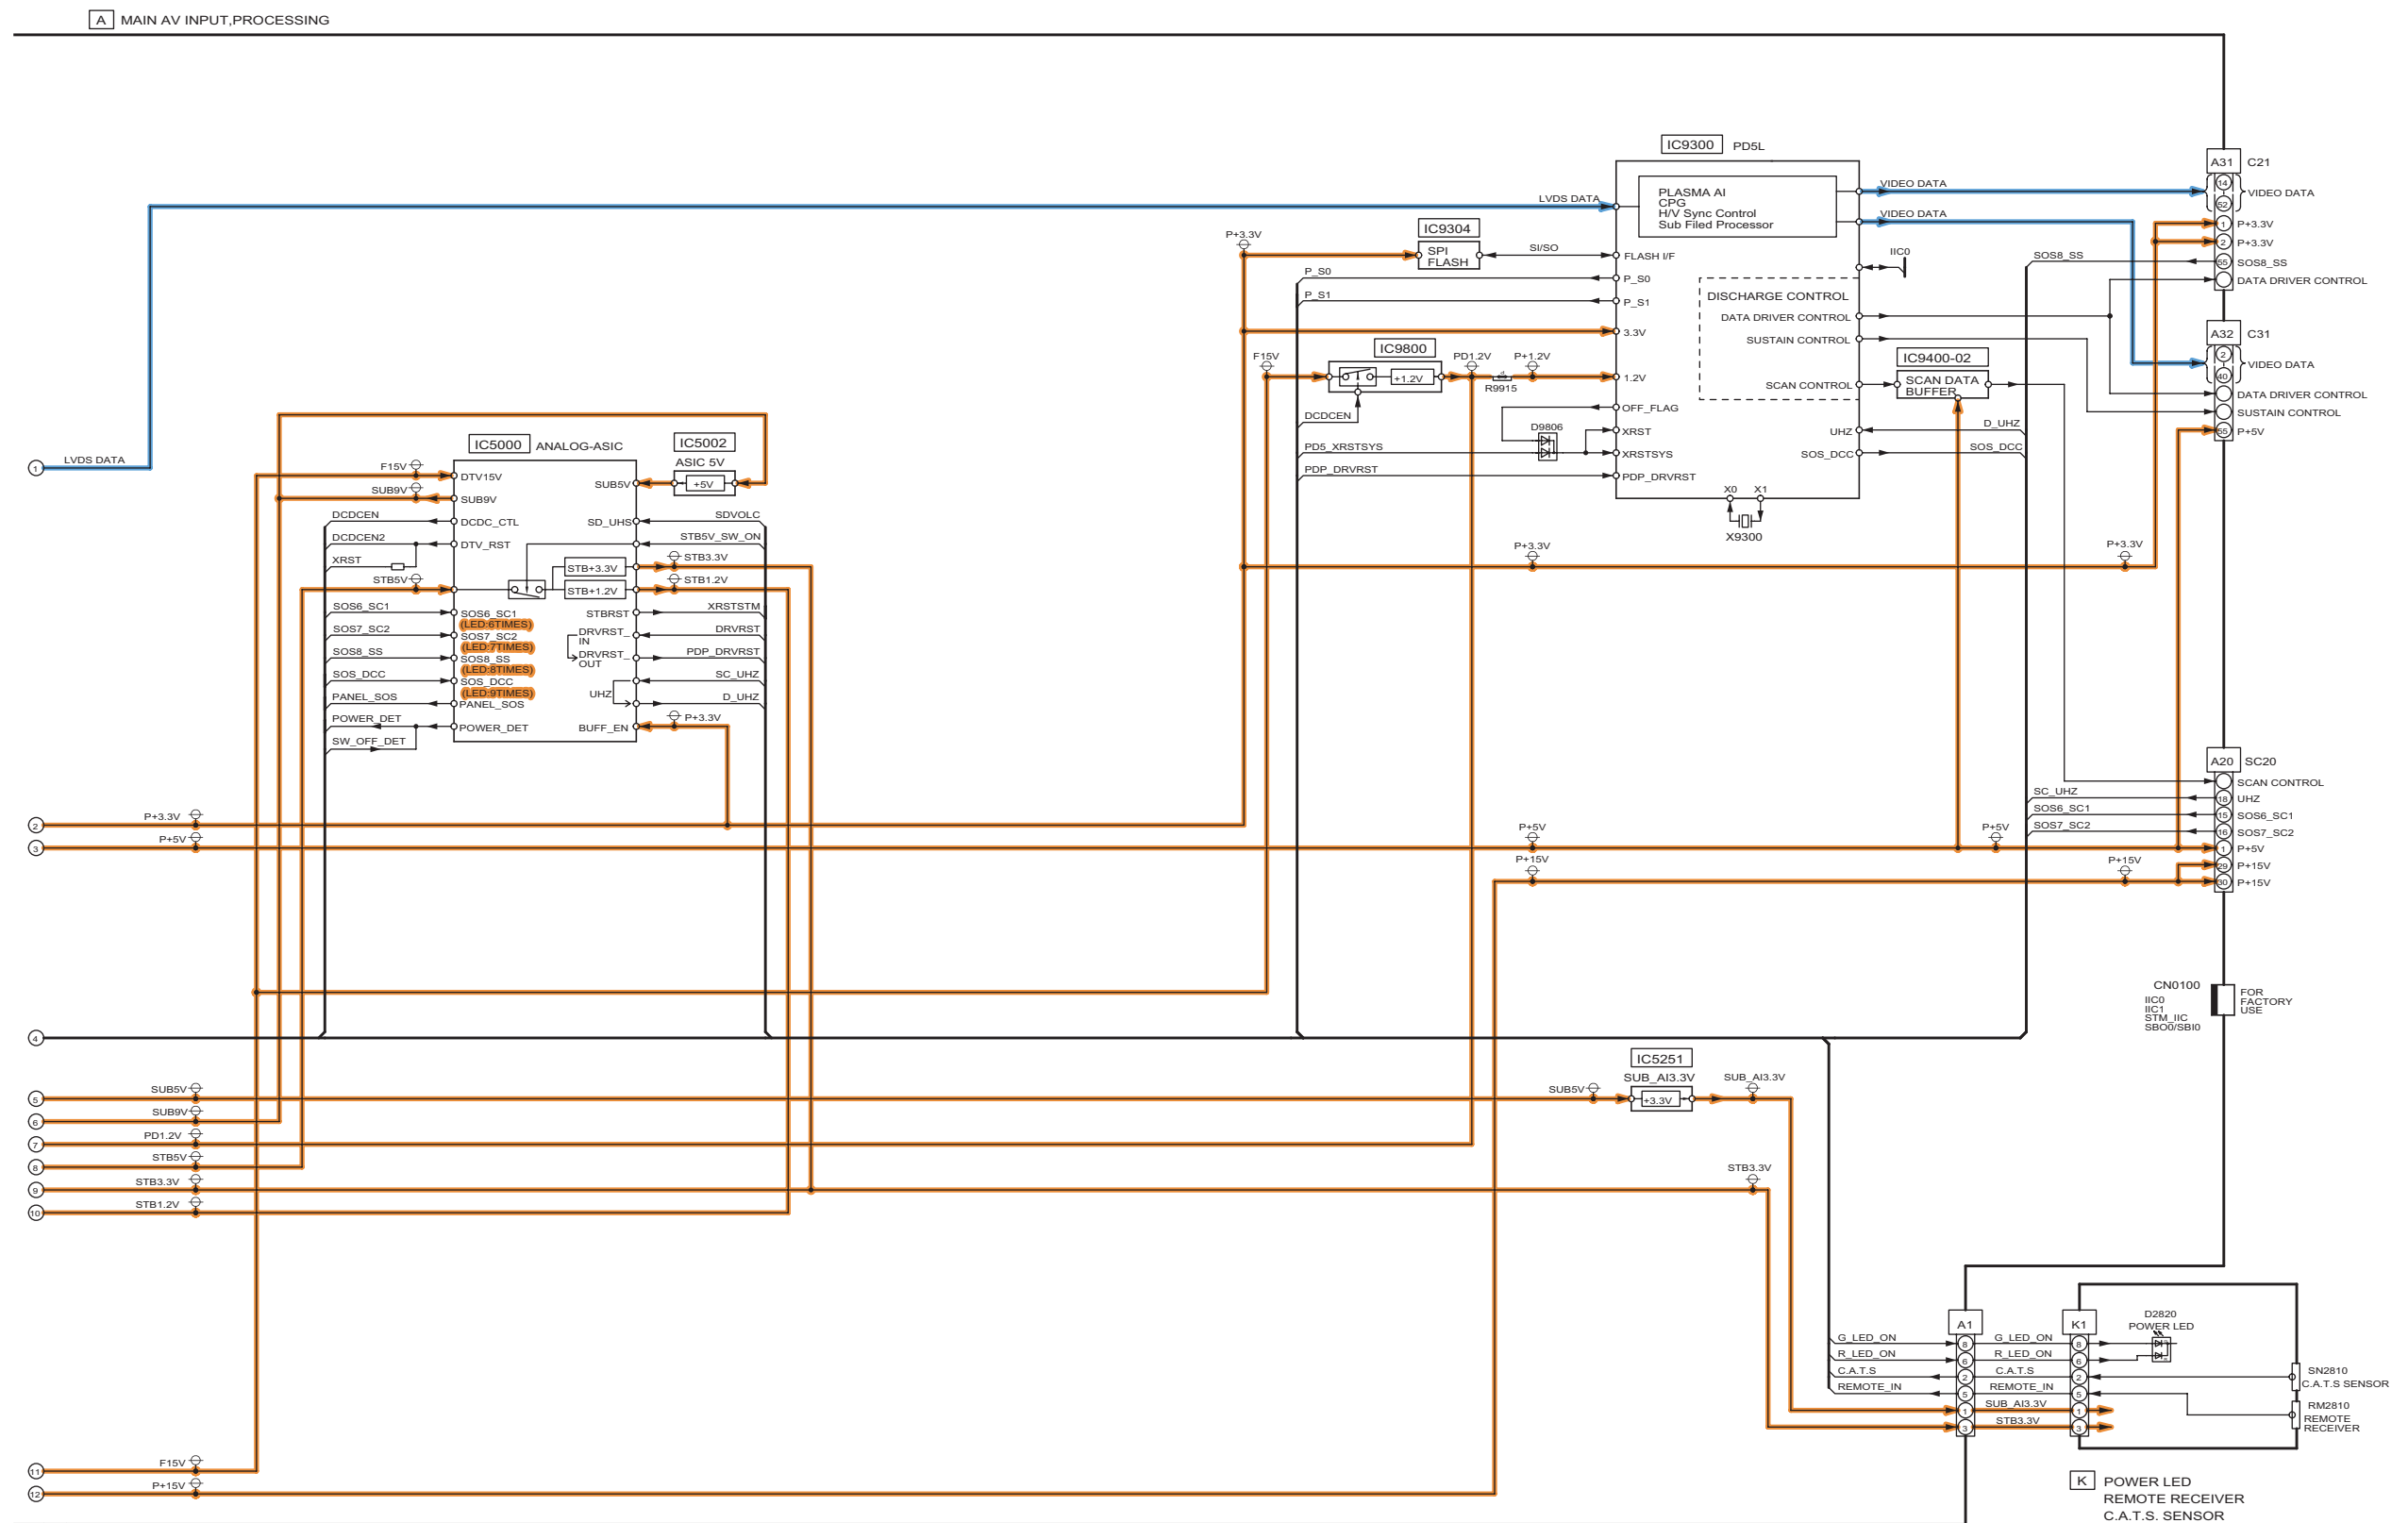

11.4. Block (3/4) Diagram

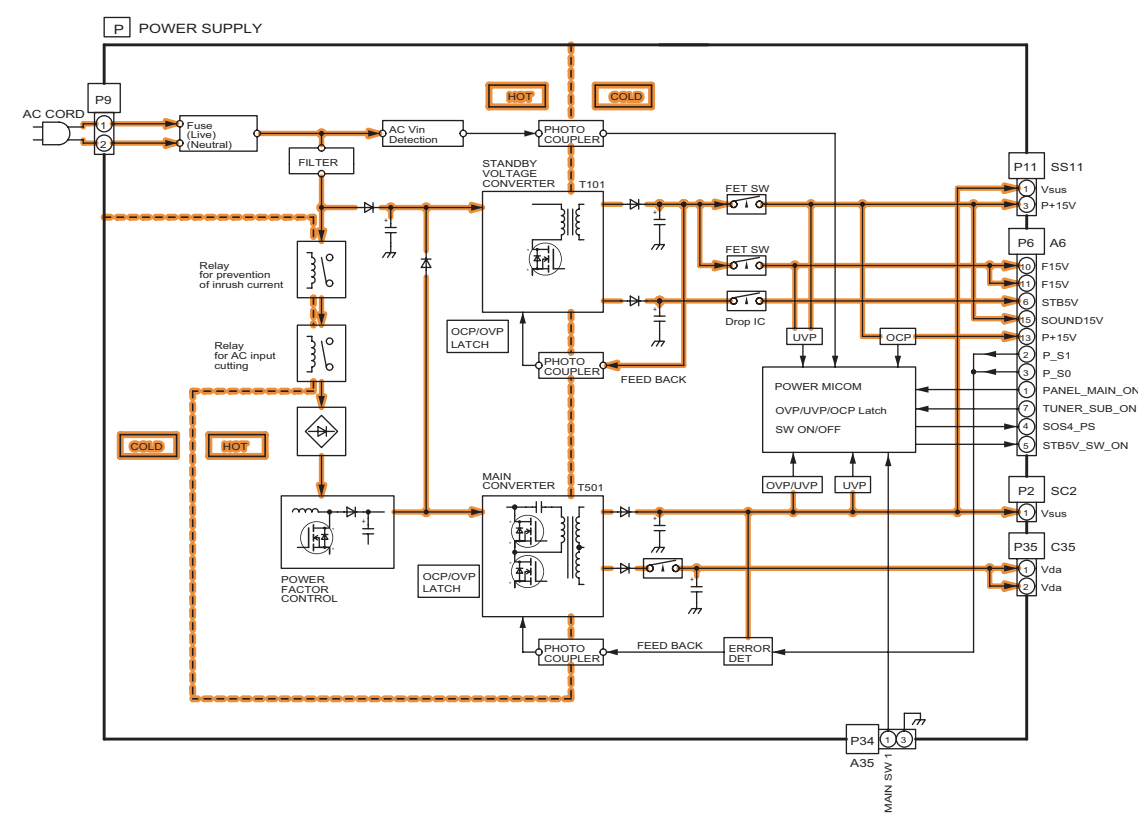

11.5. Block (4/4) Diagram

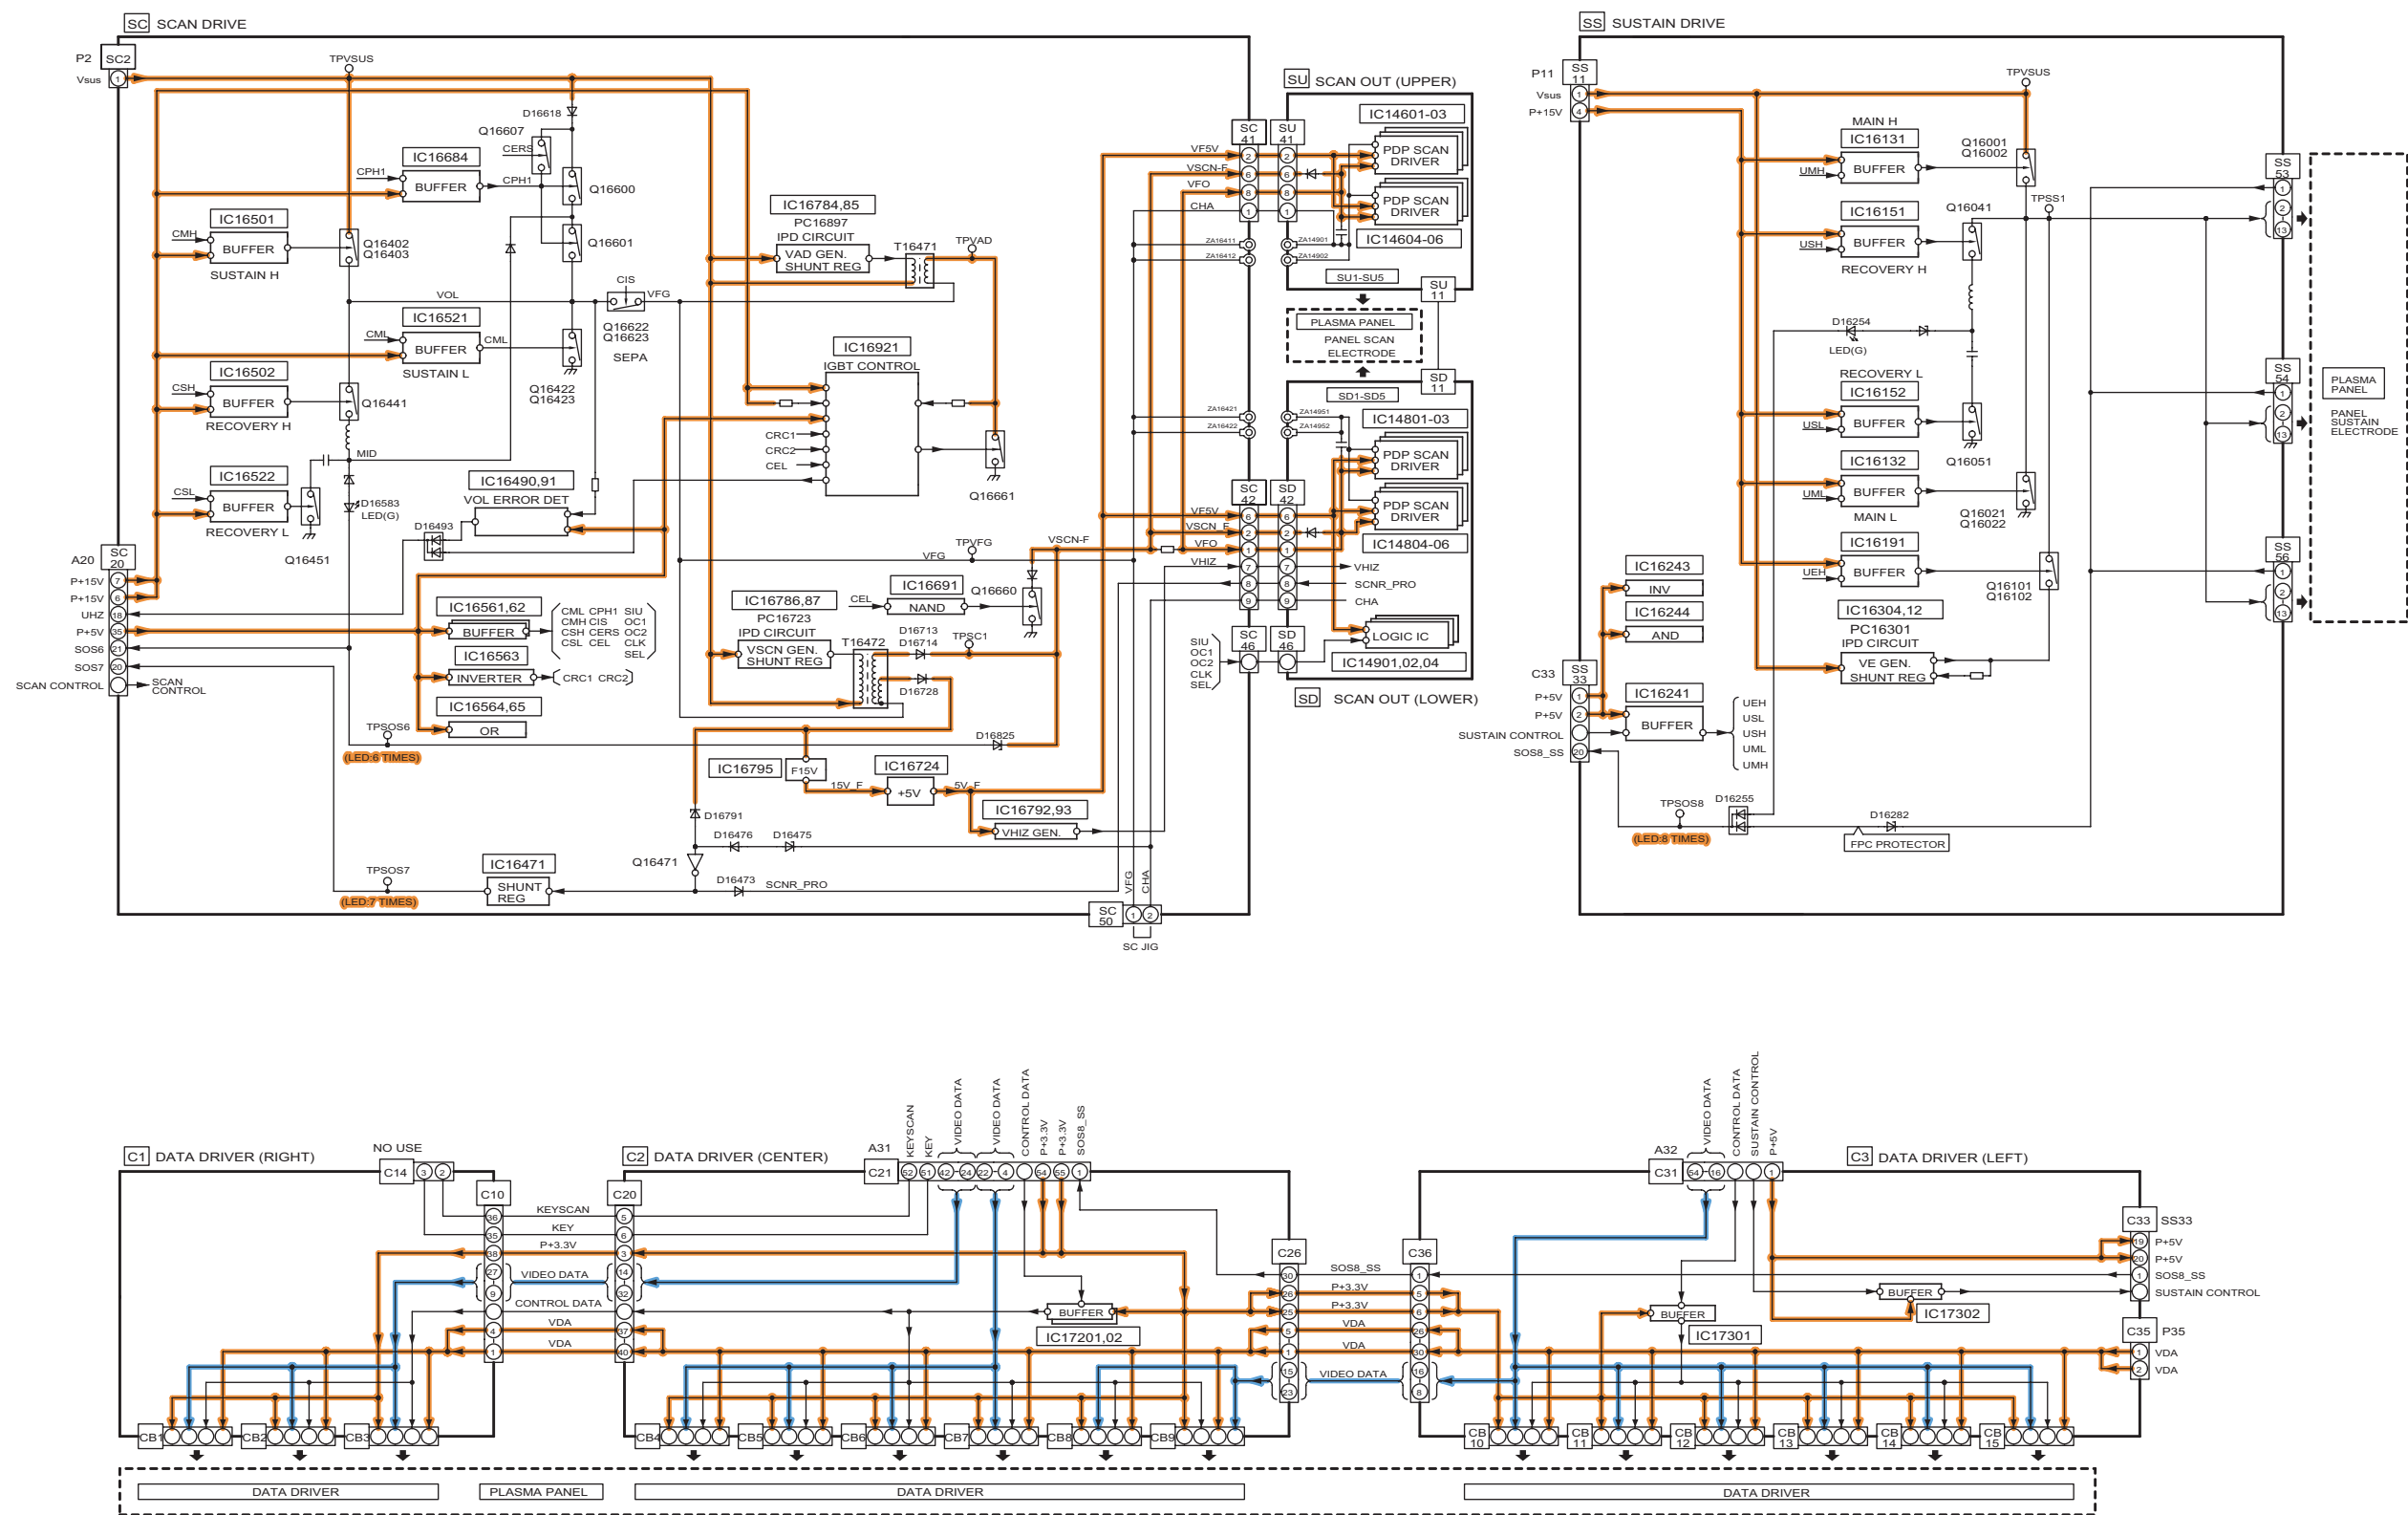


12 Wiring Connection Diagram

12.1. Caution statement.


Caution:

Please confirm that all flexible cables are assembled correctly.
Also make sure that they are locked in the connectors.
Verify by giving the flexible cables a very slight pull.



12.2. Wiring (1)

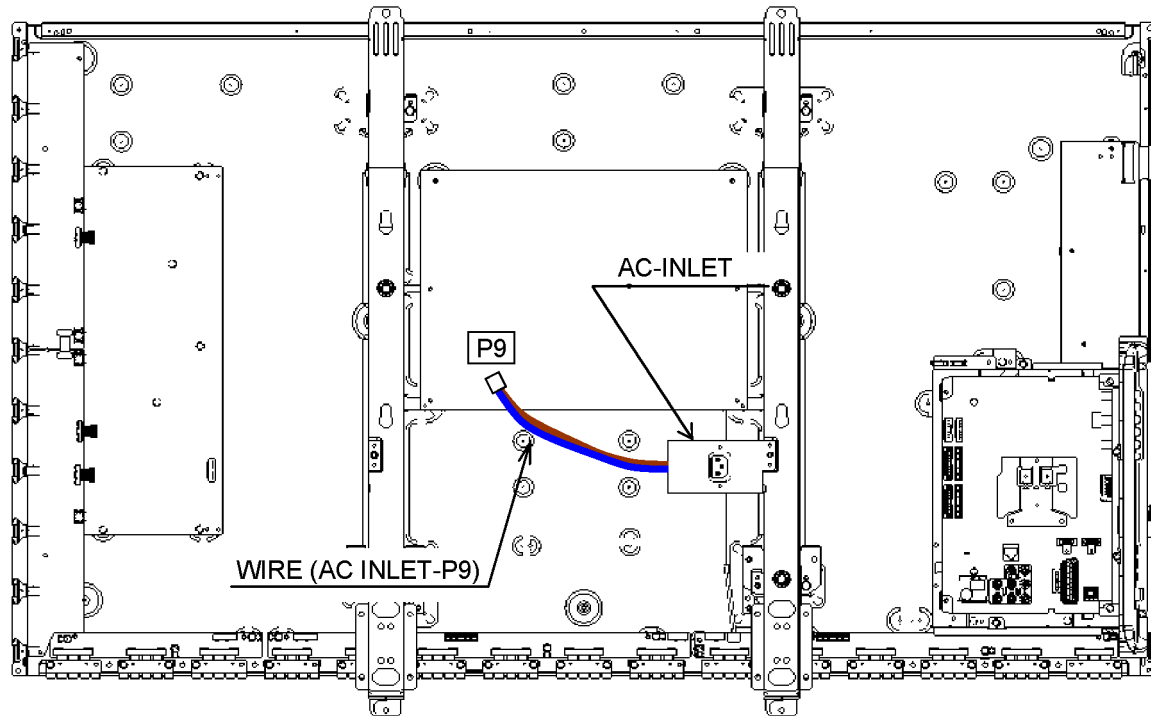

12.3. Wiring (2)

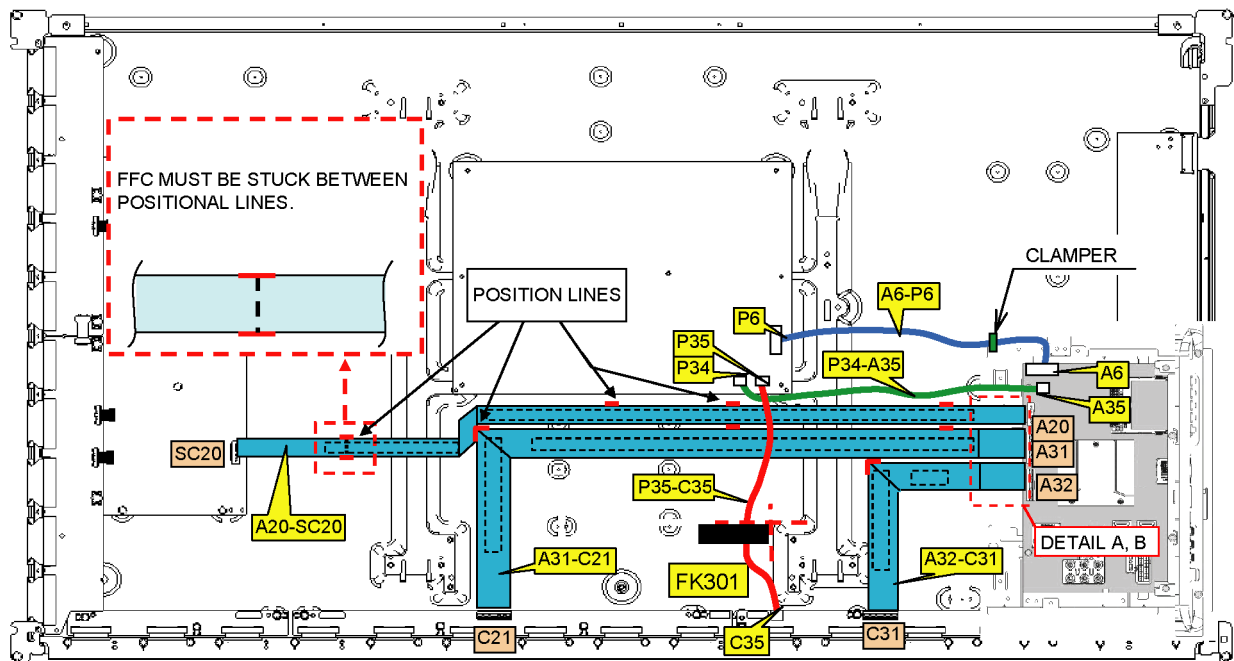


WIRE P34-A35 MUST GO UNDER WIRE P35-C35.

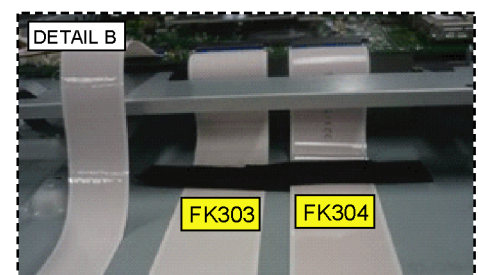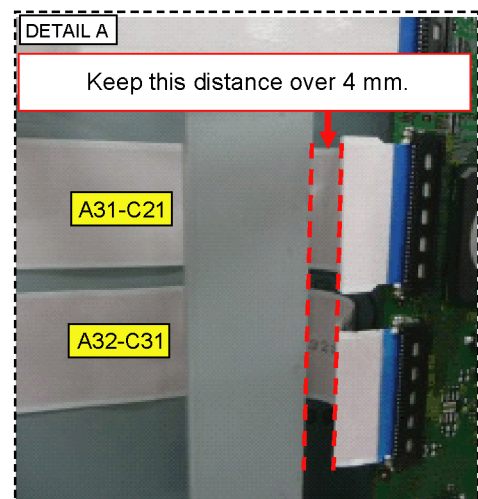

12.4. Wiring (3)


Note:
● - wire already lead through the clamber

WIRE No.	1	2	3	4	5	6	7	8	9	10	11
A11-SPL/SPR	○	○	○	○	○	○				○	
A1-K1							●	●	●	○	●

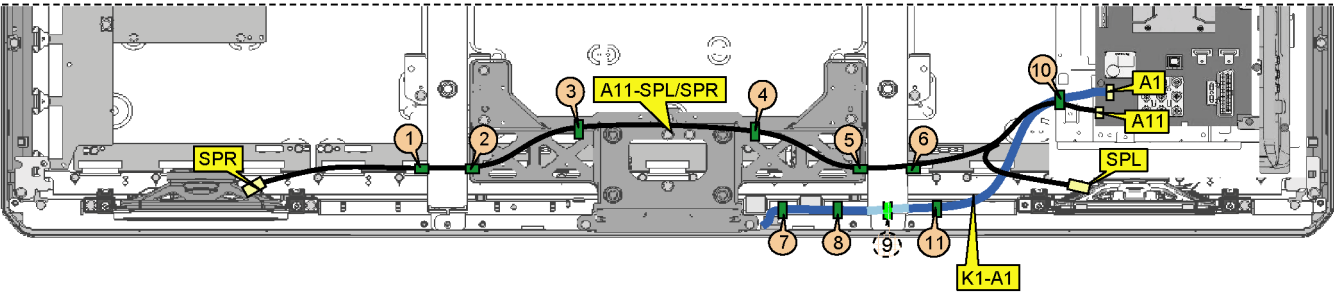


WIRE K1-A1 MUST GO UNDER WIRE A11-SPL/SPR.

12.5. Wiring (4)

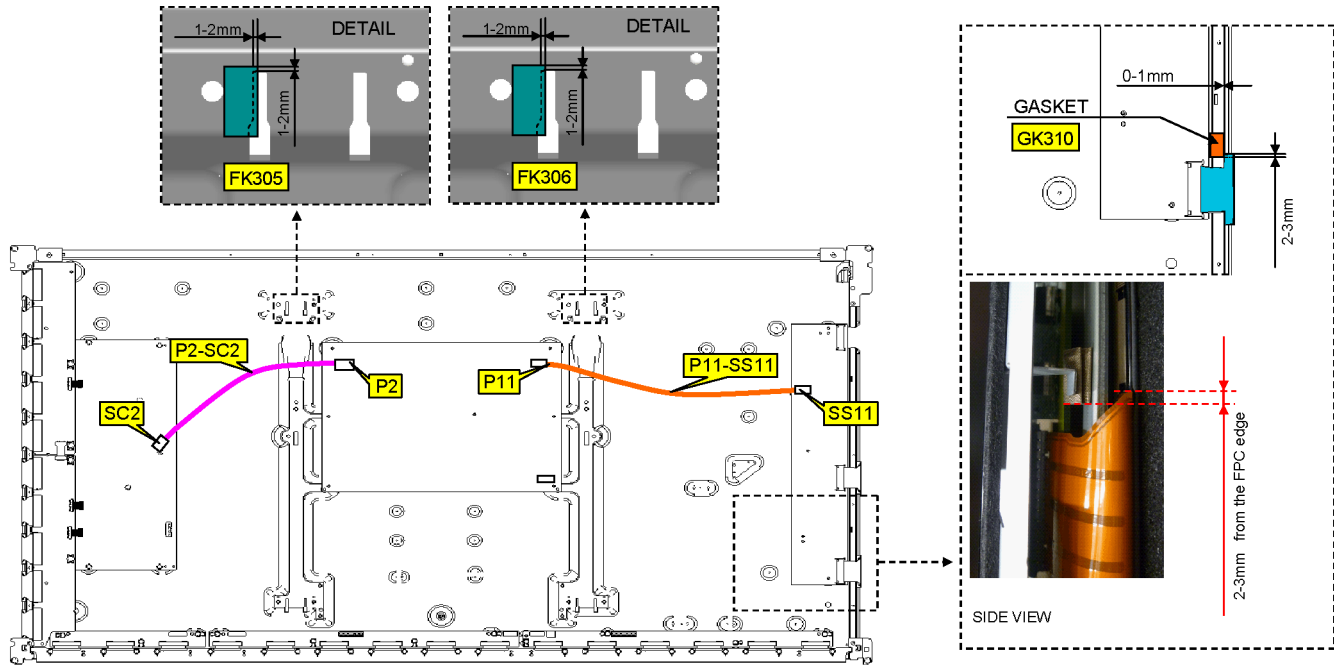

12.6. Wiring (5)

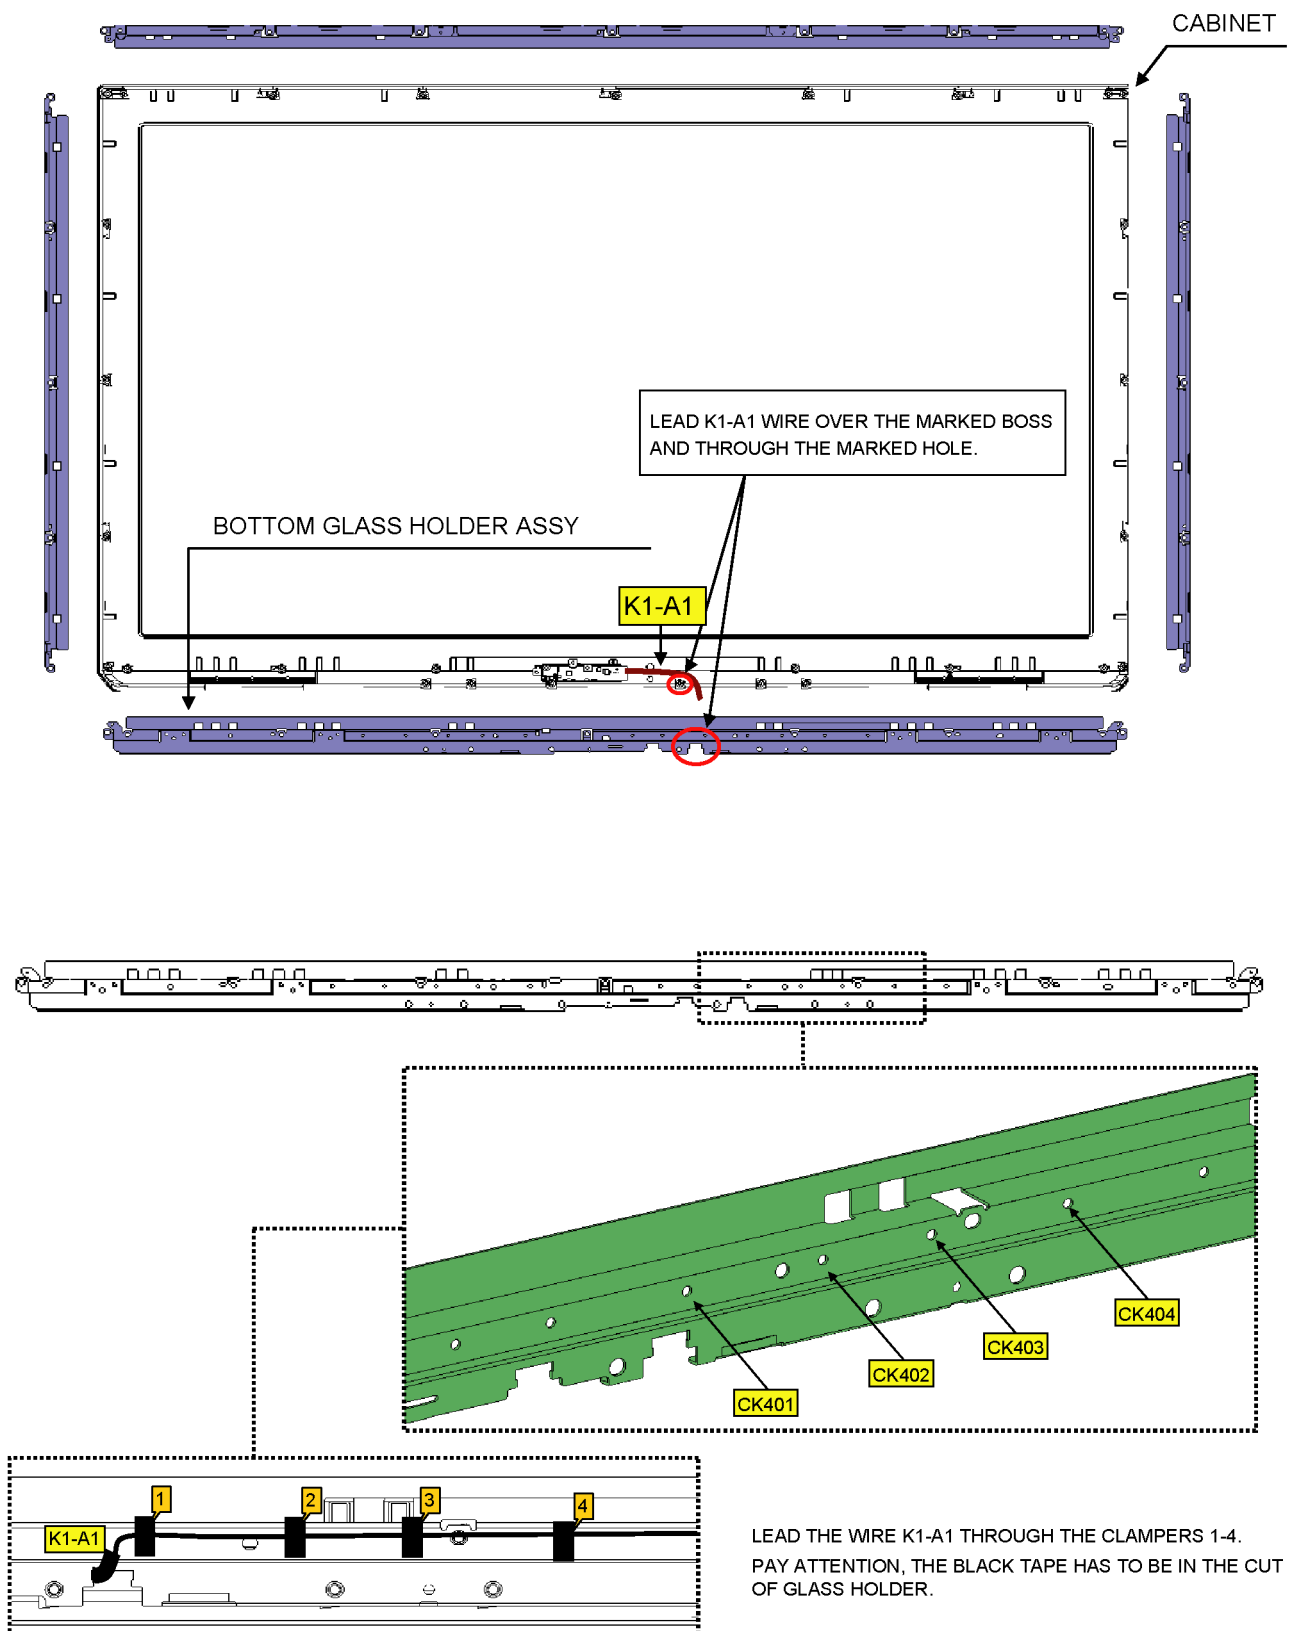

Notes:

1. **Resistor**
Unit of resistance is OHM [Ω] (K=1,000, M=1,000,000).
2. **Capacitor**
Unit of capacitance is μ F, unless otherwise noted.
3. **Coil**
Unit of inductance is H, unless otherwise noted.
4. **Test Point**
 : Test Point position
5. **Earth Symbol**
 : Chassis Earth (Cold)  : Line Earth (Hot)
6. **Voltage Measurement**
Voltage is measured by a DC voltmeter.
Conditions of the measurement are the following:
 Power Source AC 220-240V, 50/60Hz
 Receiving Signal Colour Bar signal (RF)
 All customer's controls Maximum positions
7. When arrow mark () is found, connection is easily found from the direction of arrow.
8. Indicates the major signal flow. : Video  Audio 
9. This schematic diagram is the latest at the time of printing and subject to change without notice.

Notice: Use the parts number indicated on the Replacement parts List.

Remarks:

1. The Power Circuit contains a circuit area which uses a separate power supply to isolate the earth connection.
The circuit is defined by HOT and COLD indications in the schematic diagram. Take the following precautions.
All circuits, except the Power Circuit, are cold.
Precautions
 - a. Do not touch the hot part or the hot and cold parts at the same time or you may be shocked.
 - b. Do not short- circuit the hot and cold circuits or a fuse may blow and parts may break.
 - c. Do not connect an instrument, such as an oscilloscope, to the hot and cold circuits simultaneously or a fuse may blow.
Connect the earth of instruments to the earth connection of the circuit being measured.
 - d. Make sure to disconnect the power plug before removing the chassis.

Model No. : TX-P50U30E/J, PR50U30/31 Replacement Parts List Note

Note: All parts except parts mentioned [PAVCCZ] in the Remarks column are supplied by AVC-CSPC.
Parts mentioned [PAVCCZ] are supplied by PAVCCZ.

Notice: Be sure to make your orders of replacement parts according to this list.

RTL (Retention Time Limited)

Note: The marking (RTL) indicates that the Retention Time is Limited for this item.
After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention.
After the end of this period, the assembly will no longer be available.

Abbreviation of part name and description

1. Resistor

Example:

ERD25TJ104 C 100KOHM, J 1/4W
Type Allowance


2. Capacitor

Example:


ECKF1H103ZF C 0.01UF, Z 50V
Type Allowance

Type	Allowance
C : Carbon	F : ±1%
F : Fuse	G : ±2%
M : Metal Oxide	J : ±5%
Metal Film	K : ±10%
S : Solid	M : ±20%
W : Wire Wound	

Type	Allowance
C : Ceramic	C : ±0.25pF
E : Electrolytic	D : ±0.5pF
P : Polyester	F : ±1pF
Polyprop	G : ±3pF
lene	J : ±5pF
T : Tantalum	K : ±10pF
	L : ±15pF
	M : ±20pF
	P : +100%, -0%
	Z : +80%, -20%

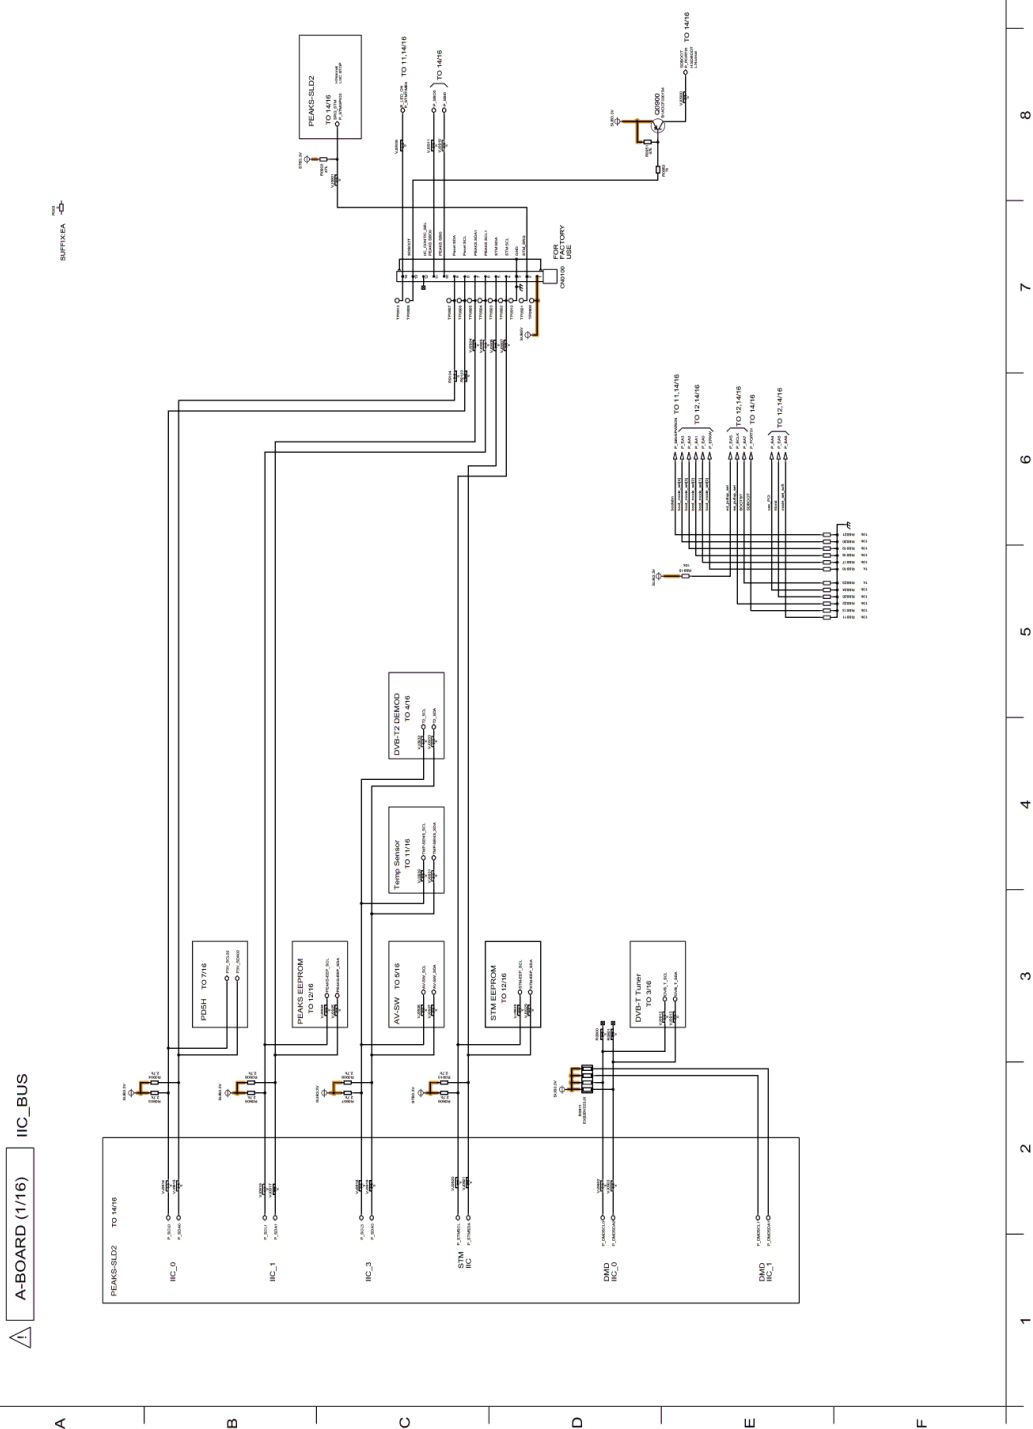

A-BOARD (2/16) HDMI INPUT

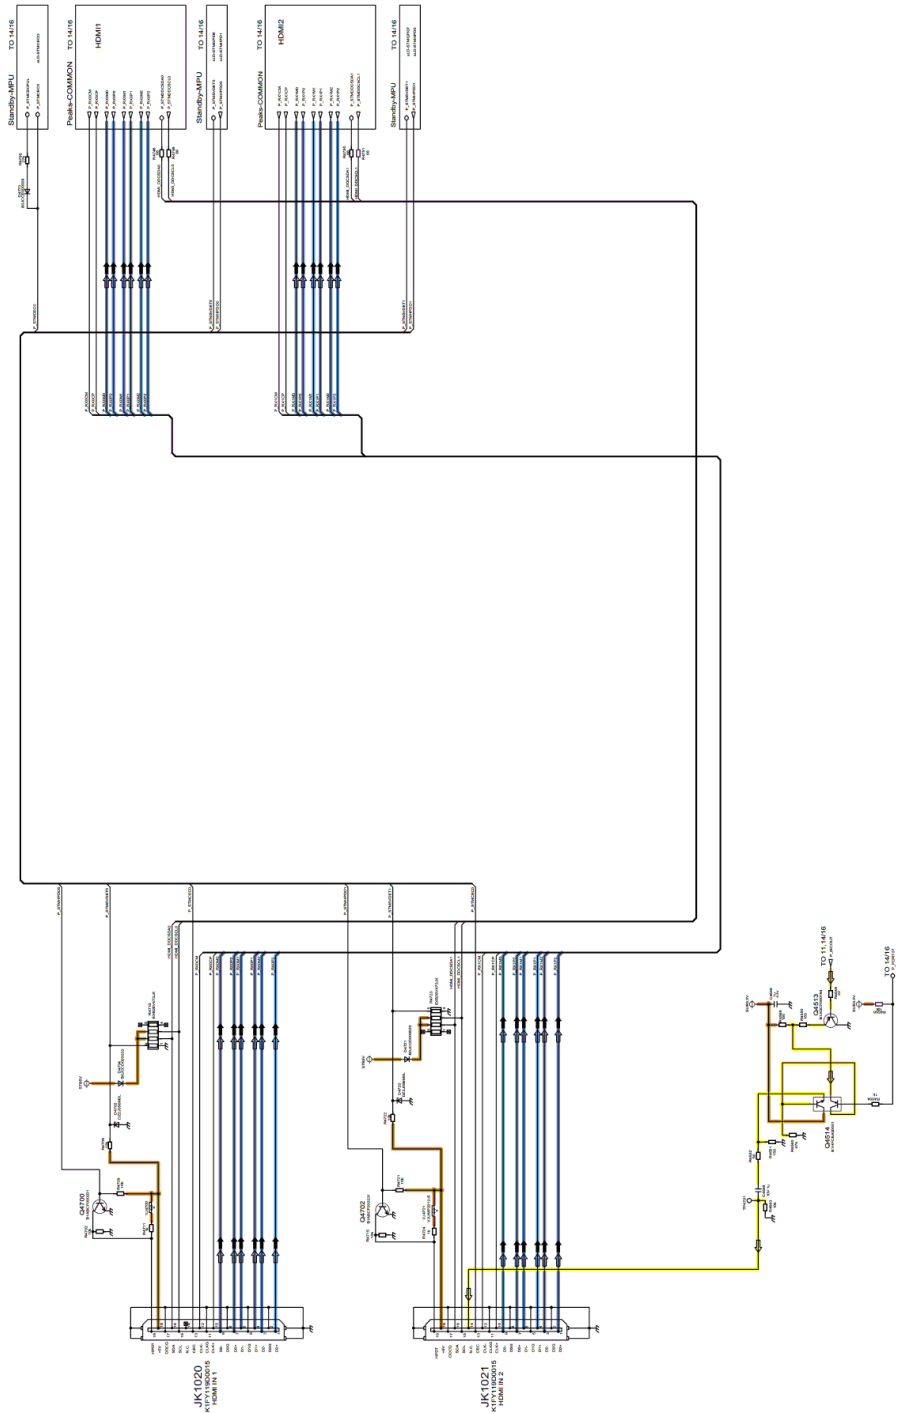

18

17

16

15

14




13

12


11

10


TUNER, AUDIO AMP

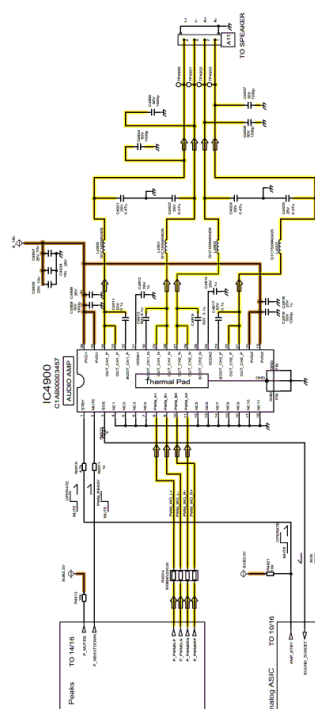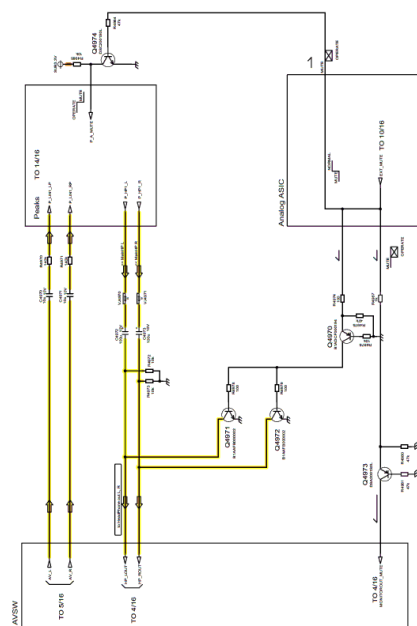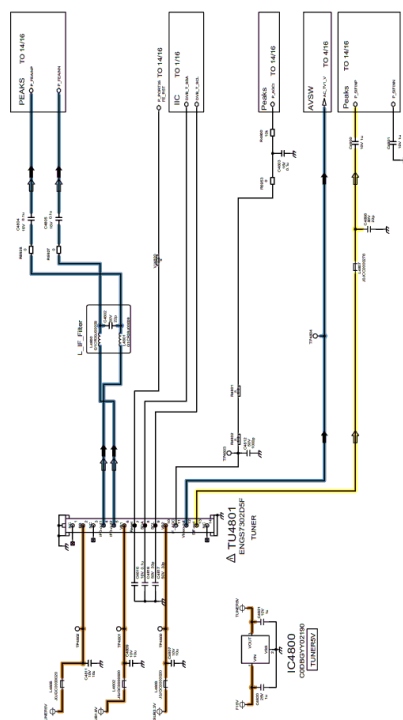

A-BOARD (4/16) AVSW-CONNECTION, OFDM

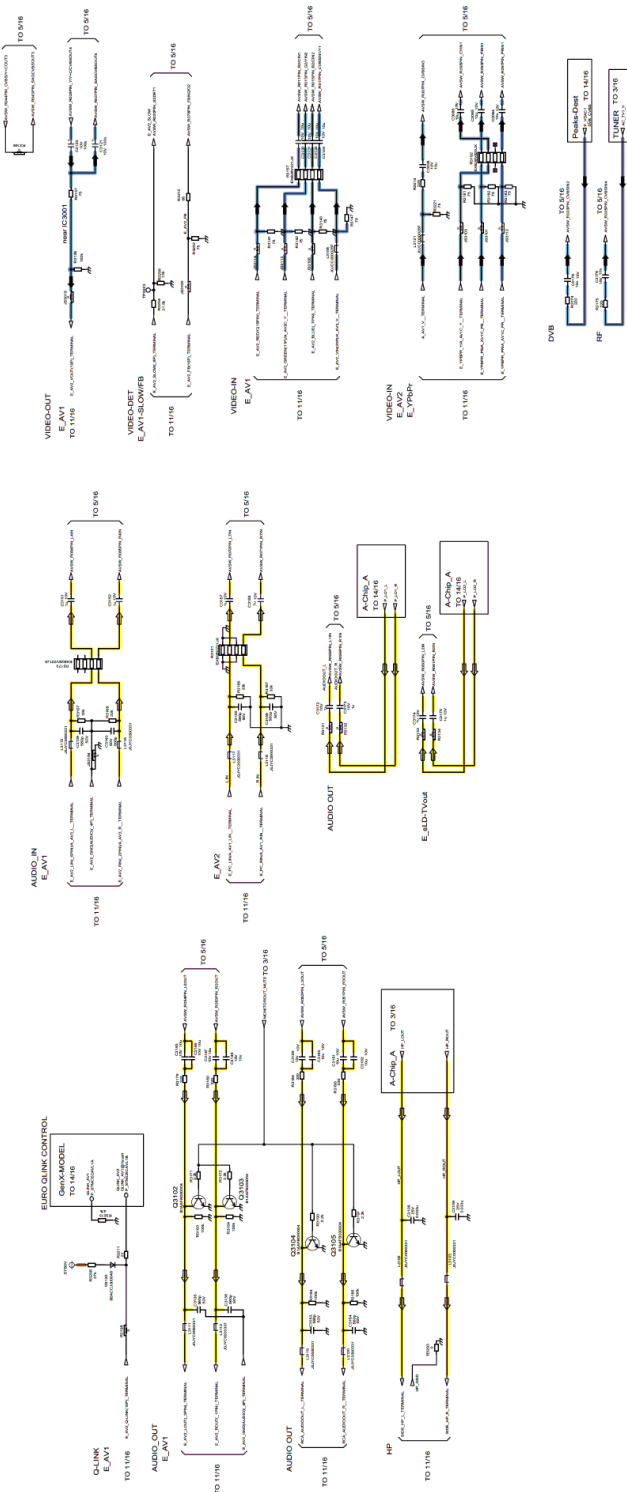

△ A-BOARD (6/18) CI SLOT

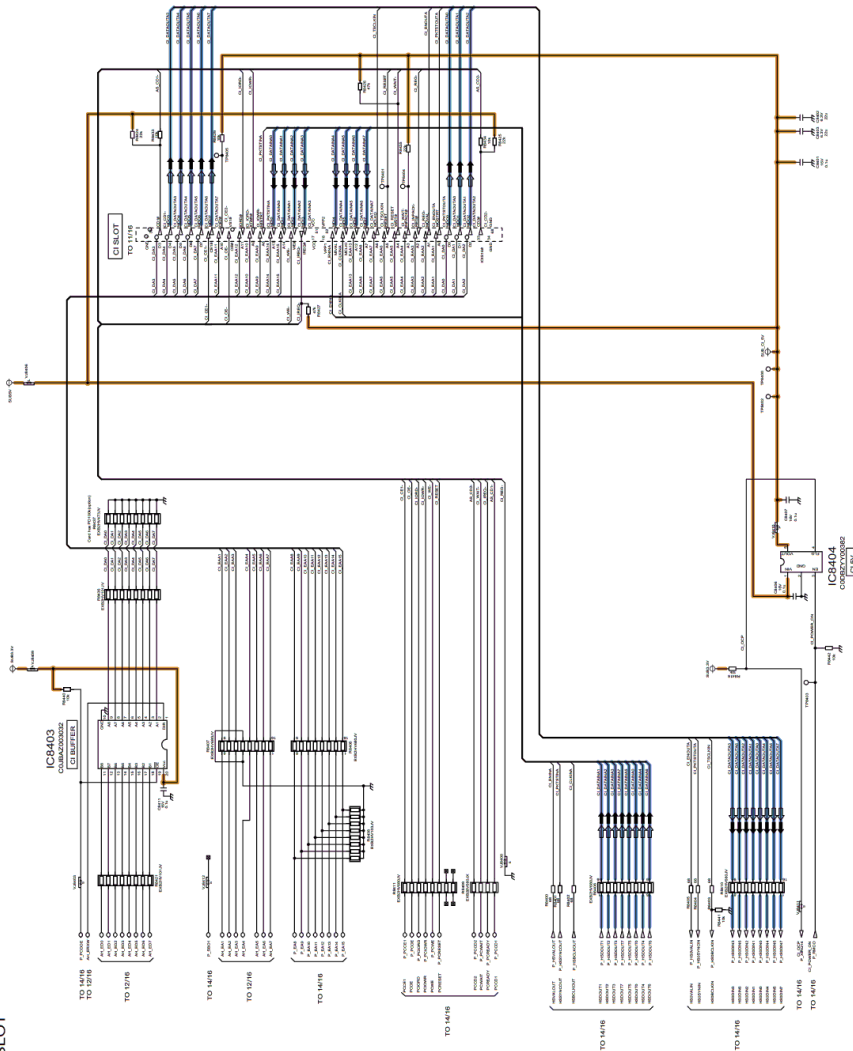

54

53

52

51

50


49


48

47


46



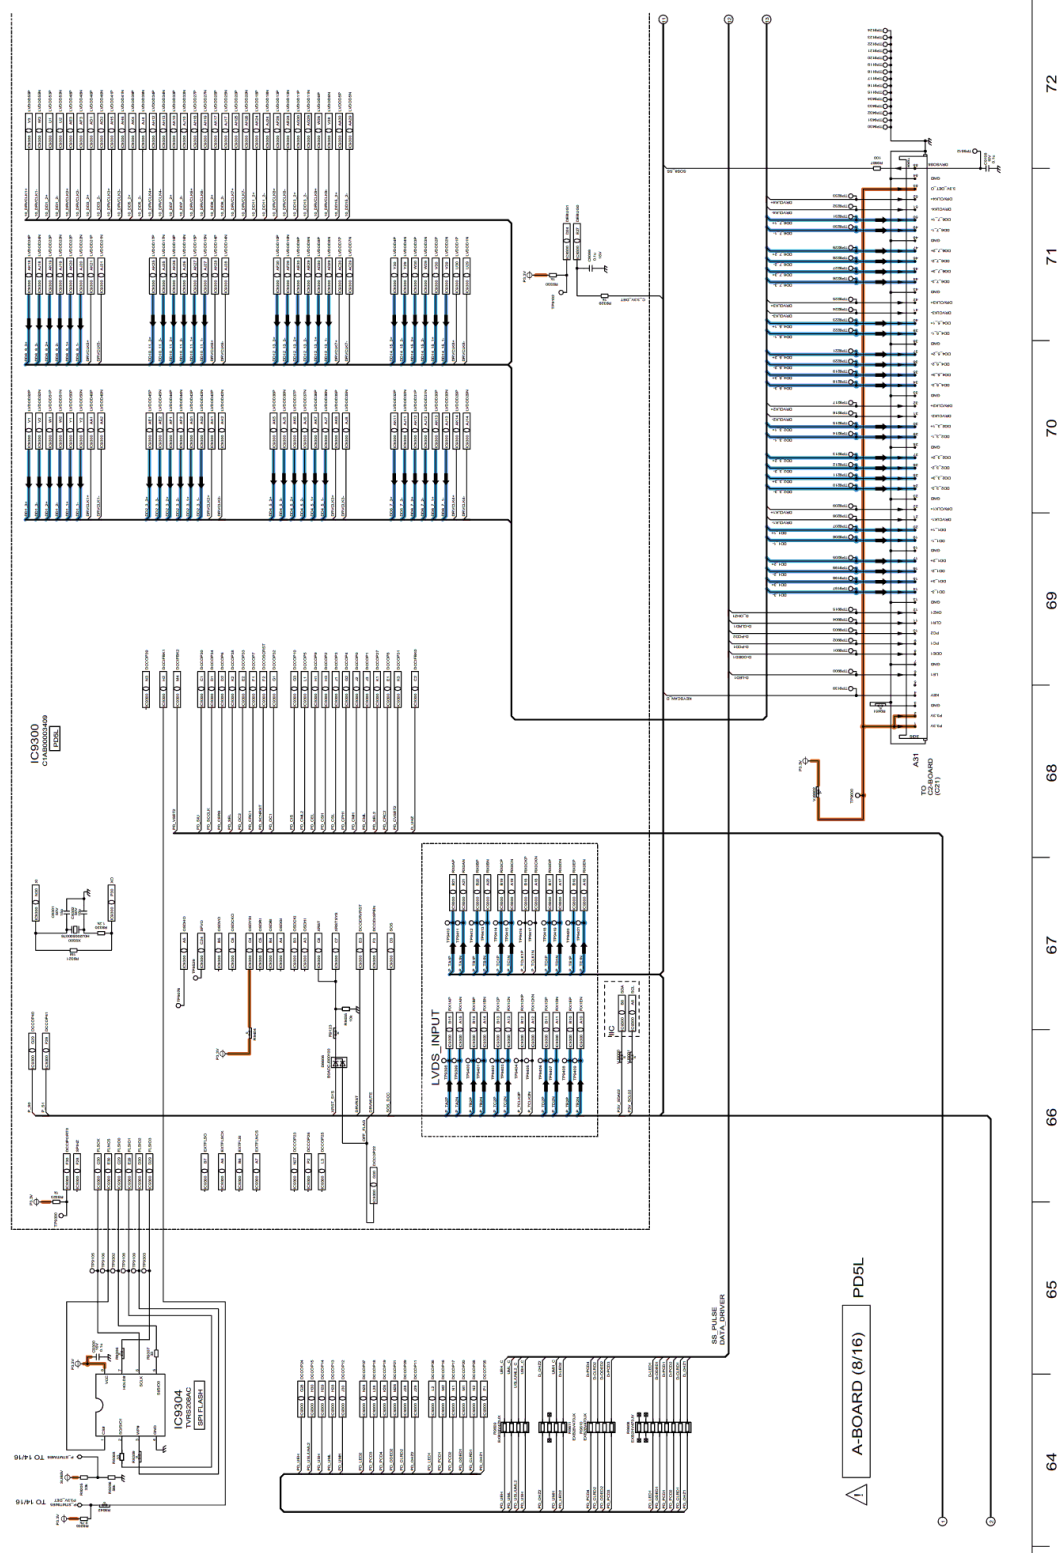


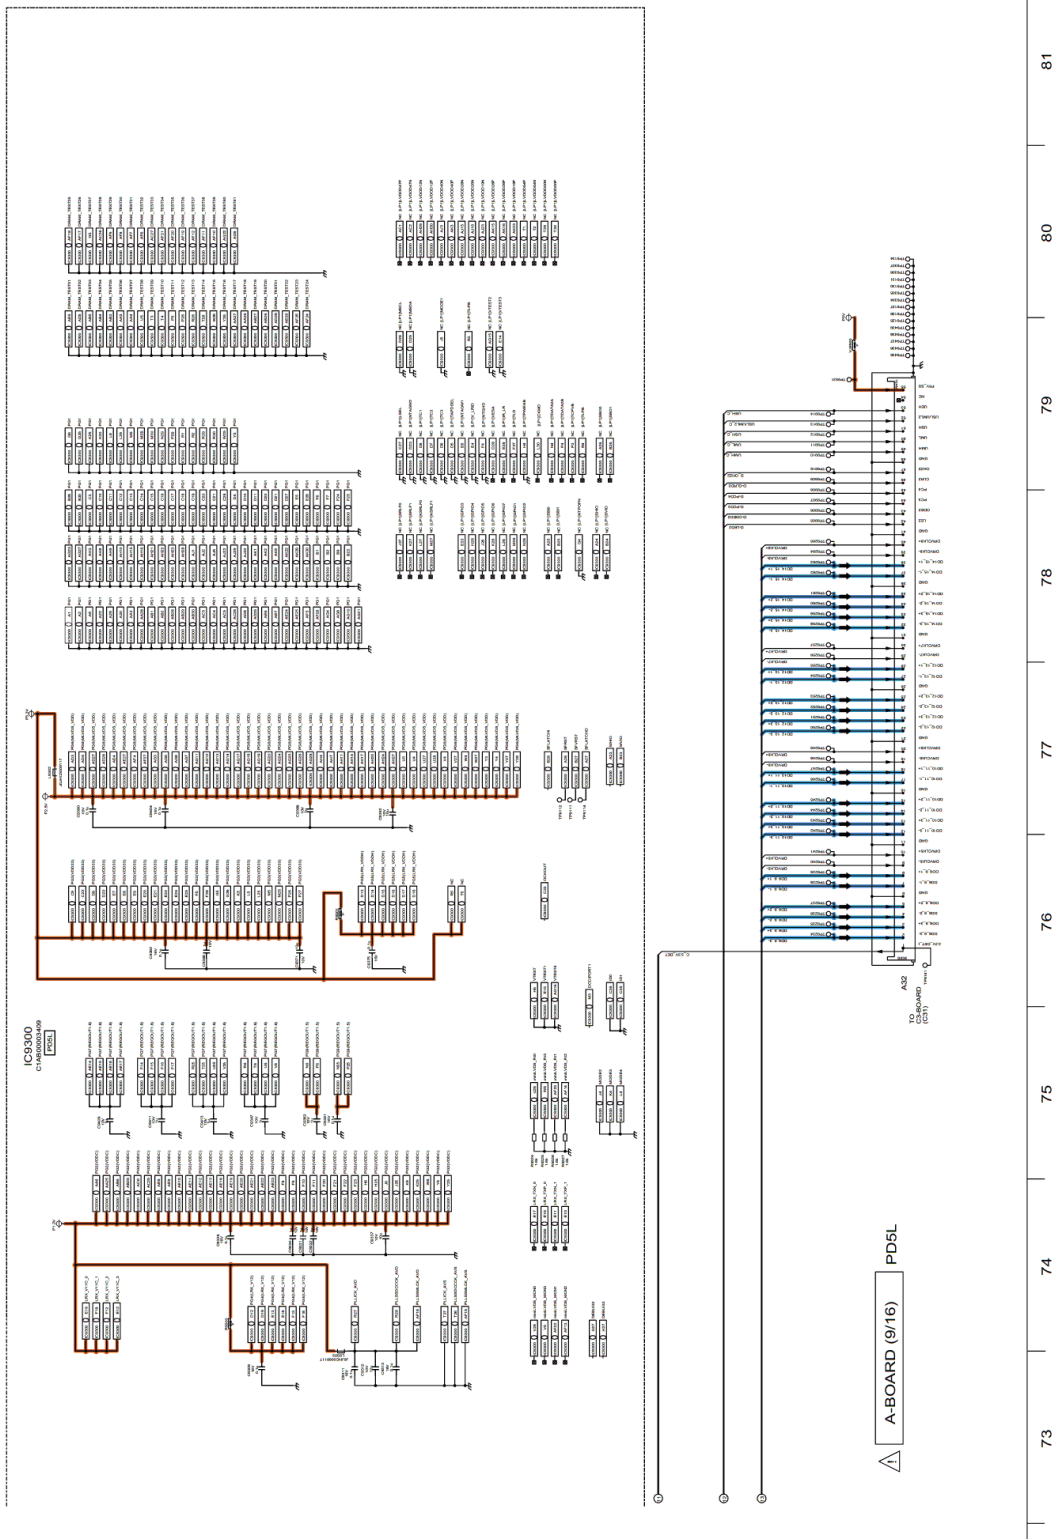


⚠ A-BOARD (10/16) POWER-MODEL

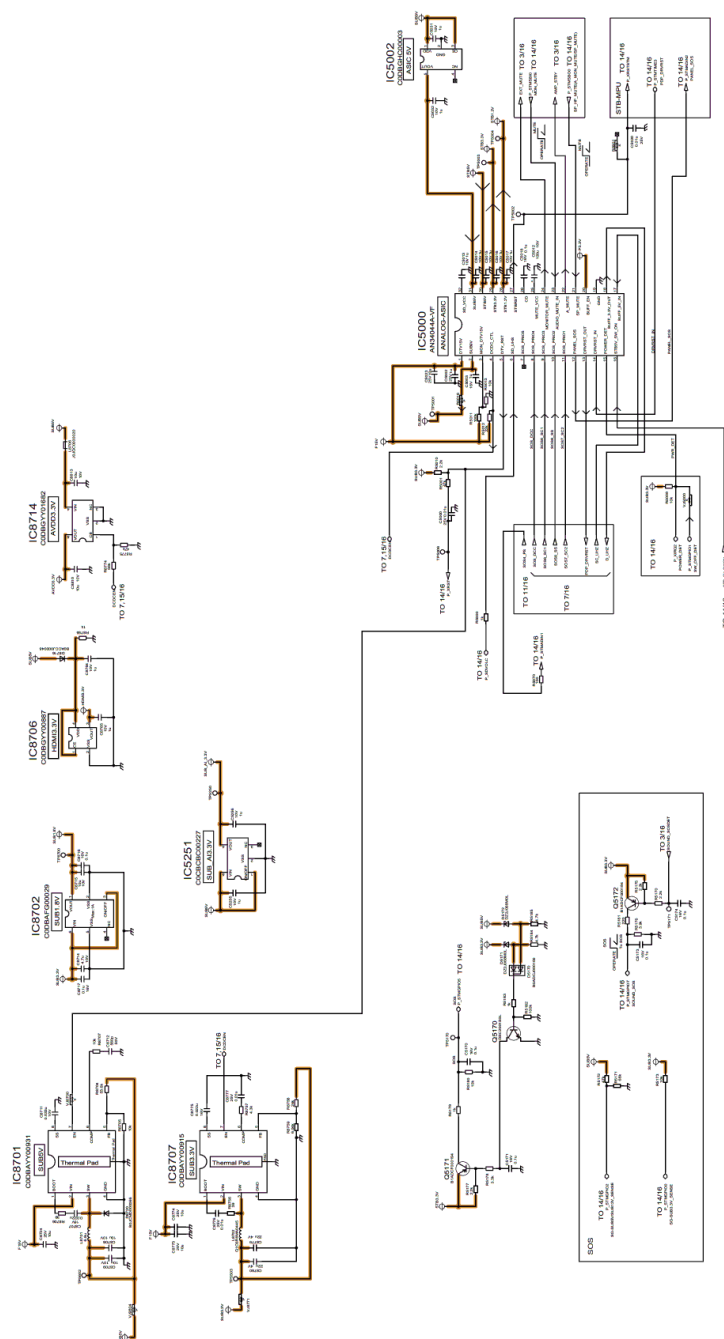


A-BOARD (11/16)



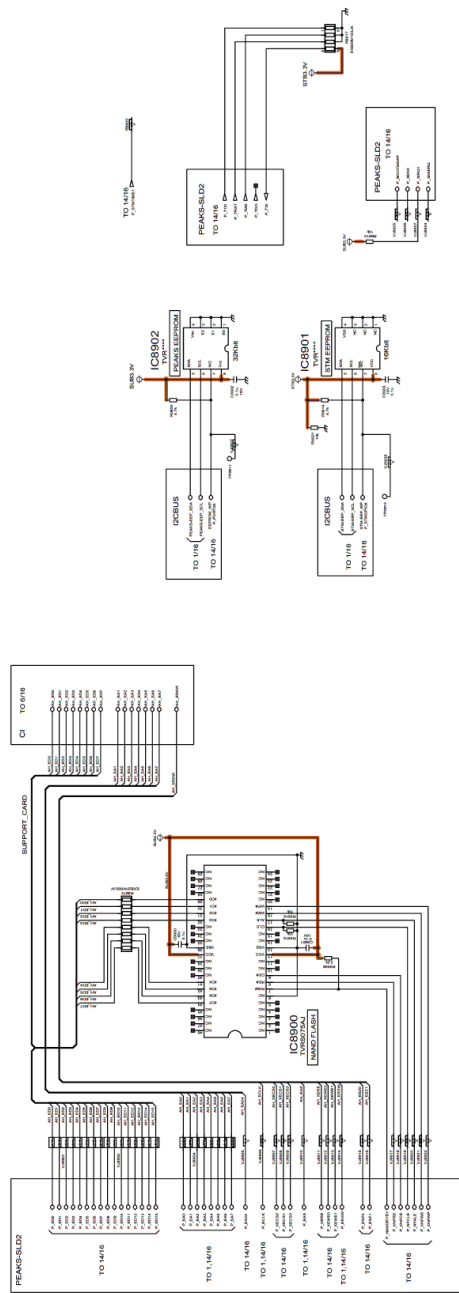

A-BOARD (13/16) ETHERPHY,USB,SD

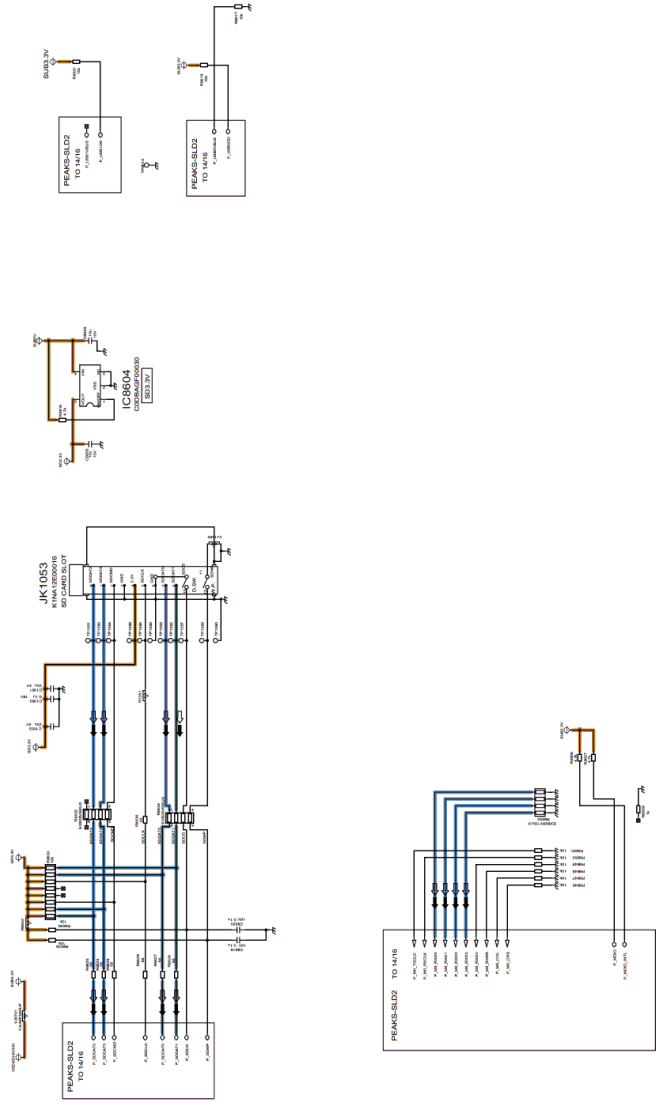

117

116

115

114

113


112

111



110

109

A-BOARD (14/16) PEAKS-sLD2

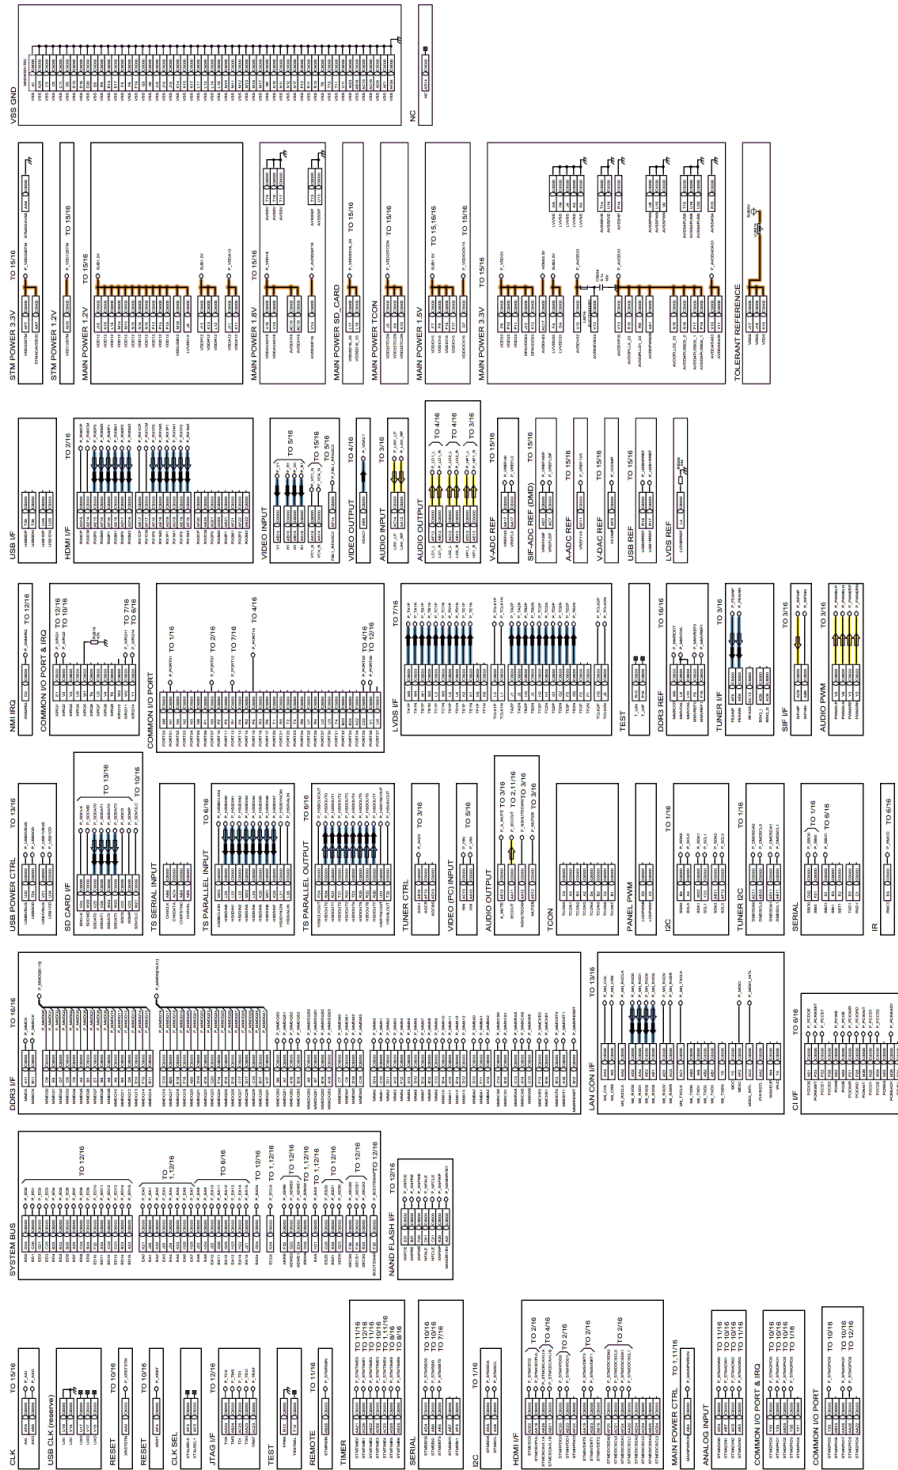

A-BOARD (15/16) PEAKS POWER

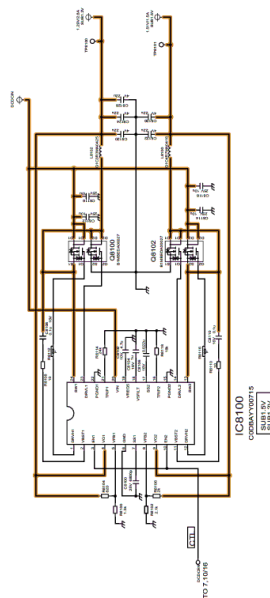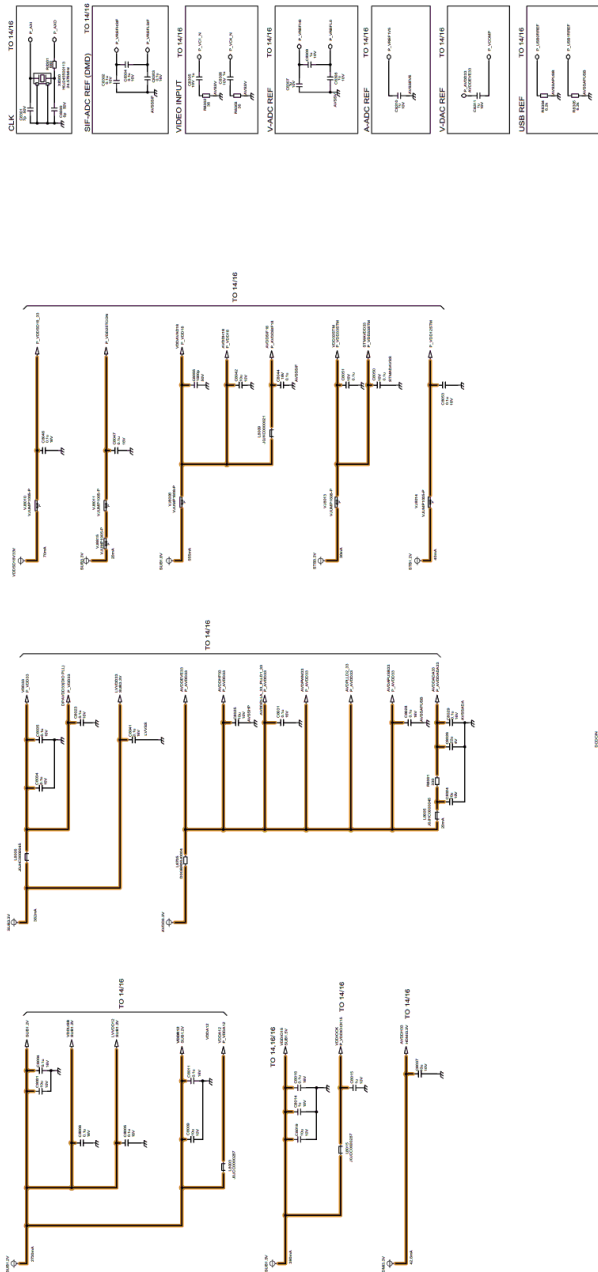

135

134

133

132


131


130


129


128

127

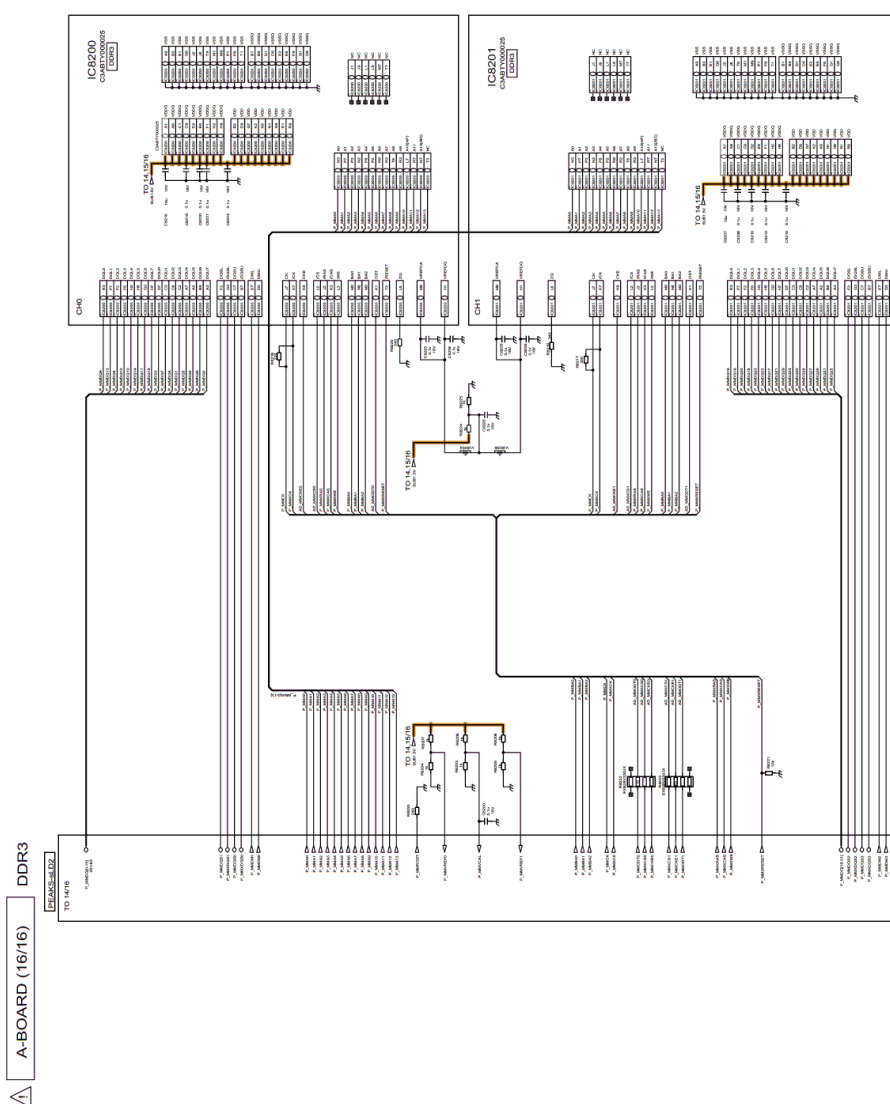


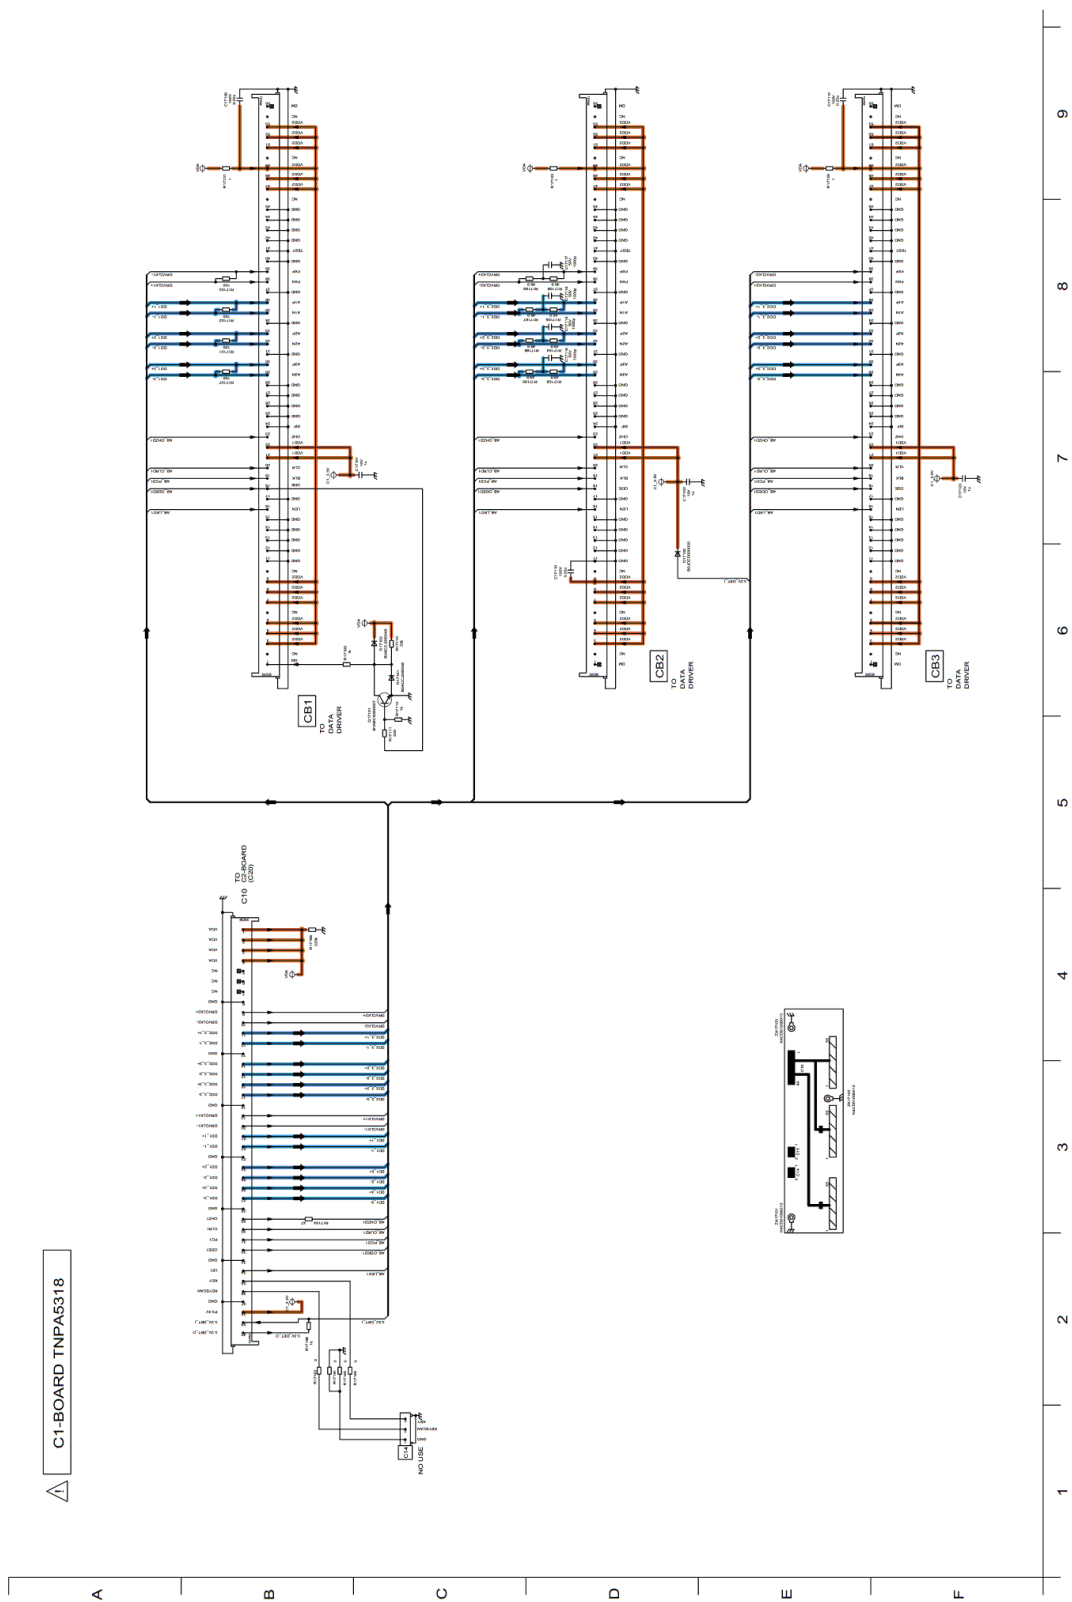

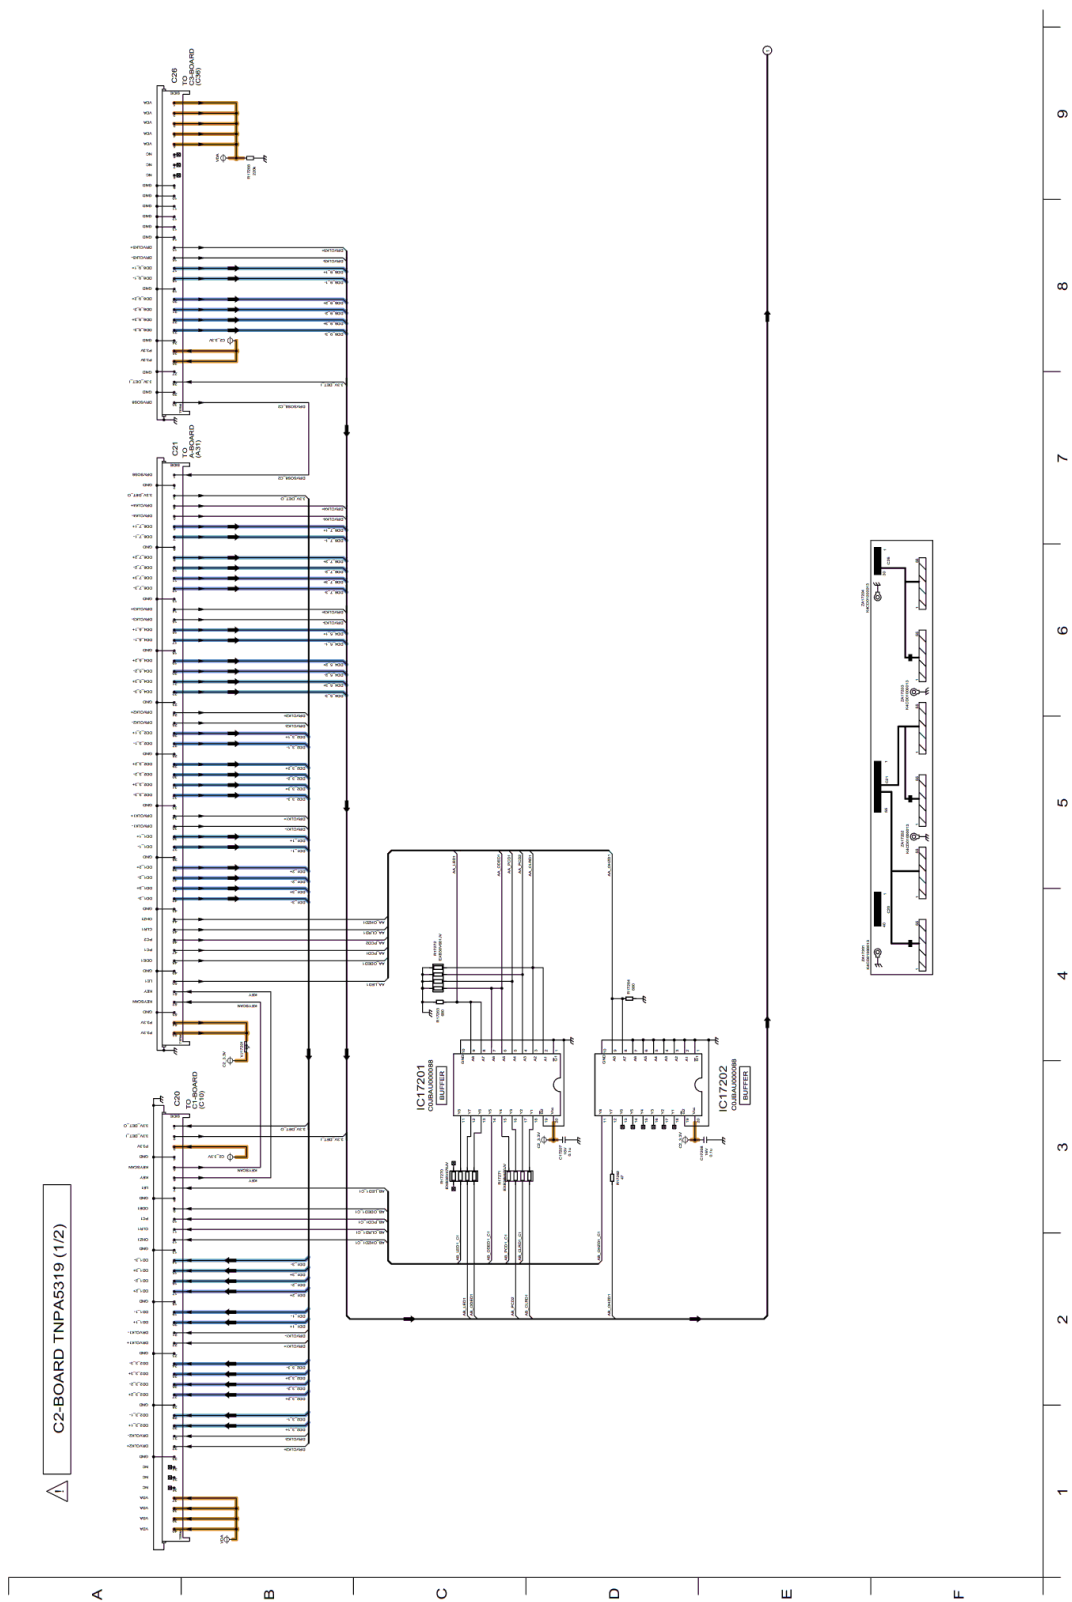


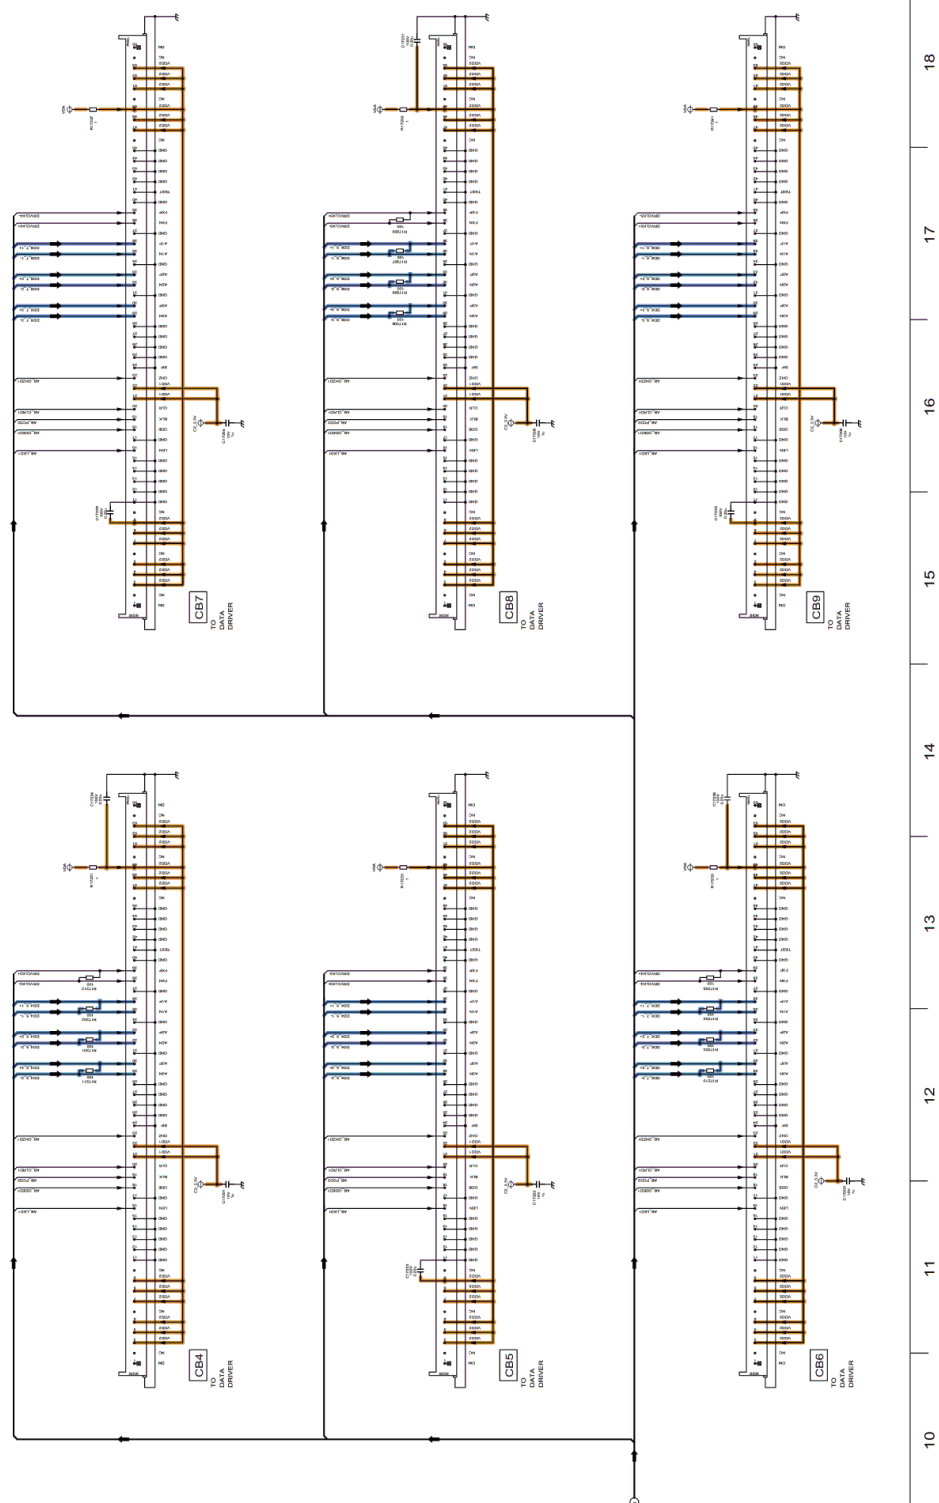


Model No. : TX-P50U30E/J, PR50U30/31 C3-Board (1/2)

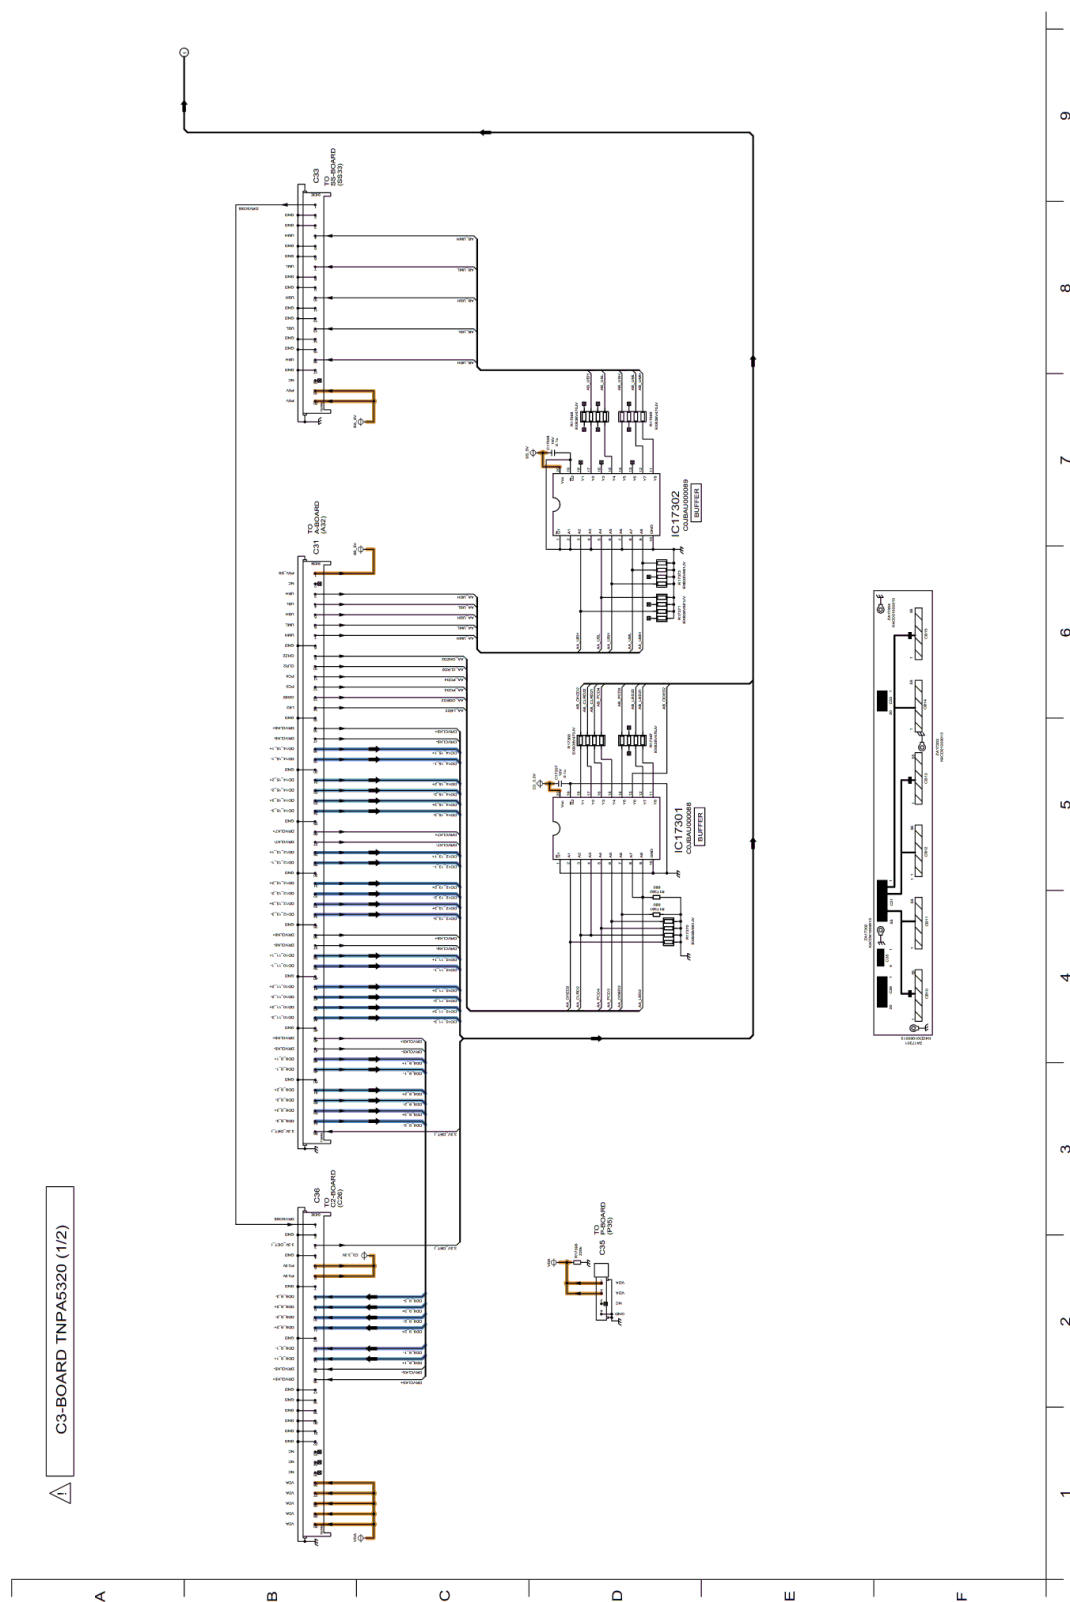



C3-BOARD TNPA5320 (2/2)

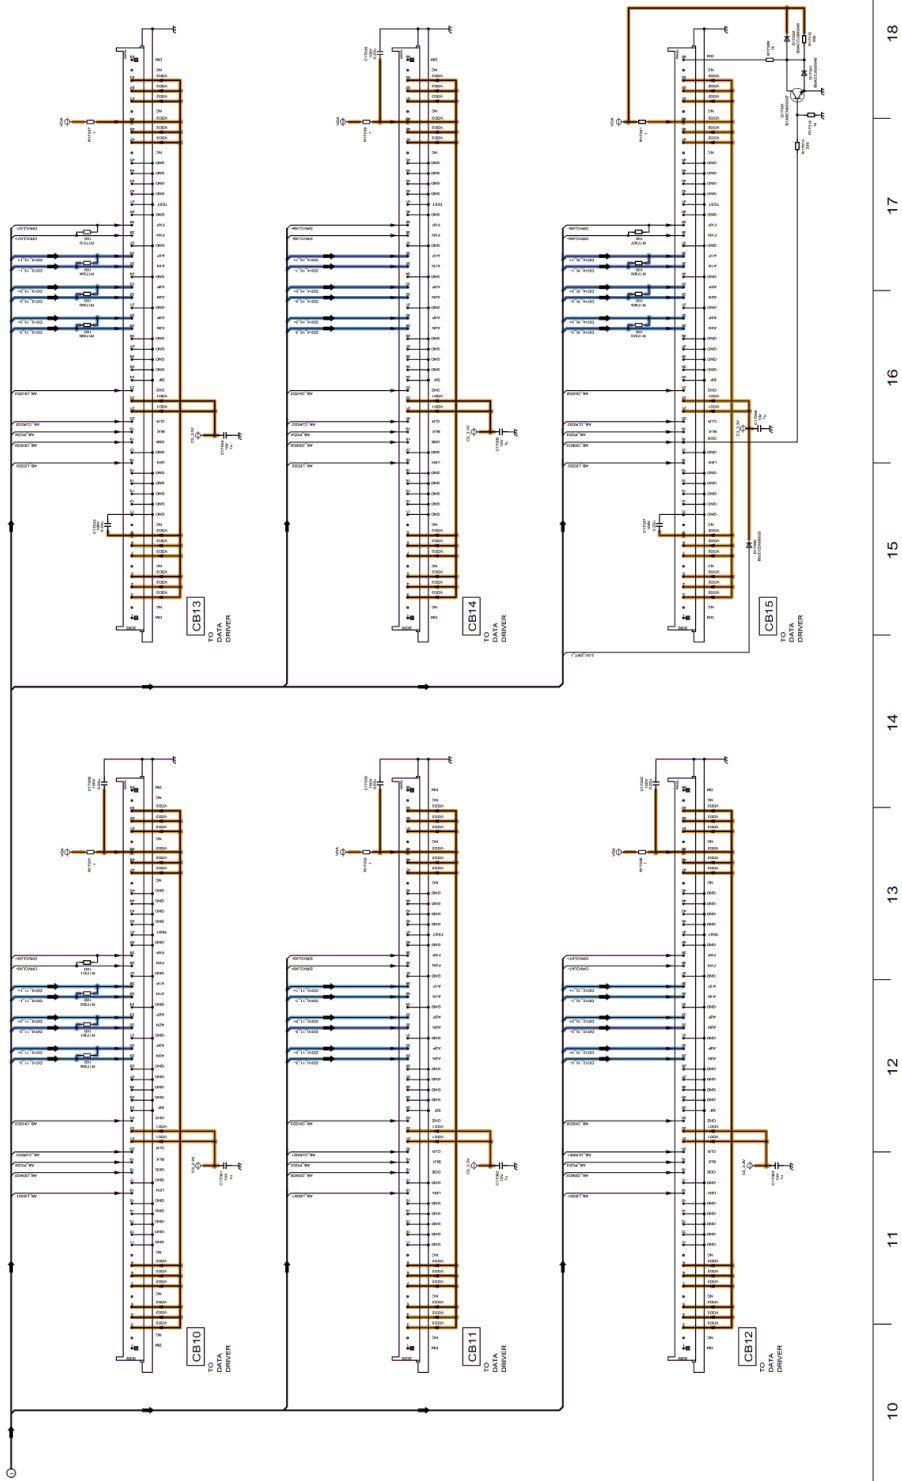


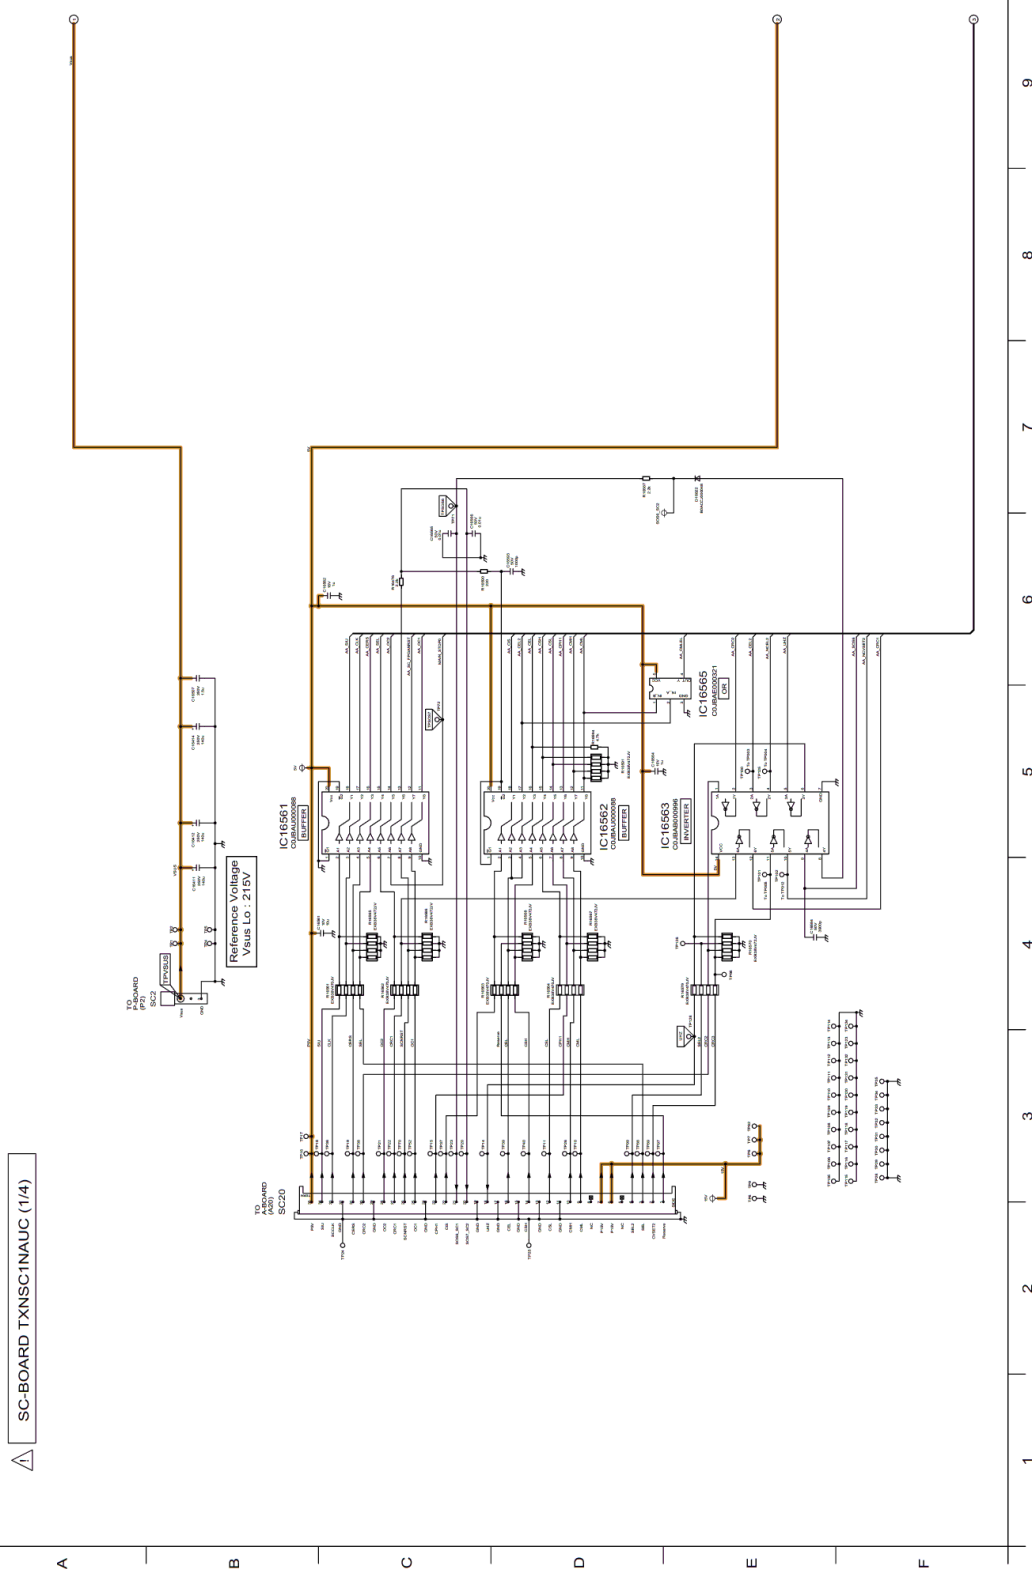


SC-BOARD TXNSC1NAUC (2/4)

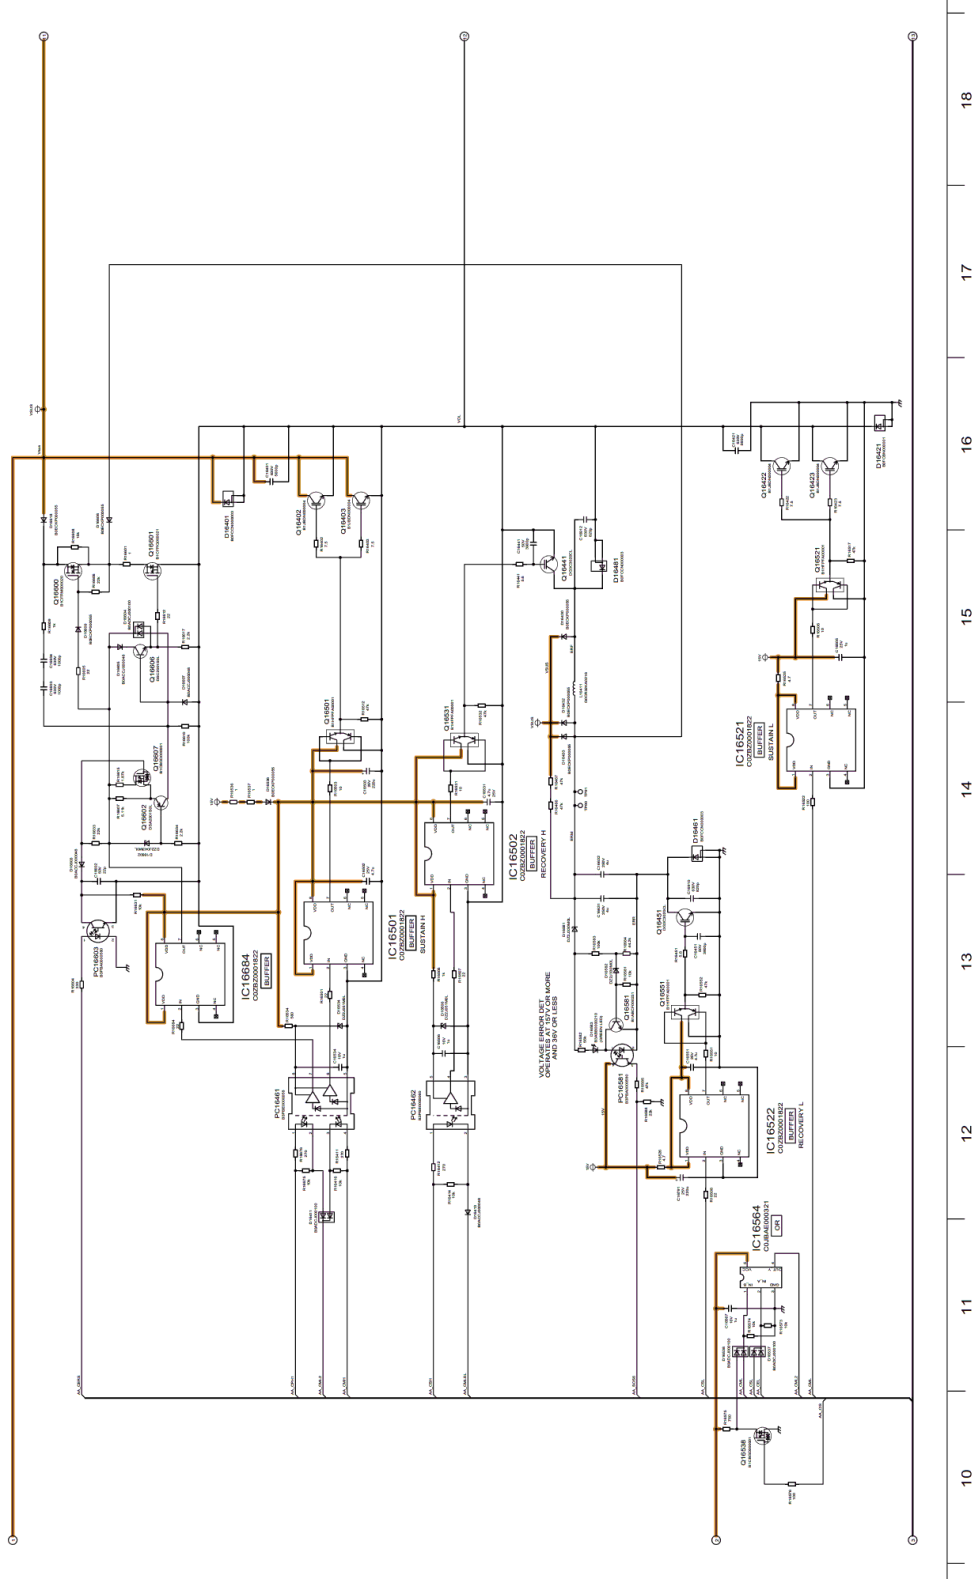






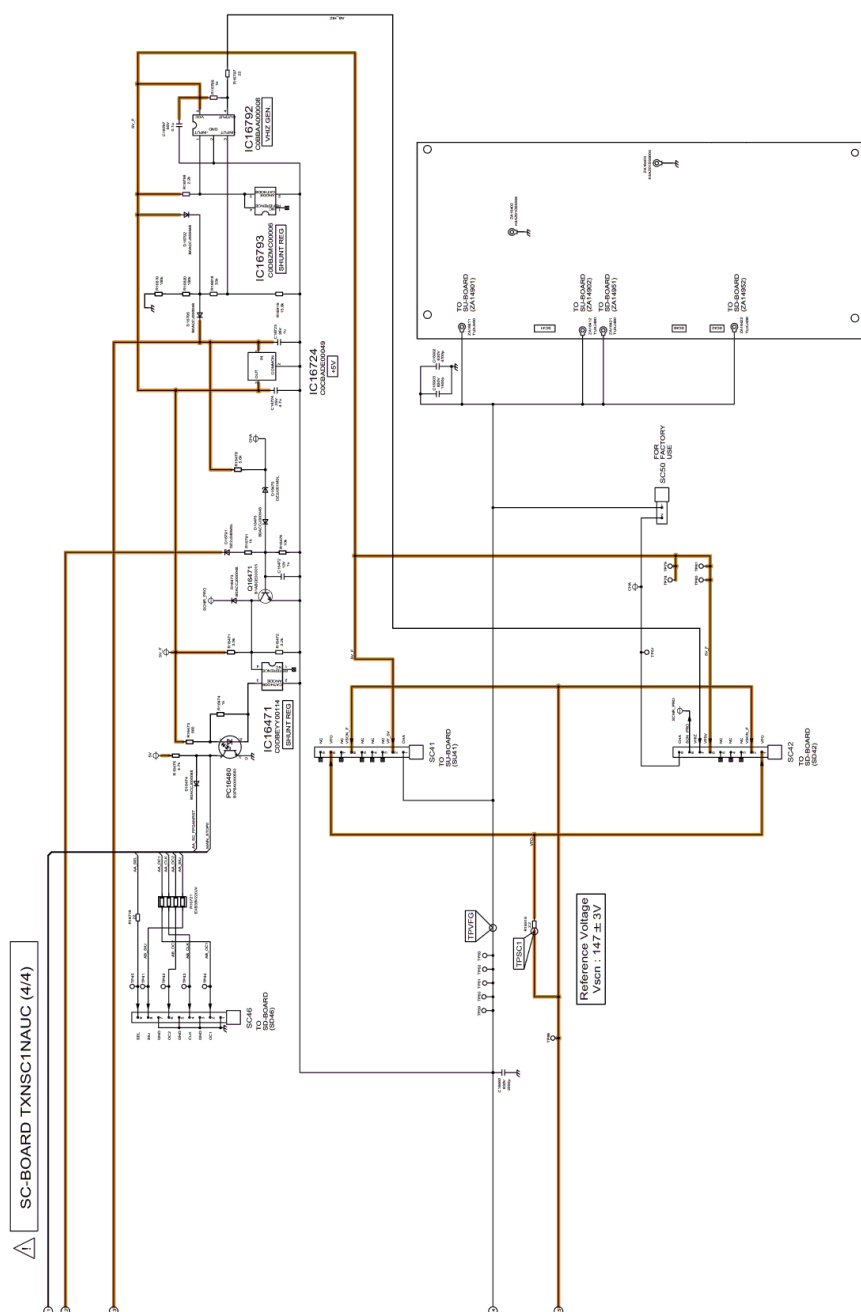



Model No. : TX-P50U30E/J, PR50U30/31 SS-Board (1/2)

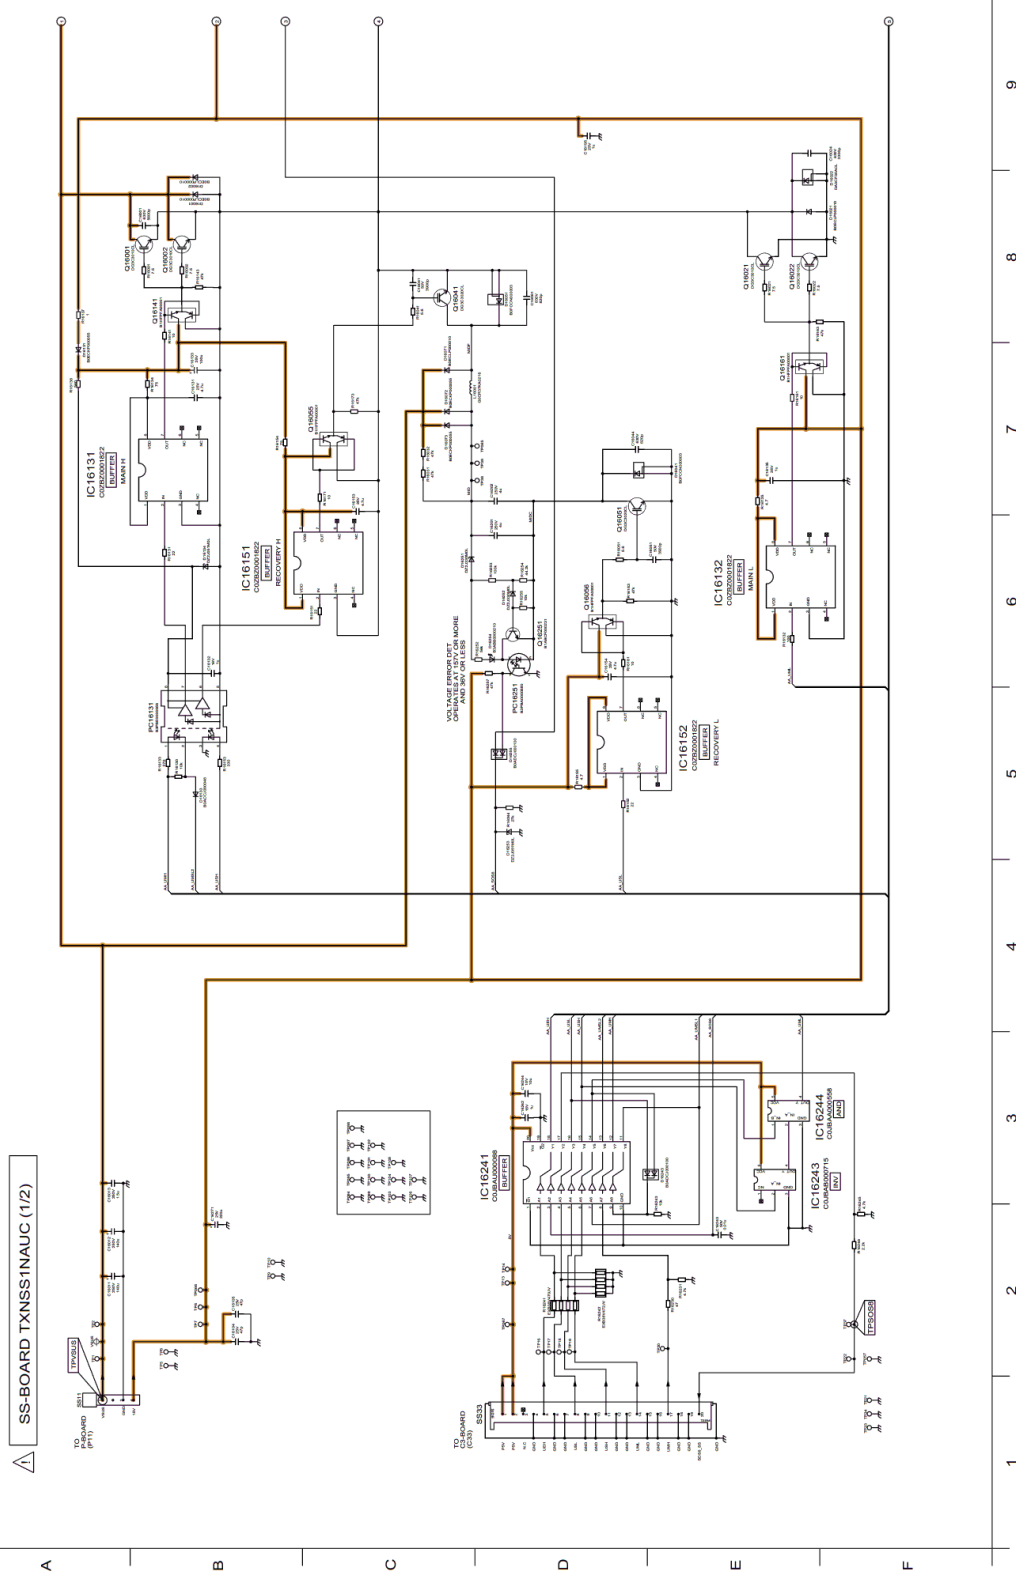


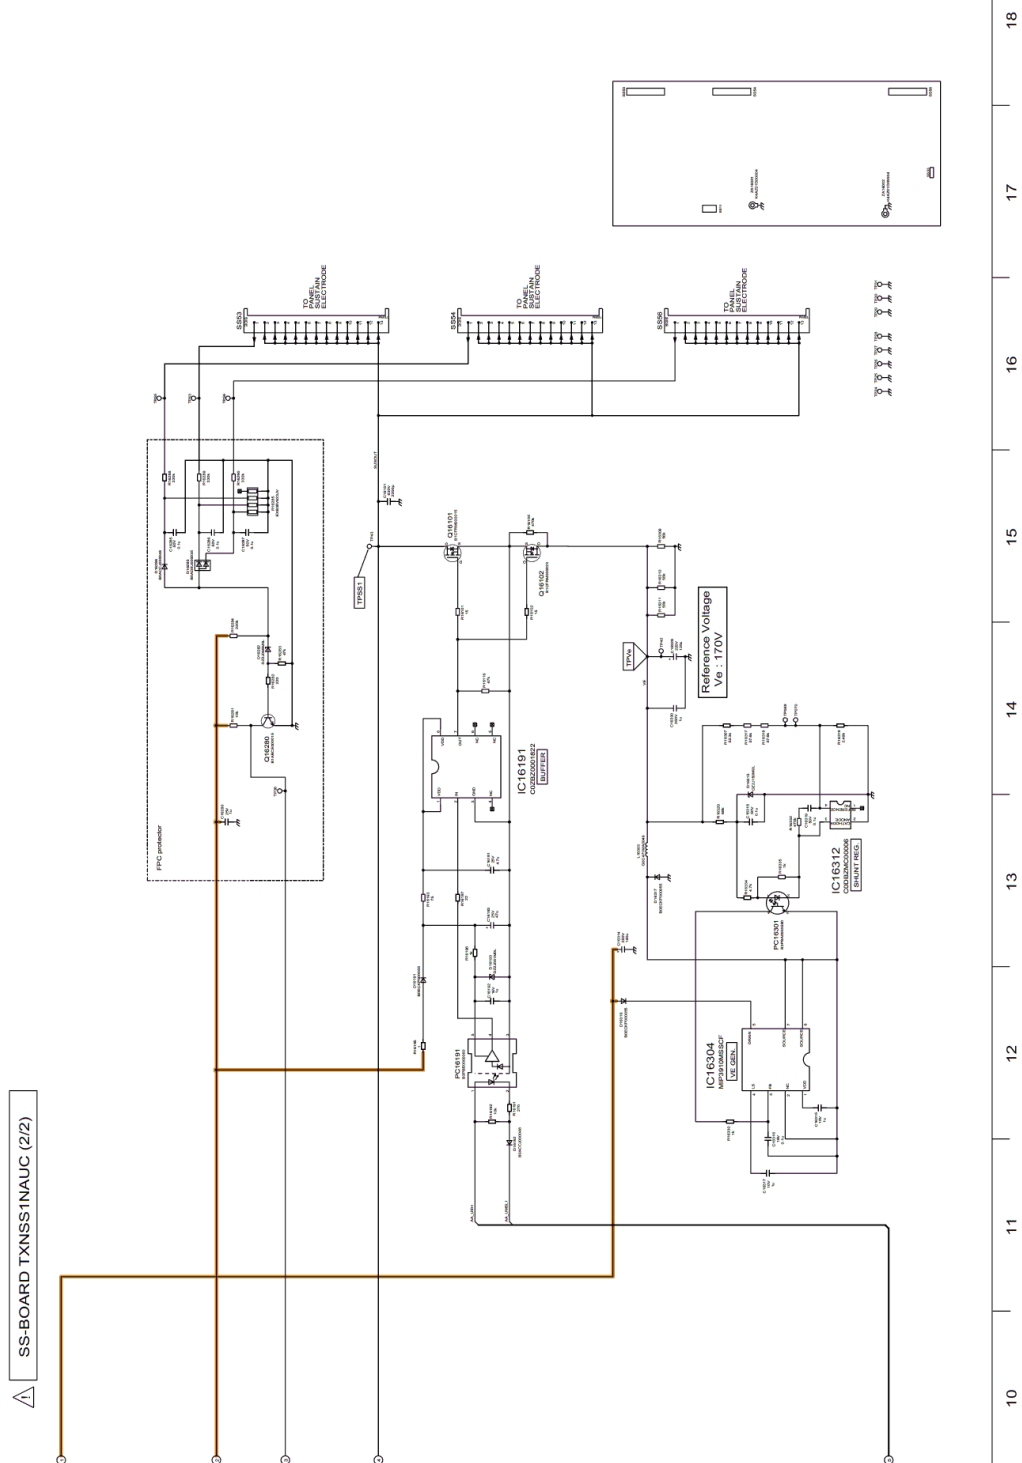


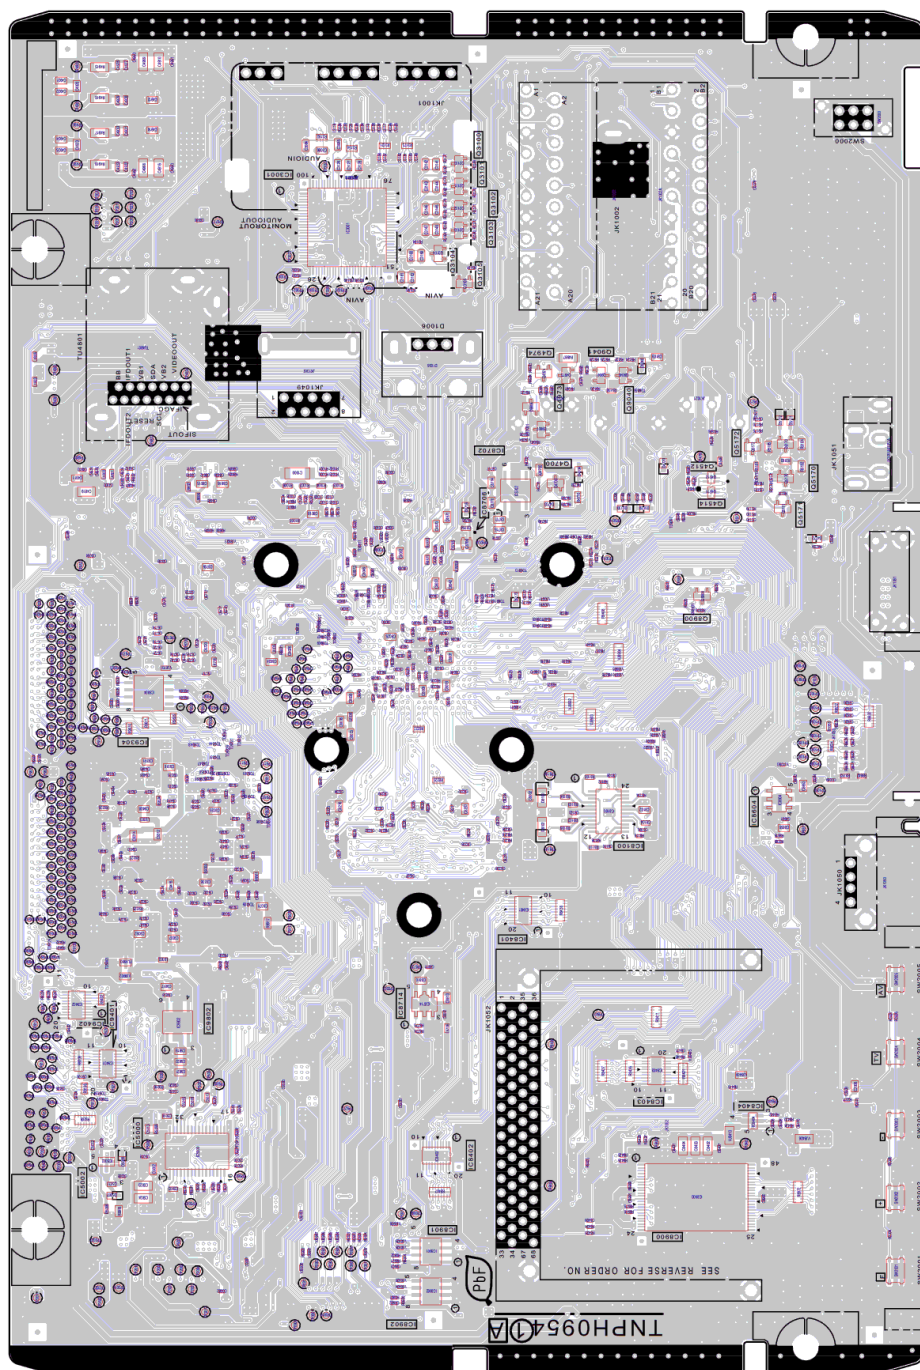


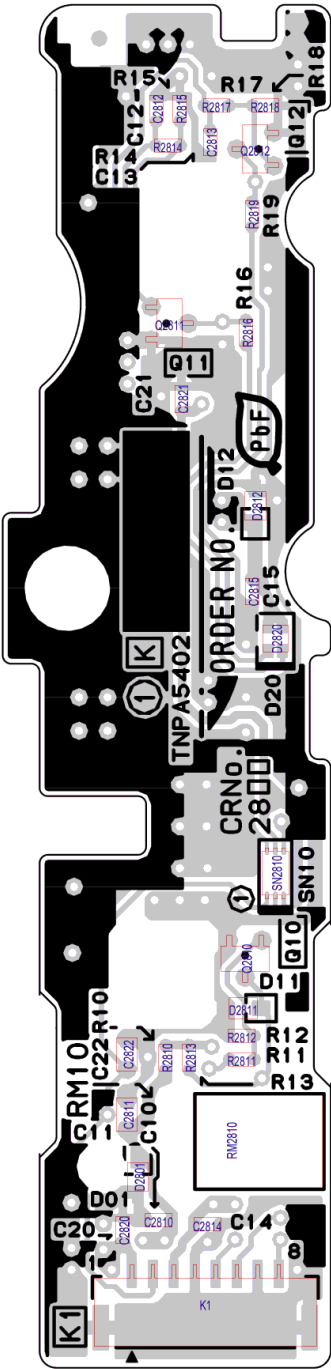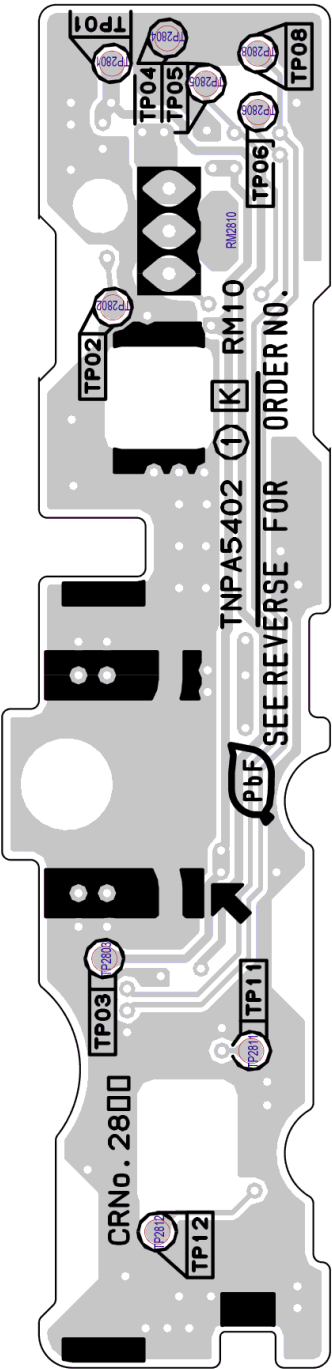


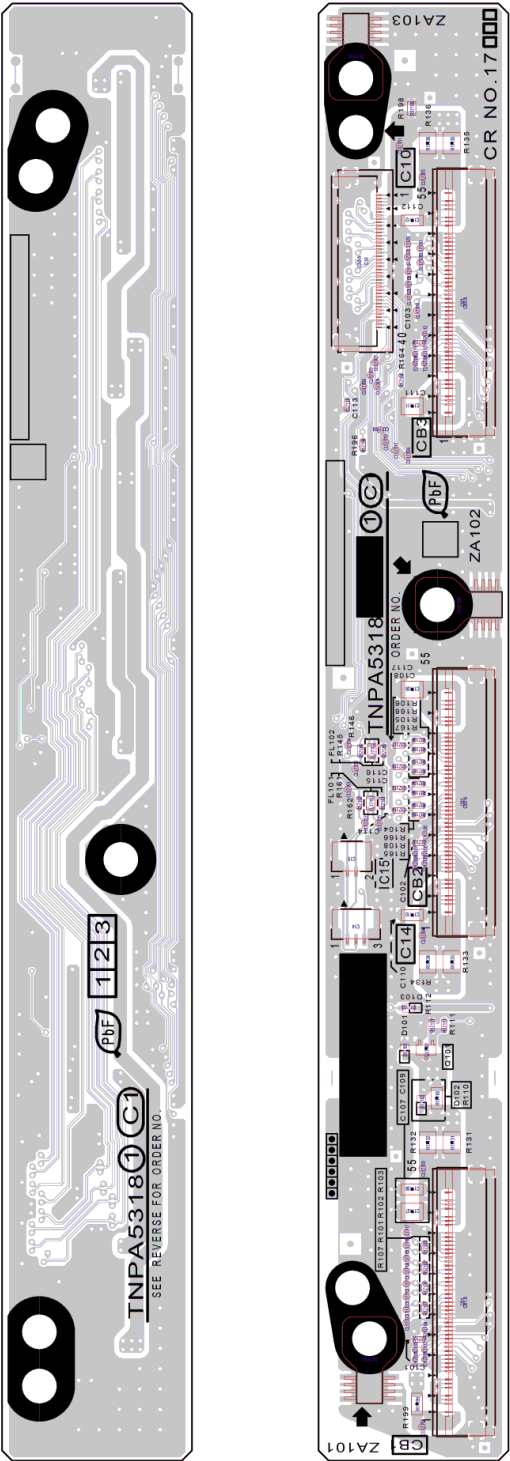

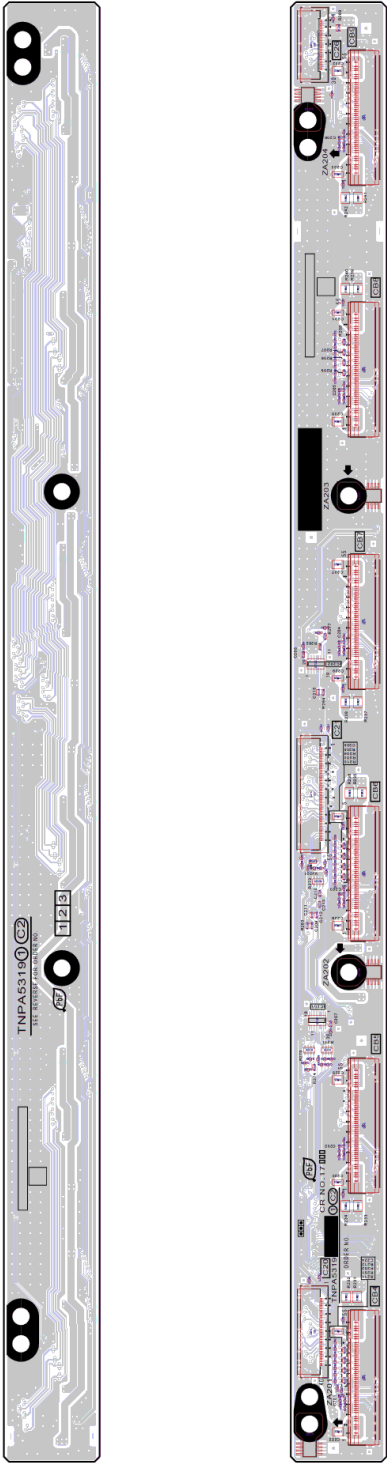

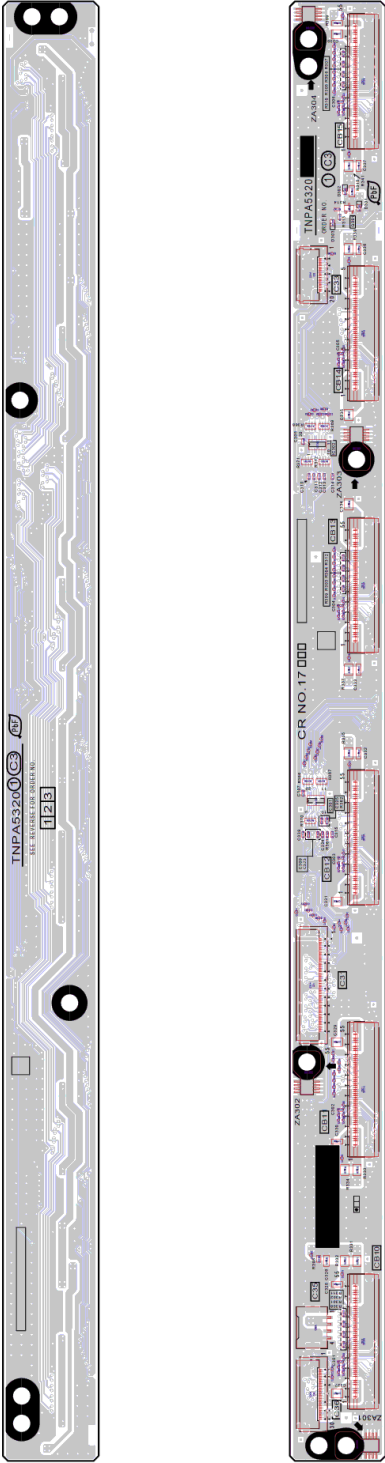

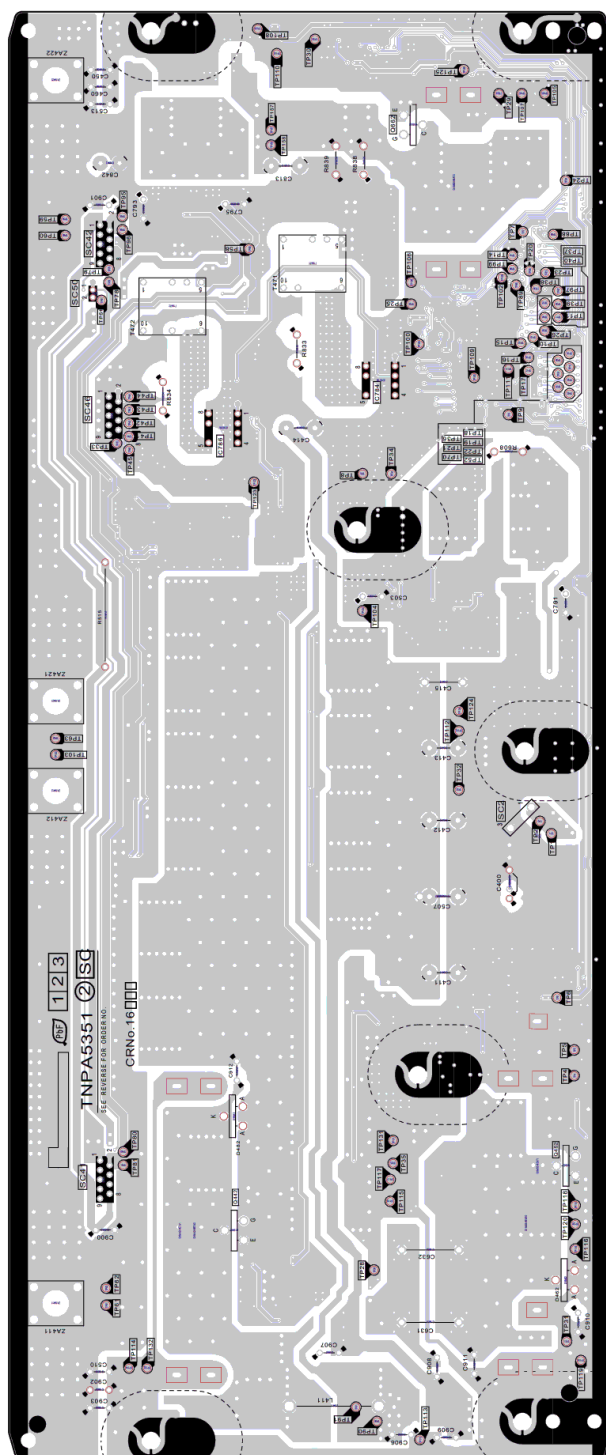

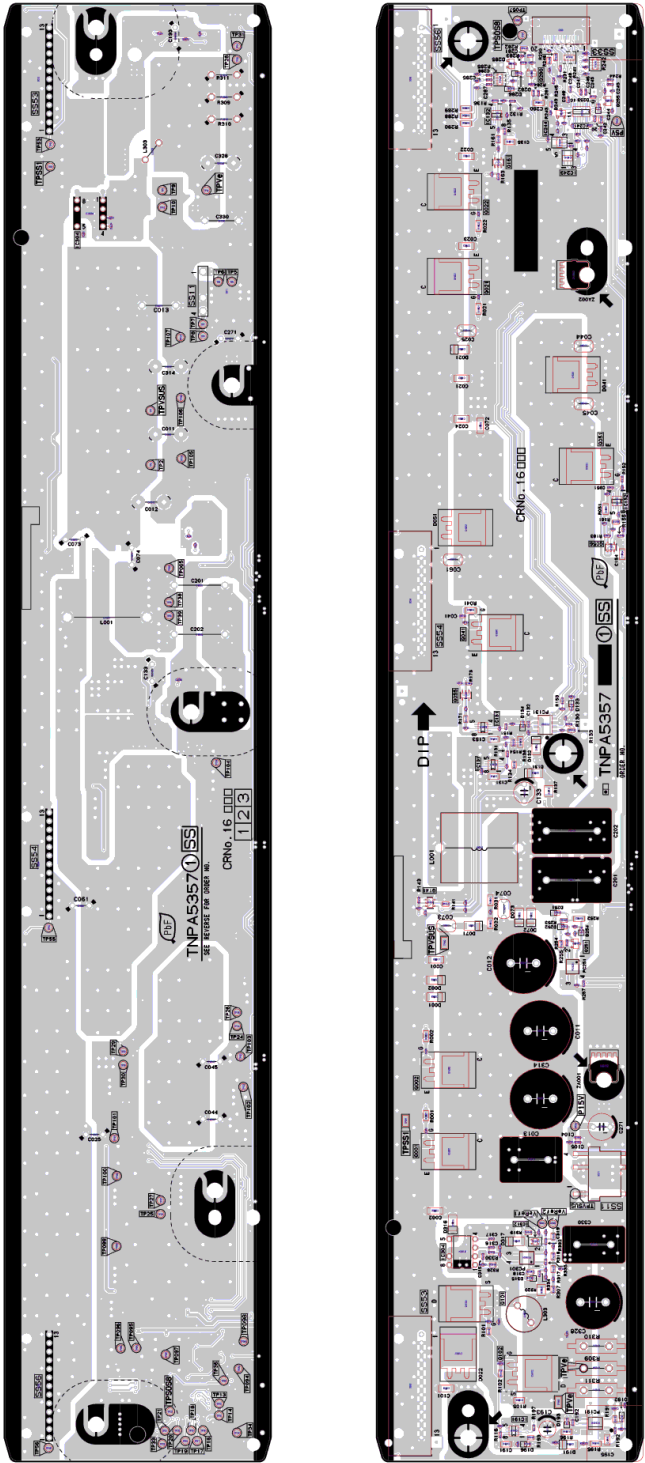

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	PCB	NOAE5JK00009	CIRCUIT BOARD P	1	PAVCCZ
	PCB	A-P50U30E	CIRCUIT BOARD A	1	(RTL) PAVCCZ P50U30E
	PCB	A-P50U30J	CIRCUIT BOARD A	1	(RTL) PAVCCZ P50U30J
	PCB	A-PR50U30	CIRCUIT BOARD A	1	(RTL) PAVCCZ PR50U30
	PCB	A-PR50U31	CIRCUIT BOARD A	1	(RTL) PAVCCZ PR50U31
	PCB	TXN/K1RLUE	CIRCUIT BOARD K	1	(RTL) PAVCCZ
	PCB	TNPA5318	CIRCUIT BOARD C1	1	(RTL)
	PCB	TNPA5319	CIRCUIT BOARD C2	1	(RTL)
	PCB	TNPA5320	CIRCUIT BOARD C3	1	(RTL)
	PCB	TXNSC1NAUC	CIRCUIT BOARD SC	1	(RTL) PAVCCZ
	PCB	TXNSD1NAUC	CIRCUIT BOARD SD	1	PAVCCZ
	PCB	TXNSS1NAUC	CIRCUIT BOARD SS	1	(RTL) PAVCCZ
	PCB	TXNSU1NAUC	CIRCUIT BOARD SU	1	PAVCCZ
	A1	K1KY08AA0719	8P CONNECTOR	1	
	A6	K1KY15B00006	15P CONNECTOR	1	PAVCCZ
	A11	K1KY04B00013	4P CONNECTOR	1	PAVCCZ
	A20	K1MY35BA0345	35P CONNECTOR	1	
	A31	K1MY55BA0345	55P CONNECTOR	1	
	A32	K1MY55BA0345	55P CONNECTOR	1	
	A35	K1KY03AA0719	3P CONNECTOR	1	
	C0059	FlG1H1020008	C 1000PF 50V	1	
	C0071	FlG1H1020008	C 1000PF 50V	1	
	C0072	FlG1H1020008	C 1000PF 50V	1	
	C0074	FlG1H1020008	C 1000PF 50V	1	
	C0075	FlG1H1020008	C 1000PF 50V	1	
	C1050	FlG1C104A077	C 0.1UF 16V	1	
	C1051	FlJ0G2260001	C 22 UF 4 V	1	
	C1053	FlJ0G2260001	C 22 UF 4 V	1	
	C2003	FlJ1A106A087	C 10UF, 10V	1	
	C2004	FlJ1E105A231	C 1 UF 25V	1	
	C2006	FlG1E1030005	C 0.01UF 25V	1	
	C2008	FlJ1H102A721	C 1000pF, 50V	1	
	C2009	FlG1E1030005	C 0.01UF 25V	1	
	C2014	FlG1C104A077	C 0.1UF 16V	1	
	C2026	FlG1H1020008	C 1000PF 50V	1	
	C2027	FlG1C104A077	C 0.1UF 16V	1	
	C2810	ECJ1VB1H103K	C 0.01UF, 50V	1	
	C2811	FlJ1A106A087	C 10UF, 10V	1	
	C2815	ECJ1VB1H103K	C 0.01UF, 50V	1	
	C2821	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C3001	FlG1A105A047	C 1UF 10V	1	
	C3002	FlG1A105A047	C 1UF 10V	1	
	C3003	FlG1C104A077	C 0.1UF 16V	1	
	C3004	FlG1C104A077	C 0.1UF 16V	1	
	C3005	FlG1A105A047	C 1UF 10V	1	
	C3006	FlG1A105A047	C 1UF 10V	1	
	C3011	FlJ1A106A043	C 10UF, 10V	1	
	C3016	FlG1C104A077	C 0.1UF 16V	1	
	C3018	FlG1C104A077	C 0.1UF 16V	1	
	C3019	FlG1C104A077	C 0.1UF 16V	1	
	C3020	FlJ1A106A043	C 10UF, 10V	1	
	C3028	FlJ1A106A087	C 10UF, 10V	1	
	C3084	FlJ1A106A043	C 10UF, 10V	1	
	C3085	FlJ1A106A043	C 10UF, 10V	1	
	C3086	FlJ1A106A043	C 10UF, 10V	1	
	C3108	FlG1E333A091	C 0.033UF 25V	1	
	C3109	FlG1E333A091	C 0.033UF 25V	1	
	C3120	F2H1A101A040	C 100UF, 10V	1	PAVCCZ
	C3121	F2H1A101A040	C 100UF, 10V	1	PAVCCZ
	C3124	FlJ1A106A043	C 10UF, 10V	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	C3130	FIJ1A106A043	C 10UF, 10V	1	
	C3131	FIJ1A106A043	C 10UF, 10V	1	
	C3132	FIJ1A106A043	C 10UF, 10V	1	
	C3135	FIJ1H5610004	C 560 pF 50 V	1	PAVCCZ
	C3136	FIJ1H5610004	C 560 pF 50 V	1	PAVCCZ
	C3139	FIJ1H5610004	C 560 pF 50 V	1	PAVCCZ
	C3140	FIJ1H5610004	C 560 pF 50 V	1	PAVCCZ
	C3145	FIJ1A106A043	C 10UF, 10V	1	
	C3146	FIJ1A106A043	C 10UF, 10V	1	
	C3147	FIJ1A106A043	C 10UF, 10V	1	
	C3148	FIJ1A106A043	C 10UF, 10V	1	
	C3151	FIJ1A105A047	C 1UF 10V	1	
	C3152	FIJ1A105A047	C 1UF 10V	1	
	C3153	FIJ1H5610004	C 560 pF 50 V	1	PAVCCZ
	C3154	FIJ1H5610004	C 560 pF 50 V	1	PAVCCZ
	C3155	FIJ1H5610004	C 560 pF 50 V	1	PAVCCZ
	C3156	FIJ1H5610004	C 560 pF 50 V	1	PAVCCZ
	C3157	FIJ1A105A047	C 1UF 10V	1	
	C3158	FIJ1A105A047	C 1UF 10V	1	
	C3159	FIJ1A106A043	C 10UF, 10V	1	
	C3160	FIJ1A106A043	C 10UF, 10V	1	
	C3161	FIJ1A106A043	C 10UF, 10V	1	
	C3162	FIJ1A106A043	C 10UF, 10V	1	
	C3172	FIJ1A105A047	C 1UF 10V	1	
	C3173	FIJ1A105A047	C 1UF 10V	1	
	C3174	FIJ1A105A047	C 1UF 10V	1	
	C3175	FIJ1A105A047	C 1UF 10V	1	
	C3178	FIJ1A106A043	C 10UF, 10V	1	
	C3179	FIJ1A106A043	C 10UF, 10V	1	
	C4546	ECJ1VB0J105K	C 1UF, 6.3V	1	
	C4548	FIJ1A105A047	C 1UF 10V	1	
	C4800	FIJ1A105A047	C 1UF 10V	1	
	C4801	FIJ1A105A047	C 1UF 10V	1	
	C4802	FIJ1H220A565	C 22PF, 50V	1	
	C4803	FIJ1C104A077	C 0.1UF 16V	1	
	C4804	FIJ1C104A077	C 0.1UF 16V	1	
	C4805	FIJ1C104A077	C 0.1UF 16V	1	
	C4807	FIJ1A106A043	C 10UF, 10V	1	
	C4809	FIJ1A106A043	C 10UF, 10V	1	
	C4811	FIJ1A106A043	C 10UF, 10V	1	
	C4812	FIJ1H1020008	C 1000PF 50V	1	
	C4816	FIJ1C104A077	C 0.1UF 16V	1	
	C4817	FIJ1H330A565	C 33PF, 50V	1	
	C4818	FIJ1H330A565	C 33PF, 50V	1	
	C4820	FIJ1E105A231	C 1 UF 25V	1	
	C4821	ECJ1VB1A105K	C 1UF, 10V	1	
	C4898	FIJ1H220A565	C 22PF, 50V	1	
	C4907	FIJ1E106A136	C 10UF, 25V	1	
	C4908	FIJ1H1020008	C 1000PF 50V	1	
	C4909	FIJ1E105A231	C 1 UF 25V	1	
	C4911	FIJ1H104A970	C 0.1UF, , 50V	1	
	C4912	FIJ1E105A231	C 1 UF 25V	1	
	C4913	FIJ1H104A970	C 0.1UF, , 50V	1	
	C4914	FIJ1E105A231	C 1 UF 25V	1	
	C4915	FIJ1H104A970	C 0.1UF, , 50V	1	
	C4917	FIJ1H104A970	C 0.1UF, , 50V	1	
	C4918	FIJ1E105A231	C 1 UF 25V	1	
	C4919	FIJ1H1020008	C 1000PF 50V	1	
	C4921	FIJ1E4740001	C 0.47UF, 25V	1	PAVCCZ
	C4922	FIJ1E4740001	C 0.47UF, 25V	1	PAVCCZ
	C4924	FIJ1E4740001	C 0.47UF, 25V	1	PAVCCZ
	C4925	FIJ1E4740001	C 0.47UF, 25V	1	PAVCCZ

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	C4934	FlG1H1020008	C 1000PF 50V	1	
	C4935	FlG1H1020008	C 1000PF 50V	1	
	C4936	FlG1H1020008	C 1000PF 50V	1	
	C4937	FlG1H1020008	C 1000PF 50V	1	
	C4938	FlK1E106A136	C 10UF, 25V	1	
	C4939	FlK1E106A136	C 10UF, 25V	1	
	C4970	FlJ1A106A087	C 10UF, 10V	1	
	C4971	FlJ1A106A087	C 10UF, 10V	1	
	C4972	F2H1A101A040	C 100UF, 10V	1	PAVCCZ
	C4973	F2H1A101A040	C 100UF, 10V	1	PAVCCZ
	C5000	FlG1E1030005	C 0.01UF 25V	1	
	C5002	FlJ1E105A231	C 1 UF 25V	1	
	C5003	FlH1C105A145	C 1 uF 16 V	1	
	C5012	EEH1C101UP	C 100PF, J, 16V	1	
	C5013	ECJ1VB1A105K	C 1UF, 10V	1	
	C5014	ECJ1VB1A105K	C 1UF, 10V	1	
	C5015	ECJ1VB1A105K	C 1UF, 10V	1	
	C5016	ECJ1VB1A105K	C 1UF, 10V	1	
	C5017	ECJ1VB1A105K	C 1UF, 10V	1	
	C5018	FlG1C104A077	C 0.1UF 16V	1	
	C5020	FlG1E1030005	C 0.01UF 25V	1	
	C5023	FlK1E106A136	C 10UF, 25V	1	
	C5031	ECJ1VB1A105K	C 1UF, 10V	1	
	C5032	ECJ1VB1A105K	C 1UF, 10V	1	
	C5170	FlG1C104A077	C 0.1UF 16V	1	
	C5171	FlG1C104A077	C 0.1UF 16V	1	
	C5173	FlG1C104A077	C 0.1UF 16V	1	
	C5174	FlG1C104A077	C 0.1UF 16V	1	
	C5255	ECJ1VB1A105K	C 1UF, 10V	1	
	C5256	ECJ1VB1A105K	C 1UF, 10V	1	
	C8001	FlJ1A106A087	C 10UF, 10V	1	
	C8004	FlG1C104A077	C 0.1UF 16V	1	
	C8005	FlG1C104A077	C 0.1UF 16V	1	
	C8006	FlG1C104A077	C 0.1UF 16V	1	
	C8009	FlJ1A106A087	C 10UF, 10V	1	
	C8011	FlG1C104A077	C 0.1UF 16V	1	
	C8014	FlG1A105A047	C 1UF 10V	1	
	C8015	FlG1A105A047	C 1UF 10V	1	
	C8016	FlG1C104A077	C 0.1UF 16V	1	
	C8019	FlJ1A106A087	C 10UF, 10V	1	
	C8023	FlG1C104A077	C 0.1UF 16V	1	
	C8024	FlJ1A106A087	C 10UF, 10V	1	
	C8025	FlJ1A106A087	C 10UF, 10V	1	
	C8026	FlJ0G2260001	C 22 UF 4 V	1	
	C8028	FlG1C104A077	C 0.1UF 16V	1	
	C8029	FlG1C104A077	C 0.1UF 16V	1	
	C8031	FlG1C104A077	C 0.1UF 16V	1	
	C8034	FlG1C104A077	C 0.1UF 16V	1	
	C8035	FlG1C104A077	C 0.1UF 16V	1	
	C8037	FlJ1A106A087	C 10UF, 10V	1	
	C8041	FlG1C104A077	C 0.1UF 16V	1	
	C8042	FlJ1A106A087	C 10UF, 10V	1	
	C8044	FlG1C104A077	C 0.1UF 16V	1	
	C8046	FlG1C104A077	C 0.1UF 16V	1	
	C8047	FlG1C104A077	C 0.1UF 16V	1	
	C8050	FlG1C104A077	C 0.1UF 16V	1	
	C8051	FlG1C104A077	C 0.1UF 16V	1	
	C8053	FlG1C104A077	C 0.1UF 16V	1	
	C8054	FlG1C104A077	C 0.1UF 16V	1	
	C8055	FlG1H1020008	C 1000PF 50V	1	
	C8100	FlG1E682A123	C 6800 pF 25 V	1	
	C8102	FlJ1A475A087	C 4.7UF, 10V	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	C8104	FIH1C105A145	C 1 uF 16 V	1	
	C8106	FIg1C223A081	C 0.022UF, 16V	1	
	C8108	FIg1C104A077	C 0.1UF 16V	1	
	C8110	FIg1C104A077	C 0.1UF 16V	1	
	C8112	FIK1E106A136	C 10UF, 25V	1	
	C8114	FIK1E106A136	C 10UF, 25V	1	
	C8116	FIK1E106A136	C 10UF, 25V	1	
	C8118	FIK1E106A136	C 10UF, 25V	1	
	C8120	FIJ0G2260001	C 22 UF 4 V	1	
	C8122	FIJ0G2260001	C 22 UF 4 V	1	
	C8124	FIJ0G2260001	C 22 UF 4 V	1	
	C8126	FIJ0G2260001	C 22 UF 4 V	1	
	C8128	FIJ0G2260001	C 22 UF 4 V	1	
	C8200	FIg1C104A077	C 0.1UF 16V	1	
	C8203	FIg1C104A077	C 0.1UF 16V	1	
	C8204	FIg1C104A077	C 0.1UF 16V	1	
	C8205	FIg1C104A077	C 0.1UF 16V	1	
	C8206	FIg1C104A077	C 0.1UF 16V	1	
	C8207	FIJ1A106A087	C 10UF, 10V	1	
	C8208	FIg1C104A077	C 0.1UF 16V	1	
	C8210	FIg1C104A077	C 0.1UF 16V	1	
	C8212	FIg1C104A077	C 0.1UF 16V	1	
	C8215	FIg1C104A077	C 0.1UF 16V	1	
	C8216	FIJ1A106A087	C 10UF, 10V	1	
	C8218	FIg1C104A077	C 0.1UF 16V	1	
	C8220	FIg1C104A077	C 0.1UF 16V	1	
	C8221	FIg1C104A077	C 0.1UF 16V	1	
	C8224	FIg1C104A077	C 0.1UF 16V	1	
	C8225	FIg1C104A077	C 0.1UF 16V	1	
	C8300	FIg1H6R0A732	C 6.0PF, 50V	1	
	C8301	FIg1H7R0A732	C 7PF, 50V	1	
	C8302	FIg1C104A077	C 0.1UF 16V	1	
	C8303	FIg1C104A077	C 0.1UF 16V	1	
	C8304	FIg1C104A077	C 0.1UF 16V	1	
	C8305	FIg1A105A047	C 1UF 10V	1	
	C8306	FIg1A105A047	C 1UF 10V	1	
	C8307	FIg1A105A047	C 1UF 10V	1	
	C8308	FIg1A105A047	C 1UF 10V	1	
	C8309	FIg1A105A047	C 1UF 10V	1	
	C8310	FIg1A105A047	C 1UF 10V	1	
	C8311	FIg1A105A047	C 1UF 10V	1	
	C8401	FIg1C104A077	C 0.1UF 16V	1	
	C8402	FIK0J226A049	C 22UF, 6.3V	1	PAVCCZ
	C8403	FIK0J226A049	C 22UF, 6.3V	1	PAVCCZ
	C8406	FIg1C104A077	C 0.1UF 16V	1	
	C8407	FIg1C104A077	C 0.1UF 16V	1	
	C8411	FIg1C104A077	C 0.1UF 16V	1	
	C8619	FIg1C104A077	C 0.1UF 16V	1	
	C8620	FIg1C104A077	C 0.1UF 16V	1	
	C8653	FIJ1A106A043	C 10UF, 10V	1	
	C8655	FIJ1A106A043	C 10UF, 10V	1	
	C8707	FIg1C223A081	C 0.022UF, 16V	1	
	C8708	FIJ1A106A043	C 10UF, 10V	1	
	C8709	FIJ1A106A043	C 10UF, 10V	1	
	C8711	FIg1A333A032	C0.033UF, 10V	1	
	C8712	FIg1H5610004	C 560 pF 50 V	1	PAVCCZ
	C8714	FIJ1A475A087	C 4.7UF, 10V	1	
	C8715	FIJ1A106A087	C 10UF, 10V	1	
	C8716	FIg1C104A077	C 0.1UF 16V	1	
	C8717	FIg1C104A077	C 0.1UF 16V	1	
	C8724	FIK1E106A136	C 10UF, 25V	1	
	C8764	ECJ1VB1A105K	C 1UF, 10V	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	C8765	ECJ1VB1A105K	C 1UF, 10V	1	
	C8773	FlK1E106A136	C 10UF, 25V	1	
	C8774	FlK1E106A136	C 10UF, 25V	1	
	C8775	FlG1C223A081	C 0.022UF, 16V	1	
	C8776	FlG1E1030005	C 0.01UF 25V	1	
	C8777	FlG1E1030005	C 0.01UF 25V	1	
	C8779	FlJ0G2260001	C 22 UF 4 V	1	
	C8780	FlJ0G2260001	C 22 UF 4 V	1	
	C8810	FlJ1A106A043	C 10UF, 10V	1	
	C8813	FlJ1A106A043	C 10UF, 10V	1	
	C8900	FlG1C104A077	C 0.1UF 16V	1	
	C8901	FlG1C104A077	C 0.1UF 16V	1	
	C8902	FlG1C104A077	C 0.1UF 16V	1	
	C8903	FlG1C104A077	C 0.1UF 16V	1	
	C9097	FlJ0G2260001	C 22 UF 4 V	1	
	C9098	FlJ0G2260001	C 22 UF 4 V	1	
	C9099	FlG1C104A077	C 0.1UF 16V	1	
	C9100	FlJ1A106A087	C 10UF, 10V	1	
	C9101	FlG1E1030005	C 0.01UF 25V	1	
	C9102	FlK1E106A136	C 10UF, 25V	1	
	C9103	FlG1E1030005	C 0.01UF 25V	1	
	C9104	FlG1C104A077	C 0.1UF 16V	1	
	C9105	FlG1C104A077	C 0.1UF 16V	1	
	C9106	FlG1H5610004	C 560 pF 50 V	1	PAVCCZ
	C9108	FlG1C104A077	C 0.1UF 16V	1	
	C9300	FlG1C104A077	C 0.1UF 16V	1	
	C9301	FlG1H150A565	C 15PF, 50V	1	
	C9302	FlG1H180A565	C 18PF, 50V	1	
	C9308	FlG1C104A077	C 0.1UF 16V	1	
	C9311	FlG1C104A077	C 0.1UF 16V	1	
	C9312	FlJ1A106A087	C 10UF, 10V	1	
	C9313	FlG1C104A077	C 0.1UF 16V	1	
	C9328	FlG1C104A077	C 0.1UF 16V	1	
	C9330	FlG1A105A047	C 1UF 10V	1	
	C9331	FlG1A105A047	C 1UF 10V	1	
	C9332	FlG1A105A047	C 1UF 10V	1	
	C9337	FlJ1A106A087	C 10UF, 10V	1	
	C9347	FlG1A105A047	C 1UF 10V	1	
	C9351	FlG1C104A077	C 0.1UF 16V	1	
	C9352	FlG1A105A047	C 1UF 10V	1	
	C9362	FlG1C104A077	C 0.1UF 16V	1	
	C9366	FlG1A105A047	C 1UF 10V	1	
	C9371	FlJ1A106A087	C 10UF, 10V	1	
	C9375	FlG1C104A077	C 0.1UF 16V	1	
	C9380	FlG1C104A077	C 0.1UF 16V	1	
	C9389	FlG1A105A047	C 1UF 10V	1	
	C9392	FlJ1A106A087	C 10UF, 10V	1	
	C9400	FlG1C104A077	C 0.1UF 16V	1	
	C9401	FlG1C104A077	C 0.1UF 16V	1	
	C9402	FlG1C104A077	C 0.1UF 16V	1	
	C9404	FlG1C104A077	C 0.1UF 16V	1	
	C9409	FlG1A105A047	C 1UF 10V	1	
	C9411	FlG1A105A047	C 1UF 10V	1	
	C9413	FlG1A105A047	C 1UF 10V	1	
	C9800	FlG1E1030005	C 0.01UF 25V	1	
	C9801	FlG1E1030005	C 0.01UF 25V	1	
	C9803	FlG1E472A086	C 4700pF 25V	1	
	C9804	FlK1E106A136	C 10UF, 25V	1	
	C9805	FlK1E106A136	C 10UF, 25V	1	
	C9825	FlJ0G2260001	C 22 UF 4 V	1	
	C9826	FlJ0G2260001	C 22 UF 4 V	1	
	C9854	FlG1H1020008	C 1000PF 50V	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	CN0100	K1KA14A00248	14P CONNECTOR	1	
	D1006	K7AAAY000006	PHOTO LINK	1	
	D2820	B3AGB0000065	LED	1	PAVCCZ
	D3130	B0ACCJ000048	DIODE	1	
	D4703	DZ2J056M0L	ZENER DIODE	1	
	D4704	B0JCCD000020	DIODE	1	PAVCCZ
	D4720	DZ2J056M0L	ZENER DIODE	1	
	D4721	B0JCCD000020	DIODE	1	PAVCCZ
	D4773	B0JCCD000008	DIODE	1	
	D5170	B0ADCJ000100	DIODE	1	
	D5171	DZ2J068M0L	ZENER DIODE	1	
	D5172	DZ2J068M0L	ZENER DIODE	1	
	D8716	B0ACCJ000048	DIODE	1	
	D8720	B0JCMD000066	ZENER DIODE	1	
	D9806	B0ADCJ000100	DIODE	1	
	IC2001	C1ZBZ0004368	IC	1	PAVCCZ
	IC3001	C1AB00003384	IC	1	PAVCCZ
	IC4800	C0DBGYY02190	IC	1	PAVCCZ
	IC4900	C1AB00003457	IC	1	PAVCCZ
	IC5000	AN34044A-VF	IC	1	PAVCCZ
	IC5002	C0DBGHC00003	IC	1	
	IC5251	C0CBCBC00227	IC	1	
	IC8000	MN2WS0175C	IC	1	PAVCCZ
	IC8100	C0DBAYY00715	IC	1	
	IC8200	C3ABTY000025	IC	1	
	IC8201	C3ABTY000025	IC	1	
	IC8403	C0JBAZ003032	IC	1	PAVCCZ
	IC8404	C0DBZYY00382	IC	1	PAVCCZ
	IC8604	C0DBAGF00030	IC	1	
	IC8701	C0DBAYY00931	IC	1	PAVCCZ
	IC8702	C0DBAFG00029	IC	1	PAVCCZ
	IC8706	C0DBGYY00887	IC	1	
	IC8707	C0DBAYY00915	IC	1	PAVCCZ
	IC8714	C0DBGYY01682	IC	1	PAVCCZ
	IC8900	TVRS075AJ	IC	1	PAVCCZ
	IC8901	TVR****	IC	1	PAVCCZ
	IC8902	TVR****	IC	1	PAVCCZ
	IC9300	C1AB00003409	IC	1	PAVCCZ
	IC9304	TVRS208AC	IC	1	PAVCCZ
	IC9400	C0JBAU000089	IC	1	PAVCCZ
	IC9401	C0JBAU000089	IC	1	PAVCCZ
	IC9402	C0JBAU000089	IC	1	PAVCCZ
	IC9800	C0DBAYY00915	IC	1	PAVCCZ
	JK1001A	K1U811A00001	CONNECTOR	1	PAVCCZ
	JK1002A	K1FY121A0011	CONNECTOR	1	PAVCCZ
	JK1020	K1FY119D0015	CONNECTOR	1	PAVCCZ
	JK1021	K1FY119D0015	CONNECTOR	1	PAVCCZ
	JK1051A	K2HC1YYB0062	JACK	1	PAVCCZ
	JK1052	K1NA68B00059	68P CONNECTOR	1	PAVCCZ
	JK1053	K1NA12E00016	12P CONNECTOR	1	
	K1	K1KA08B00270	8P CONNECTOR	1	
	L3102	J0JYC0000331	CHIP INDUCTOR	1	
	L3103	J0JYC0000331	CHIP INDUCTOR	1	
	L3108	J0JCC0000287	CHIP INDUCTOR	1	
	L3111	J0JYC0000331	CHIP INDUCTOR	1	
	L3112	J0JYC0000331	CHIP INDUCTOR	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	L3113	J0JYC0000331	CHIP INDUCTOR	1	
	L3116	J0JYC0000331	CHIP INDUCTOR	1	
	L3117	J0JYC0000331	CHIP INDUCTOR	1	
	L3118	J0JYC0000331	CHIP INDUCTOR	1	
	L3119	J0JYC0000331	CHIP INDUCTOR	1	
	L3120	J0JYC0000331	CHIP INDUCTOR	1	
	L3121	J0JCC0000287	CHIP INDUCTOR	1	
	L4800	G1CR39J00009	INDUCTION COIL	1	
	L4801	G1CR39J00009	INDUCTION COIL	1	
	L4802	J0JGC0000020	CHIP INDUCTOR	1	
	L4803	J0JGC0000020	CHIP INDUCTOR	1	
	L4805	J0JGC0000020	CHIP INDUCTOR	1	
	L4807	J0JCC0000278	CHIP INDUCTOR	1	
	L4900	G1C150MA0426	INDUCTION COIL	1	PAVCCZ
	L4901	G1C150MA0426	INDUCTION COIL	1	PAVCCZ
	L4902	G1C150MA0426	INDUCTION COIL	1	PAVCCZ
	L4903	G1C150MA0426	INDUCTION COIL	1	PAVCCZ
	L8003	J0JCC0000287	CHIP INDUCTOR	1	
	L8005	J0JHC0000045	CHIP INDUCTOR	1	
	L8006	J0JHC0000045	CHIP INDUCTOR	1	
	L8009	J0JKC0000021	CHIP INDUCTOR	1	
	L8015	J0JCC0000287	CHIP INDUCTOR	1	
	L8016	J0JCC0000287	CHIP INDUCTOR	1	
	L8100	G1C4R7MA0416	INDUCTION COIL	1	
	L8102	G1C3R3MA0425	INDUCTION COIL	1	
	L8701	G1C6R8MA0445	INDUCTION COIL	1	PAVCCZ
	L8702	G1C6R8MA0445	INDUCTION COIL	1	PAVCCZ
	L8705	D0GBR00J0004	M 0 OHM J 1/10W	1	
	L8706	J0JGC0000020	CHIP INDUCTOR	1	
	L9302	J0JHC0000117	CHIP INDUCTOR	1	
	L9303	J0JHC0000117	CHIP INDUCTOR	1	
	L9800	G1C6R8MA0445	INDUCTION COIL	1	PAVCCZ
	PA2011	K5H5022A0031	FUSE	1	
	Q0900	B1ADCF000194	TRANSISTOR	1	PAVCCZ
	Q2810	B1ABCE000015	TRANSISTOR	1	
	Q2811	B1ABCE000015	TRANSISTOR	1	
	Q2812	B1ABCE000015	TRANSISTOR	1	
	Q3102	B1Aafb000004	TRANSISTOR	1	PAVCCZ
	Q3103	B1Aafb000004	TRANSISTOR	1	PAVCCZ
	Q3104	B1Aafb000004	TRANSISTOR	1	PAVCCZ
	Q3105	B1Aafb000004	TRANSISTOR	1	PAVCCZ
	Q4513	B1ADCF000194	TRANSISTOR	1	PAVCCZ
	Q4514	B1HFCEA00001	TRANSISTOR	1	PAVCCZ
	Q4700	B1ABCF000231	TRANSISTOR	1	
	Q4702	B1ABCF000231	TRANSISTOR	1	
	Q4970	B1ADCF000194	TRANSISTOR	1	PAVCCZ
	Q4971	B1Aafb000002	TRANSISTOR	1	
	Q4972	B1Aafb000002	TRANSISTOR	1	
	Q4973	DSA2001S0L	TRANSISTOR	1	
	Q4974	DSC2001S0L	TRANSISTOR	1	
	Q5170	DSC2001S0L	TRANSISTOR	1	
	Q5171	B1ADCF000194	TRANSISTOR	1	PAVCCZ
	Q5172	B1ADCF000194	TRANSISTOR	1	PAVCCZ
	Q8100	B1MBEDA00027	FET	1	
	Q8102	B1MBEDA00027	FET	1	
	R003	D0GBR00J0004	M 0 OHM J 1/10W	1	
	R0800	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R0902	D0GA473JA015	M 47KOHM, J,1/16W	1	
	R0903	D0GA272JA023	M 2.7KOHM, J.1/16W	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R0904	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R0905	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R0906	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R0907	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R0908	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R0909	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R0910	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R0911	EXB28V222J	M 2.2 OHM 1/32 W	1	
	R0951	D0GA473JA015	M 47KOHM, J,1/16W	1	
	R0952	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R1009	D0GA101JA015	M 100 OHM, J,1/16W	1	
	R2003	D0GA473JA015	M 47KOHM, J,1/16W	1	
	R2004	D1BA1432A014	M14.3KOHM,J.1/16 W	1	PAVCCZ
	R2005	D1BA6651A014	M6.65KOHM,J.1/16 W	1	PAVCCZ
	R2006	D1BA7151A014	M7.15KOHM,J.1/16 W	1	
	R2007	ERJ2RKFL741	M 1.74KOHM, F 1/16 W	1	
	R2008	D0GA184JA023	M 180KOHM J.1/16W	1	
	R2010	D1BA7151A014	M7.15KOHM,J.1/16 W	1	
	R2011	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R2013	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R2810	D0GB470JA065	M 47 OHM,J,1/10W	1	
	R2811	D0GB104JA065	M 100KOHM J 1/10W	1	
	R2812	D0GB224JA065	M 220KOHM,J,1/10W	1	PAVCCZ
	R2813	D0GB223JA065	M 22KOHM,J,1/10W	1	PAVCCZ
	R2814	D0GB103JA065	M 10K OHM J 1/10W	1	
	R2815	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R2816	D0GA473JA015	M 47KOHM, J,1/16W	1	
	R2816	D1BB1621A055	M1.62KOHM,J.1/10W	1	
	R2817	D0GB223JA065	M 22KOHM,J,1/10W	1	PAVCCZ
	R2818	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R2819	D1BB4301A055	M4.30KOHM,J.1/10W	1	
	R3001	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R3002	D0GA122JA023	M 1.2KOHM, J,1/16W	1	
	R3014	D0GA221JA023	M220 OHM, J.1/16 W	1	
	R3121	EXB28V221J	M220 OHM 1/32 W	1	
	R3129	D0GA104JA023	M100KOHM, J.1/16 W	1	
	R3137	D1BD75R0A066	M 75.0 OHM,J.1/8 W	1	
	R3141	D1BF75R0A011	M 75.0 OHM, 1/4W	1	PAVCCZ
	R3142	D1BF75R0A011	M 75.0 OHM, 1/4W	1	PAVCCZ
	R3143	D1BF75R0A011	M 75.0 OHM, 1/4W	1	PAVCCZ
	R3147	D1BF75R0A011	M 75.0 OHM, 1/4W	1	PAVCCZ
	R3157	EXB28V221J	M220 OHM 1/32 W	1	
	R3163	D0GA104JA023	M100KOHM, J.1/16 W	1	
	R3164	D0GA104JA023	M100KOHM, J.1/16 W	1	
	R3167	D0GA333JA023	M 33KOHM,J,1/16W	1	
	R3168	D0GA333JA023	M 33KOHM,J,1/16W	1	
	R3171	D0GA222JA023	M 2.2KOHM, J,1/16W	1	
	R3172	D0GA222JA023	M 2.2KOHM, J,1/16W	1	
	R3173	EXB28V221J	M220 OHM 1/32 W	1	
	R3174	D0GA221JA023	M220 OHM, J.1/16 W	1	
	R3175	D0GA221JA023	M220 OHM, J.1/16 W	1	
	R3179	D0GA331JA023	M 330 OHM, J,1/16W	1	
	R3180	D0GA331JA023	M 330 OHM, J,1/16W	1	
	R3181	D1BD75R0A066	M 75.0 OHM,J.1/8 W	1	
	R3182	D1BD75R0A066	M 75.0 OHM,J.1/8 W	1	
	R3183	D1BD75R0A066	M 75.0 OHM,J.1/8 W	1	
	R3184	D0GA104JA023	M100KOHM, J.1/16 W	1	
	R3185	D0GA104JA023	M100KOHM, J.1/16 W	1	
	R3186	D0GA333JA023	M 33KOHM,J,1/16W	1	
	R3187	D0GA333JA023	M 33KOHM,J,1/16W	1	
	R3190	D0GA222JA023	M 2.2KOHM, J,1/16W	1	
	R3191	D0GA222JA023	M 2.2KOHM, J,1/16W	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R3192	EXB28V820JX	M 82 OHM 1/32 W	1	
	R3194	D0GA331JA023	M 330 OHM, J,1/16W	1	
	R3195	D0GA331JA023	M 330 OHM, J,1/16W	1	
	R3202	D1BF75R0A011	M 75.0 OHM, 1/4W	1	PAVCCZ
	R3204	D1BA2152A014	M21.5KOHM,J.1/16 W	1	PAVCCZ
	R3206	D1BA1302A014	M 13KOHM,J.1/16 W	1	
	R3208	D0GA273JA023	M 27K OHM J ,1/16W	1	
	R3211	D0GA220JA023	M22 OHM, J.1/16 W	1	
	R3212	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R3213	D0GA473JA015	M 47KOHM, J,1/16W	1	
	R3221	D1BF75R0A011	M 75.0 OHM, 1/4W	1	PAVCCZ
	R3293	D0GBR00J0004	M 0 OHM J 1/10W	1	
	R4548	D0GA220JA023	M22 OHM, J.1/16 W	1	
	R4549	D0GA151JA023	M 150 OHM, J,1/16W	1	
	R4550	D0GA151JA023	M 150 OHM, J,1/16W	1	
	R4551	D0GA151JA023	M 150 OHM, J,1/16W	1	
	R4552	D0GA560JA023	M 56 OHM, J,1/16W	1	
	R4554	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R4556	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4560	D0GA473JA015	M 47KOHM, J,1/16W	1	
	R4563	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4702	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4708	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4709	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4710	EXB28V473JX	M 47KOHM 1/32 W	1	
	R4711	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R4715	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4721	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4722	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4723	EXB28V473JX	M 47KOHM 1/32 W	1	
	R4724	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R4748	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R4749	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R4750	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R4751	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R4798	D0GA273JA023	M 27K OHM J ,1/16W	1	
	R4800	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4910	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R4911	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R4913	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4914	EXB28V220J	M 22 OHM 1/32 W	1	
	R4921	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4970	D1BB1403A055	M 140KOHM,J.1/10W	1	
	R4971	D1BB1403A055	M 140KOHM,J.1/10W	1	
	R4972	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4973	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4974	D0GA101JA015	M 100 OHM, J,1/16W	1	
	R4975	D0GA473JA015	M 47KOHM, J,1/16W	1	
	R4976	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4978	D0GA101JA015	M 100 OHM, J,1/16W	1	
	R4979	D0GA101JA015	M 100 OHM, J,1/16W	1	
	R4980	D0GA473JA015	M 47KOHM, J,1/16W	1	
	R4981	D0GA473JA015	M 47KOHM, J,1/16W	1	
	R4984	D0GA473JA015	M 47KOHM, J,1/16W	1	
	R4985	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R4987	D0GF102JA048	M 1.0 KOHM,J,1/3W	1	PAVCCZ
	R5000	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R5001	D0GA473JA015	M 47KOHM, J,1/16W	1	
	R5009	D0GA103JA015	M 10KOHM,J,1/16W	1	
	R5010	D0GA222JA023	M 2.2KOHM, J,1/16W	1	
	R5011	D0GA104JA023	M100KOHM, J.1/16 W	1	
	R5012	D0GA223JA023	M 22K OHM J 1/16W	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R5013	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R5070	D0GA101JA015	M 100 OHM, J, 1/16W	1	
	R5170	D0GA222JA023	M 2.2KOHM, J, 1/16W	1	
	R5171	D0GA683JA023	M 68KOHM, J, 1/16W	1	
	R5172	D0GA473JA015	M 47KOHM, J, 1/16W	1	
	R5173	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R5175	D0GA222JA023	M 2.2KOHM, J, 1/16W	1	
	R5176	D0GA392JA023	M 3.9KOHM, J, 1/16W	1	
	R5177	D0GA222JA023	M 2.2KOHM, J, 1/16W	1	
	R5178	D0GA332JA023	M 3.3KOHM, J, 1/16W	1	
	R5179	D0GA102JA023	M 1KOHM, J, 1/16 W	1	
	R5180	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R5181	D0GB221JA065	M 220 OHM J 1/10W	1	
	R5182	D0GD104JA052	M 100KOHM, J, 1/8W	1	PAVCCZ
	R5183	D0GD102JA052	M 1.0KOHM, J, 1/8W	1	PAVCCZ
	R5184	D0GD472JA052	M 4.7KOHM, J, 1/8W	1	PAVCCZ
	R5185	D0GD472JA052	M 4.7KOHM, J, 1/8W	1	PAVCCZ
	R6927	D0GAR00J0005	M 0 OHM, 1/16W	1	
	R6928	D0GAR00J0005	M 0 OHM, 1/16W	1	
	R6953	D0GAR00J0005	M 0 OHM, 1/16W	1	
	R8001	D0GA331JA023	M 330 OHM, J, 1/16W	1	
	R8100	D1BB1301A087	M 1.3KOHM, J, 1/10W	1	PAVCCZ
	R8102	D1BB2101A087	M 2.1KOHM, J, 1/10W	1	
	R8104	D1BB8200A087	M 820 OHM, J, 1/10W	1	
	R8106	D1BB2001A087	M 2KOHM, J, 1/10W	1	
	R8108	D0GB100JA065	M 10 OHM J 1/10W	1	
	R8110	D0GB100JA065	M 10 OHM J 1/10W	1	
	R8114	D0GA243JA023	M 24K OHM J 0.063W	1	
	R8118	D0GA183JA023	M 18K OHM J, 1/16W	1	
	R8200	D1BA2400A014	M 240 OHM, J, 1/16 W	1	
	R8203	D1BA1001A014	M 1KOHM, J, 1/16 W	1	
	R8204	D1BA1001A014	M 1KOHM, J, 1/16 W	1	
	R8205	D1BA1001A014	M 1KOHM, J, 1/16 W	1	
	R8206	D1BA1001A014	M 1KOHM, J, 1/16 W	1	
	R8207	D1BA1001A014	M 1KOHM, J, 1/16 W	1	
	R8208	D1BA1001A014	M 1KOHM, J, 1/16 W	1	
	R8217	D0GA221JA023	M 220 OHM, J, 1/16 W	1	
	R8218	D0GA221JA023	M 220 OHM, J, 1/16 W	1	
	R8219	D1BA2400A014	M 240 OHM, J, 1/16 W	1	
	R8220	D1BA2400A014	M 240 OHM, J, 1/16 W	1	
	R8221	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8222	EXB28V330J	M 33 OHM 1/32 W	1	
	R8223	EXB28V330J	M 33 OHM 1/32 W	1	
	R8224	D1BA1001A014	M 1KOHM, J, 1/16 W	1	
	R8225	D1BA1001A014	M 1KOHM, J, 1/16 W	1	
	R8301	D0GA681JA023	M 680 OHM, J, 1/16W	1	
	R8302	D0GA360JA023	M 36 OHM, J, 1/16W	1	PAVCCZ
	R8303	D0GA360JA023	M 36 OHM, J, 1/16W	1	PAVCCZ
	R8304	D1BA6201A014	M 6.2KOHM, J, 1/16 W	1	
	R8305	D1BA6201A014	M 6.2KOHM, J, 1/16 W	1	
	R8306	D0GA243JA023	M 24K OHM J 0.063W	1	
	R8400	D0GA680JA023	M 68 OHM, J, 1/16W	1	
	R8401	D0GA680JA023	M 68 OHM, J, 1/16W	1	
	R8402	D0GA680JA023	M 68 OHM, J, 1/16W	1	
	R8403	D0GA680JA023	M 68 OHM, J, 1/16W	1	
	R8404	D0GA680JA023	M 68 OHM, J, 1/16W	1	
	R8405	D0GA680JA023	M 68 OHM, J, 1/16W	1	
	R8406	EXB2HV680J	M 68 OHM 1/16 W	1	
	R8407	EXB2HV680J	M 68 OHM 1/16 W	1	
	R8408	EXB2HV680J	M 68 OHM 1/16 W	1	
	R8409	EXB28V680JX	M 68 OHM 1/32 W	1	
	R8410	EXB2HV680J	M 68 OHM 1/16 W	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R8411	EXB2HV680J	M 68 OHM 1/16 W	1	
	R8418	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8421	EXB2HV101J	M 100 OHM 1/16 W	1	
	R8424	D0GA223JA023	M 22K OHM J 1/16W	1	
	R8425	D0GA223JA023	M 22K OHM J 1/16W	1	
	R8426	D0GA473JA015	M 47KOHM, J, 1/16W	1	
	R8427	D0GA473JA015	M 47KOHM, J, 1/16W	1	
	R8429	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8433	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8434	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8435	D0GA223JA023	M 22K OHM J 1/16W	1	
	R8436	EXB2HV101J	M 100 OHM 1/16 W	1	
	R8437	EXB2HV473JV	M 47 KOHM 1/16 W	1	
	R8438	EXB2HV103JV	M 10 KOHM 1/16 W	1	
	R8440	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8441	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8442	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8606	D0GA472JA023	M 4.7KOHM, J, 1/16W	1	
	R8607	D0GA472JA023	M 4.7KOHM, J, 1/16W	1	
	R8608	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R8616	D0GA472JA023	M 4.7KOHM, J, 1/16W	1	
	R8617	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8618	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8621	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8624	D0GA560JA023	M 56 OHM, J, 1/16W	1	
	R8625	D0GA560JA023	M 56 OHM, J, 1/16W	1	
	R8626	D0GA560JA023	M 56 OHM, J, 1/16W	1	
	R8627	D0GA560JA023	M 56 OHM, J, 1/16W	1	
	R8628	D0GA560JA023	M 56 OHM, J, 1/16W	1	
	R8629	D0GA560JA023	M 56 OHM, J, 1/16W	1	
	R8630	D1HG1038A002	NETWORK RESISTER	1	
	R8632	EXB28V560JX	M 56 OHM 1/32 W	1	
	R8634	EXB28V560JX	M 56 OHM 1/32 W	1	
	R8636	D0GA220JA023	M22 OHM, J.1/16 W	1	
	R8639	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8640	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8646	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8647	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8648	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8649	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8650	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8651	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8652	EXB28V103JX	M 10KOHM 1/32 W	1	
	R8704	D1BB5362A055	M53.6KOHM, J.1/10W	1	PAVCCZ
	R8705	D1BB1002A055	M 10KOHM, J.1/10W	1	
	R8706	D0GA390JA023	M 39 OHM, J, 1/16W	1	
	R8707	D1BB1002A055	M 10KOHM, J.1/10W	1	
	R8755	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R8756	D0GB390JA065	M 39 OHM, J, 1/10W	1	PAVCCZ
	R8757	D1BB4301A055	M4.30KOHM, J.1/10W	1	
	R8758	D1BB2402A055	M 24KOHM, J.1/10W	1	
	R8759	D1BB6041A055	M 6.04KOHM, J.1/10W	1	
	R8774	D0GA563JA023	M 56KOHM, J, 0.063W	1	PAVCCZ
	R8775	D0GA473JA015	M 47KOHM, J, 1/16W	1	
	R8811	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8813	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8815	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8816	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R8817	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8818	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8819	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8820	D0GA103JA015	M 10KOHM, J, 1/16W	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R8821	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8822	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8823	D0GA102JA023	M1KOHM, J, 1/16 W	1	
	R8824	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8825	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8830	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8909	D0GA222JA023	M 2.2KOHM, J, 1/16W	1	
	R8910	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8914	D0GA472JA023	M 4.7KOHM, J, 1/16W	1	
	R8915	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8916	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8917	EXB28V103JX	M 10KOHM 1/32 W	1	
	R8921	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R8972	EXB2HV680J	M 68 OHM 1/16 W	1	
	R9005	D0GB390JA065	M 39 OHM, J, 1/10W	1	PAVCCZ
	R9035	D0GA103JA015	M 10KOHM, J, 1/16W	1	
	R9105	D0GA473JA015	M 47KOHM, J, 1/16W	1	
	R9198	EXB28V101JX	M 100 OHM 1/32 W	1	
	R9203	D0GA272JA023	M 2.7KOHM, J, 1/16W	1	
	R9205	D0GA333JA023	M 33KOHM, J, 1/16W	1	
	R9206	D0GA563JA023	M 56KOHM, J, 0.063W	1	PAVCCZ
	R9208	EXB2HV470JV	M 47 OHM 1/16 W	1	
	R9209	EXB2HV470JV	M 47 OHM 1/16 W	1	
	R9224	D0GA470JA023	M 47 OHM, J, 1/16W	1	
	R9226	D0GA470JA023	M 47 OHM, J, 1/16W	1	
	R9247	D0GA470JA023	M 47 OHM, J, 1/16W	1	
	R9307	D0GA330JA023	M 33 OHM, J, 1/16W	1	
	R9308	D0GA330JA023	M 33 OHM, J, 1/16W	1	
	R9320	D0GA122JA023	M 1.2KOHM, J, 1/16W	1	
	R9321	D0GA105JA023	M 1M OHM, J, 1/16W	1	
	R9323	D0GA102JA023	M1KOHM, J, 1/16 W	1	
	R9324	D0GB162JA065	M 1.6KOHM J 1/10W	1	PAVCCZ
	R9325	D0GB162JA065	M 1.6KOHM J 1/10W	1	PAVCCZ
	R9326	D0GB162JA065	M 1.6KOHM J 1/10W	1	PAVCCZ
	R9327	D0GB162JA065	M 1.6KOHM J 1/10W	1	PAVCCZ
	R9329	D0GA102JA023	M1KOHM, J, 1/16 W	1	
	R9330	D0GA102JA023	M1KOHM, J, 1/16 W	1	
	R9400	EXB2HV103JV	M 10 KOHM 1/16 W	1	
	R9401	EXB2HV103JV	M 10 KOHM 1/16 W	1	
	R9402	EXB28V103JX	M 10KOHM 1/32 W	1	
	R9503	D0GA473JA015	M 47KOHM, J, 1/16W	1	
	R9599	D0GA473JA015	M 47KOHM, J, 1/16W	1	
	R9608	EXB2HV470JV	M 47 OHM 1/16 W	1	
	R9609	EXB28V470JX	M 47 OHM 1/32 W	1	
	R9610	EXB28V470JX	M 47 OHM 1/32 W	1	
	R9611	EXB28V470JX	M 47 OHM 1/32 W	1	
	R9872	D1BB1502A055	M 15KOHM, J, 1/10W	1	
	R9873	D1BB8061A087	M8.06 KOHM, J, 1/10W	1	PAVCCZ
	R9875	D1BB1002A087	M 10KOHM, J, 1/10W	1	
	R9907	D0GA101JA015	M 100 OHM, J, 1/16W	1	
	RM2810	B3RAD0000168	REMOTE SENSOR	1	
	SN2810	B3JB00000078	IC	1	
	SW2000	K0F122A00031	SWITCH	1	
	SW2001	K0H1BA000445	SWITCH	1	
	SW2002	K0H1BA000445	SWITCH	1	
	SW2003	K0H1BA000445	SWITCH	1	
	SW2004	K0H1BA000445	SWITCH	1	
	SW2005	K0H1BA000445	SWITCH	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	TU4801	ENGST7302D5F	TUNER	1	PAVCCZ
	X8300	H0J245500113	CRYSTAL	1	
	X9300	H0J200500076	CRYSTAL	1	
	C10	K1MY40BA0345	40P CONNECTOR	1	
	C14	K1KY03AA0719	3P CONNECTOR	1	
	C20	K1MY40BA0345	40P CONNECTOR	1	
	C21	K1MY55BA0345	55P CONNECTOR	1	
	C26	K1MY30BA0345	30P CONNECTOR	1	
	C31	K1MY55BA0345	55P CONNECTOR	1	
	C33	K1MY20BA0345	20P CONNECTOR	1	
	C35	K1KY04B00013	4P CONNECTOR	1	PAVCCZ
	C36	K1MY30BA0345	30P CONNECTOR	1	
	C16001	F1L2J562A022	C 5600PF, 630V	1	
	C16011	F2A2E141A217	E 140UF, 250V	1	
	C16012	F2A2E141A217	E 140UF, 250V	1	
	C16013	F0C2E155A286	C 1.5UF, 250V	1	PAVCCZ
	C16024	F1L2J332A022	C 3300PF, 630V	1	
	C16041	ECJ1VB1H392K	C 3900UF, 50V	1	
	C16044	F1E2J821A002	C 820PF, 630V	1	
	C16051	ECJ1VB1H392K	C 3900UF, 50V	1	
	C16061	F1E2J821A002	C 820PF, 630V	1	
	C16101	F1L2J222A022	C 2200PF, 630V	1	
	C16104	F1H1E470A130	C 47PF, 25V	1	
	C16105	F1H1E470A130	C 47PF, 25V	1	
	C16131	F1K1E475A134	C 4.7UF 25V	1	
	C16132	F1H1C105A145	C 1 uF 16 V	1	
	C16133	F2A1E101A089	E 100UF 25V	1	
	C16135	F1K1E105A029	C 1UF, 25V	1	
	C16153	F1K1E475A134	C 4.7UF 25V	1	
	C16154	F1K1E475A134	C 4.7UF 25V	1	
	C16191	F1K1E475A134	C 4.7UF 25V	1	
	C16192	F1H1C105A145	C 1 uF 16 V	1	
	C16193	F2A1E470B725	E 47UF, 25V	1	PAVCCZ
	C16195	F1K1E105A029	C 1UF, 25V	1	
	C16201	F0C2E405A278	C 4UF, 250V	1	PAVCCZ
	C16202	F0C2E405A278	C 4UF, 250V	1	PAVCCZ
	C16242	F1H1C105A145	C 1 uF 16 V	1	
	C16243	ECJ1VB1H103K	C 0.01UF, 50V	1	
	C16244	F1J1A106A087	C 10UF, 10V	1	
	C16271	F2A1E221B726	E 220UF, 25V	1	PAVCCZ
	C16280	F1K1E105A029	C 1UF, 25V	1	
	C16285	F1H1H104A970	C 0.1UF, , 50V	1	
	C16286	F1H1H104A970	C 0.1UF, , 50V	1	
	C16287	F1H1H104A970	C 0.1UF, , 50V	1	
	C16314	F2A2E141A217	E 140UF, 250V	1	
	C16315	ECJ1VB1A105K	C 1UF, 10V	1	
	C16316	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C16317	ECJ1VB1A105K	C 1UF, 10V	1	
	C16318	F1J1H104A717	C 0.1UF, 50V	1	
	C16319	F1J1H104A717	C 0.1UF, 50V	1	
	C16328	F2A2T1210001	E 120UF, 220V	1	PAVCCZ
	C16330	F0C2E105A286	C 1 UF 250 V	1	PAVCCZ
	C16401	F1L2J562A022	C 5600PF, 630V	1	
	C16411	F2A2E141A217	E 140UF, 250V	1	
	C16412	F2A2E141A217	E 140UF, 250V	1	
	C16414	F2A2E141A217	E 140UF, 250V	1	
	C16421	F1L2J562A022	C 5600PF, 630V	1	
	C16441	ECJ1VB1H392K	C 3900UF, 50V	1	
	C16451	ECJ1VB1H392K	C 3900UF, 50V	1	
	C16460	F1E2J222A002	C 2200PF, 630V	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	C16472	ECJ1VB1A105K	C 1UF, 10V	1	
	C16490	FlH1C105A145	C 1 uF 16 V	1	
	C16502	F1K1E475A134	C 4.7UF 25V	1	
	C16503	F2A1E221B726	E 220UF, 25V	1	PAVCCZ
	C16505	F1K1E105A029	C 1UF, 25V	1	
	C16506	FlH1C105A145	C 1 uF 16 V	1	
	C16507	F0C2E155A286	C 1.5UF, 250V	1	PAVCCZ
	C16531	F1K1E475A134	C 4.7UF 25V	1	
	C16534	FlH1C105A145	C 1 uF 16 V	1	
	C16551	F1K1E475A134	C 4.7UF 25V	1	
	C16561	FlJ1A106A087	C 10UF, 10V	1	
	C16562	FlH1C105A145	C 1 uF 16 V	1	
	C16564	FlH1C105A145	C 1 uF 16 V	1	
	C16565	ECJ1VB1H103K	C 0.01UF, 50V	1	
	C16566	ECJ1VB1H103K	C 0.01UF, 50V	1	
	C16567	FlH1C105A145	C 1 uF 16 V	1	
	C16584	ECJ1VB1H392K	C 3900UF, 50V	1	
	C16593	ECJ1XC1H102J	C 1000PF, J, 50V	1	
	C16602	FlH1H2200008	C 22PF, 50V	1	
	C16603	F1K2J102A014	C 1000PF, 630V	1	
	C16604	F1K2J102A014	C 1000PF, 630V	1	
	C16631	F0C2E405A278	C 4UF, 250V	1	PAVCCZ
	C16632	F0C2E405A278	C 4UF, 250V	1	PAVCCZ
	C16641	F1K2J222A014	C 2200PF ,630V	1	
	C16645	F1K2J102A014	C 1000PF, 630V	1	
	C16646	F1K2J102A014	C 1000PF, 630V	1	
	C16661	F1K2J102A038	C 1000PF, 630V	1	
	C16662	F1K2J102A038	C 1000PF, 630V	1	
	C16664	ECJ1XC1H820J	C 82PF, J, 50V	1	
	C16665	ECJ1XC1H820J	C 82PF, J, 50V	1	
	C16666	ECJ1XC1H820J	C 82PF, J, 50V	1	
	C16668	FlH1H821A831	C 820 PF, 50V	1	PAVCCZ
	C16685	FlH1H104A970	C 0.1UF, , 50V	1	
	C16692	FlH1H104A970	C 0.1UF, , 50V	1	
	C16723	F1K1E105A029	C 1UF, 25V	1	
	C16724	F1K1E475A134	C 4.7UF 25V	1	
	C16753	F1K1E475A134	C 4.7UF 25V	1	
	C16770	FlH1C105A145	C 1 uF 16 V	1	
	C16791	F2A1E221B726	E 220UF, 25V	1	PAVCCZ
	C16793	F2A1E221B726	E 220UF, 25V	1	PAVCCZ
	C16794	FlJ1A106A087	C 10UF, 10V	1	
	C16795	F2A1E221B726	E 220UF, 25V	1	PAVCCZ
	C16796	F1K1E475A134	C 4.7UF 25V	1	
	C16797	FlH1H104A970	C 0.1UF, , 50V	1	
	C16813	F2A2T1210001	E 120UF, 220V	1	PAVCCZ
	C16833	F1K2J222A014	C 2200PF ,630V	1	
	C16834	F1K2J222A014	C 2200PF ,630V	1	
	C16842	F2A2C1010028	E 100UF, 160V	1	PAVCCZ
	C16843	ECJ1VB1A105K	C 1UF, 10V	1	
	C16844	FlJ1H104A717	C 0.1UF, 50V	1	
	C16854	FlJ1H104A717	C 0.1UF, 50V	1	
	C16856	ECJ1VB1A105K	C 1UF, 10V	1	
	C16858	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C16859	FlJ1H104A717	C 0.1UF, 50V	1	
	C16860	ECJ1VB1A105K	C 1UF, 10V	1	
	C16861	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C16862	ECJ1VB1A105K	C 1UF, 10V	1	
	C16863	FlJ1H104A717	C 0.1UF, 50V	1	
	C16865	FlH1C105A145	C 1 uF 16 V	1	
	C16891	F1K1E105A029	C 1UF, 25V	1	
	C16902	F1E2J472A001	C 4700PF, 630V	1	
	C16903	F1E2J152A002	C 1500PF, 630V	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	C16910	F1E2J821A002	C 820PF, 630V	1	
	C16912	F1E2J821A002	C 820PF, 630V	1	
	C17101	ECJ1VB1A105K	C 1UF, 10V	1	
	C17102	ECJ1VB1A105K	C 1UF, 10V	1	
	C17103	ECJ1VB1A105K	C 1UF, 10V	1	
	C17109	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17110	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17112	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17114	ECJ1XC1H102J	C 1000PF, J, 50V	1	
	C17115	ECJ1XC1H102J	C 1000PF, J, 50V	1	
	C17116	ECJ1XC1H102J	C 1000PF, J, 50V	1	
	C17117	ECJ1XC1H102J	C 1000PF, J, 50V	1	
	C17201	ECJ1VB1A105K	C 1UF, 10V	1	
	C17202	ECJ1VB1A105K	C 1UF, 10V	1	
	C17203	ECJ1VB1A105K	C 1UF, 10V	1	
	C17204	ECJ1VB1A105K	C 1UF, 10V	1	
	C17205	ECJ1VB1A105K	C 1UF, 10V	1	
	C17206	ECJ1VB1A105K	C 1UF, 10V	1	
	C17207	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C17208	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C17223	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17224	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17228	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17229	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17231	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17233	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17301	ECJ1VB1A105K	C 1UF, 10V	1	
	C17302	ECJ1VB1A105K	C 1UF, 10V	1	
	C17303	ECJ1VB1A105K	C 1UF, 10V	1	
	C17304	ECJ1VB1A105K	C 1UF, 10V	1	
	C17305	ECJ1VB1A105K	C 1UF, 10V	1	
	C17306	ECJ1VB1A105K	C 1UF, 10V	1	
	C17307	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C17308	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C17328	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17330	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17332	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17333	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17336	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	C17337	F1K2A224A033	C 0.22UF, 100V	1	PAVCCZ
	CB1	K1MY55B00002	55P CONNECTOR	1	
	CB2	K1MY55B00002	55P CONNECTOR	1	
	CB3	K1MY55B00002	55P CONNECTOR	1	
	CB4	K1MY55B00002	55P CONNECTOR	1	
	CB5	K1MY55B00002	55P CONNECTOR	1	
	CB6	K1MY55B00002	55P CONNECTOR	1	
	CB7	K1MY55B00002	55P CONNECTOR	1	
	CB8	K1MY55B00002	55P CONNECTOR	1	
	CB9	K1MY55B00002	55P CONNECTOR	1	
	CB10	K1MY55B00002	55P CONNECTOR	1	
	CB11	K1MY55B00002	55P CONNECTOR	1	
	CB12	K1MY55B00002	55P CONNECTOR	1	
	CB13	K1MY55B00002	55P CONNECTOR	1	
	CB14	K1MY55B00002	55P CONNECTOR	1	
	CB15	K1MY55B00002	55P CONNECTOR	1	
	D16001	B0ECLP000010	DIODE	1	PAVCCZ
	D16002	B0ECLP000010	DIODE	1	PAVCCZ
	D16021	B0ECLP000010	DIODE	1	PAVCCZ
	D16022	DA3CF30ACL	ZENER DIODE	1	PAVCCZ
	D16041	B0FCCN000003	DIODE	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	D16051	B0FCCN000003	DIODE	1	
	D16071	B0ECLP000010	DIODE	1	PAVCCZ
	D16072	B0ECKP000055	DIODE	1	
	D16073	B0ECKP000055	DIODE	1	
	D16131	B0ECKP000055	DIODE	1	
	D16133	B0ACCCJ000048	DIODE	1	
	D16134	DZ2J051M0L	ZENER DIODE	1	
	D16191	B0ECKP000055	DIODE	1	
	D16192	B0ACCCJ000048	DIODE	1	
	D16193	DZ2J051M0L	ZENER DIODE	1	
	D16243	B0ADCJ000100	DIODE	1	
	D16251	DZ2J330M0L	ZENER DIODE	1	
	D16252	DZ2J330M0L	ZENER DIODE	1	
	D16253	DZ2J051M0L	ZENER DIODE	1	
	D16254	B3ABB0000210	LED	1	
	D16255	B0ADCJ000100	DIODE	1	
	D16282	DZ2J068M0L	ZENER DIODE	1	
	D16285	B0ADEJ000035	ZENER DIODE	1	
	D16286	B0ACCCJ000048	DIODE	1	
	D16315	DZ2J150M0L	ZENER DIODE	1	
	D16316	B0ECKP000055	DIODE	1	
	D16317	B0ECKP000055	DIODE	1	
	D16401	B0FCCN000003	DIODE	1	
	D16407	B0JCME000093	DIODE	1	
	D16411	B0ADCJ000100	DIODE	1	
	D16413	B0ACCCJ000048	DIODE	1	
	D16421	B0FCBN000001	DIODE	1	PAVCCZ
	D16430	B0ECKP000055	DIODE	1	
	D16432	B0ECKP000055	DIODE	1	
	D16433	B0ECKP000055	DIODE	1	
	D16461	B0FCCN000003	DIODE	1	
	D16473	B0ACCCJ000048	DIODE	1	
	D16474	B0ACCCJ000048	DIODE	1	
	D16475	DZ2J051M0L	ZENER DIODE	1	
	D16476	B0ACCCJ000048	DIODE	1	
	D16481	B0FCCN000003	DIODE	1	
	D16491	B0ACCCJ000048	DIODE	1	
	D16492	DZ2J047M0L	ZENER DIODE	1	
	D16493	B0ADCJ000100	DIODE	1	
	D16506	DZ2J051M0L	ZENER DIODE	1	
	D16534	DZ2J051M0L	ZENER DIODE	1	
	D16536	B0ECKP000055	DIODE	1	
	D16537	B0ADCJ000100	DIODE	1	
	D16538	B0ADCJ000100	DIODE	1	
	D16581	DZ2J330M0L	ZENER DIODE	1	
	D16582	DZ2J330M0L	ZENER DIODE	1	
	D16583	B3ABB0000210	LED	1	
	D16602	DZ2J043M0L	ZENER DIODE	1	
	D16603	B0ACCCJ000048	DIODE	1	
	D16604	B0ADCJ000100	DIODE	1	
	D16605	B0ACCCJ000048	DIODE	1	
	D16607	B0ACCCJ000048	DIODE	1	
	D16608	B0ECKP000055	DIODE	1	
	D16609	B0ECKP000055	DIODE	1	
	D16618	B0ECKP000055	DIODE	1	
	D16642	B0FCCN000004	DIODE	1	PAVCCZ
	D16643	B0FCCN000004	DIODE	1	PAVCCZ
	D16645	DZ2J150M0L	ZENER DIODE	1	
	D16646	DZ2J150M0L	ZENER DIODE	1	
	D16647	DZ2J150M0L	ZENER DIODE	1	
	D16648	DZ2J043M0L	ZENER DIODE	1	
	D16651	DZ2J051M0L	ZENER DIODE	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	D16652	B0ECKP000055	DIODE	1	
	D16662	DZ2J150M0L	ZENER DIODE	1	
	D16663	DZ2J150M0L	ZENER DIODE	1	
	D16664	DZ2J150M0L	ZENER DIODE	1	
	D16669	B0ACCCJ000048	DIODE	1	
	D16673	B0ECHR000004	DIODE	1	PAVCCZ
	D16674	B0ECHR000004	DIODE	1	PAVCCZ
	D16685	B0ACCCJ000048	DIODE	1	
	D16710	DZ2J15000L	ZENER DIODE	1	
	D16711	B0ECHR000004	DIODE	1	PAVCCZ
	D16712	B0ECHR000004	DIODE	1	PAVCCZ
	D16713	B0ECHS000002	DIODE	1	PAVCCZ
	D16714	B0ECHS000002	DIODE	1	PAVCCZ
	D16720	B0ECHR000004	DIODE	1	PAVCCZ
	D16728	B0ECKP000055	DIODE	1	
	D16791	DZ2J240M0L	ZENER DIODE	1	
	D16792	B0ACCCJ000048	DIODE	1	
	D16795	B0ACCCJ000048	DIODE	1	
	D16822	B0ACCCJ000048	DIODE	1	
	D16823	B0ADCJ000100	DIODE	1	
	D16824	B0ACCCJ000048	DIODE	1	
	D16825	DZ2J330M0L	ZENER DIODE	1	
	D16833	B0ECHR000004	DIODE	1	PAVCCZ
	D17101	B0ACCCJ000048	DIODE	1	
	D17102	B0ACCCJ000048	DIODE	1	
	D17103	B0JCCD000020	DIODE	1	PAVCCZ
	D17301	B0ACCCJ000048	DIODE	1	
	D17302	B0ACCCJ000048	DIODE	1	
	D17303	B0JCCD000020	DIODE	1	PAVCCZ
	IC16131	C0ZBZ0001822	IC	1	PAVCCZ
	IC16132	C0ZBZ0001822	IC	1	PAVCCZ
	IC16151	C0ZBZ0001822	IC	1	PAVCCZ
	IC16152	C0ZBZ0001822	IC	1	PAVCCZ
	IC16191	C0ZBZ0001822	IC	1	PAVCCZ
	IC16241	C0JBAU000088	IC	1	
	IC16243	C0JBAB000715	IC	1	
	IC16244	C0JBAA000558	IC	1	PAVCCZ
	IC16304	MIP3910MSSCF	IC	1	
	IC16312	C0DBZMC00006	IC	1	
	IC16471	C0DBEYY00114	IC	1	
	IC16490	C0DBZMC00006	IC	1	
	IC16491	C0BBAA000008	LINEAR IC	1	
	IC16501	C0ZBZ0001822	IC	1	PAVCCZ
	IC16502	C0ZBZ0001822	IC	1	PAVCCZ
	IC16521	C0ZBZ0001822	IC	1	PAVCCZ
	IC16522	C0ZBZ0001822	IC	1	PAVCCZ
	IC16561	C0JBAU000088	IC	1	
	IC16562	C0JBAU000088	IC	1	
	IC16563	C0JBAB000996	IC	1	PAVCCZ
	IC16564	C0JBAA000321	IC	1	
	IC16565	C0JBAA000321	IC	1	
	IC16684	C0ZBZ0001822	IC	1	PAVCCZ
	IC16691	C0JBAC000509	IC	1	PAVCCZ
	IC16724	C0CBADE00049	IC	1	
	IC16784	MIP3910MSSCF	IC	1	
	IC16785	C0DBZYY00352	IC	1	
	IC16786	MIP3910MSSCF	IC	1	
	IC16787	C0DBZYY00352	IC	1	
	IC16792	C0BBAA000008	LINEAR IC	1	
	IC16793	C0DBZMC00006	IC	1	
	IC16795	C0CBALC00012	IC	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	IC16921	C1ZBZ0004292	IC	1	PAVCCZ
	IC17201	C0JBAU000088	IC	1	
	IC17202	C0JBAU000088	IC	1	
	IC17301	C0JBAU000088	IC	1	
	IC17302	C0JBAU000089	IC	1	PAVCCZ
	L16001	G0CR37KA0216	PEAKING COIL	1	PAVCCZ
	L16303	G0C471MA0049	PEAKING COIL	1	
	L16411	G0CR32KA0216	PEAKING COIL	1	PAVCCZ
	PC16131	B3PBE0000058	IC	1	PAVCCZ
	PC16191	B3PBE0000060	IC	1	PAVCCZ
	PC16251	B3PBA0000580	IC	1	PAVCCZ
	PC16301	B3PBA0000580	IC	1	PAVCCZ
	PC16461	B3PBE0000058	IC	1	PAVCCZ
	PC16462	B3PBE0000060	IC	1	PAVCCZ
	PC16480	B3PBA0000580	IC	1	PAVCCZ
	PC16581	B3PBA0000580	IC	1	PAVCCZ
	PC16603	B3PBA0000580	IC	1	PAVCCZ
	PC16685	B3PBA0000496	IC	1	
	PC16723	B3PBA0000580	IC	1	PAVCCZ
	PC16896	B3PBA0000580	IC	1	PAVCCZ
	PC16897	B3PBA0000580	IC	1	PAVCCZ
	Q16001	DG3C3010CL	TRANSISTOR	1	PAVCCZ
	Q16002	DG3C3010CL	TRANSISTOR	1	PAVCCZ
	Q16021	DG3C3010CL	TRANSISTOR	1	PAVCCZ
	Q16022	DG3C3010CL	TRANSISTOR	1	PAVCCZ
	Q16041	DG3C3020CL	TRANSISTOR	1	PAVCCZ
	Q16051	DG3C3020CL	TRANSISTOR	1	PAVCCZ
	Q16055	B1HFFPA00001	TRANSISTOR	1	
	Q16056	B1HFFPA00001	TRANSISTOR	1	
	Q16101	B1CFRM000015	FET	1	
	Q16102	B1CFRM000023	FET	1	PAVCCZ
	Q16141	B1HFFPA00001	TRANSISTOR	1	
	Q16161	B1HFFPA00001	TRANSISTOR	1	
	Q16251	B1ABCF000231	TRANSISTOR	1	
	Q16280	B1ABCE000015	TRANSISTOR	1	
	Q16402	B1JBDN000004	TRANSISTOR	1	PAVCCZ
	Q16403	B1JBDN000004	TRANSISTOR	1	PAVCCZ
	Q16422	B1JBDN000004	TRANSISTOR	1	PAVCCZ
	Q16423	B1JBDN000004	TRANSISTOR	1	PAVCCZ
	Q16441	DG3C3020CL	TRANSISTOR	1	PAVCCZ
	Q16451	DG3C3020CL	TRANSISTOR	1	PAVCCZ
	Q16471	B1ABCE000015	TRANSISTOR	1	
	Q16501	B1HFFPA00001	TRANSISTOR	1	
	Q16521	B1HFFPA00001	TRANSISTOR	1	
	Q16531	B1HFFPA00001	TRANSISTOR	1	
	Q16538	B1CBGD000001	FET	1	
	Q16551	B1HFFPA00001	TRANSISTOR	1	
	Q16581	B1ABCF000231	TRANSISTOR	1	
	Q16600	B1CFRM000020	FET	1	PAVCCZ
	Q16601	B1CFRQ000021	FET	1	PAVCCZ
	Q16602	DSA2001S0L	TRANSISTOR	1	
	Q16606	DSC2001S0L	TRANSISTOR	1	
	Q16607	B1CBGD000001	FET	1	
	Q16622	B1JBDN000004	TRANSISTOR	1	PAVCCZ
	Q16623	B1JBDN000004	TRANSISTOR	1	PAVCCZ
	Q16646	DSA2001S0L	TRANSISTOR	1	
	Q16647	B1CBGD000001	FET	1	
	Q16660	B1CFRQ000021	FET	1	PAVCCZ
	Q16661	B1JBER000002	TRANSISTOR	1	PAVCCZ

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	Q16762	B1HFFPA00001	TRANSISTOR	1	
	Q16815	B1ABCN000007	TRANSISTOR	1	
	Q16817	DSC2001Q0L	TRANSISTOR	1	
	Q16818	B1CBGD000001	FET	1	
	Q16819	B1CBGD000001	FET	1	
	Q16820	B1CBGD000001	FET	1	
	Q16891	DSA2001S0L	TRANSISTOR	1	
	Q16892	DSC2001Q0L	TRANSISTOR	1	
	Q16921	B1CBGD000001	FET	1	
	Q16922	B1CBGD000001	FET	1	
	Q16931	B1ABCN000007	TRANSISTOR	1	
	Q17101	B1ABCN000007	TRANSISTOR	1	
	Q17301	B1ABCN000007	TRANSISTOR	1	
	R16001	D0GF7R5JA047	M 7.5 OHM, J, 1/3W	1	
	R16002	D0GF7R5JA047	M 7.5 OHM, J, 1/3W	1	
	R16021	D0GF7R5JA047	M 7.5 OHM, J, 1/3W	1	
	R16022	D0GF7R5JA047	M 7.5 OHM, J, 1/3W	1	
	R16031	D0GF473JA048	M 47KOHM, J, 1/3W	1	PAVCCZ
	R16032	D0GF473JA048	M 47KOHM, J, 1/3W	1	PAVCCZ
	R16041	D0GF5R6JA047	M 5.6 OHM, J, 1/3W	1	
	R16051	D0GF5R6JA047	M 5.6 OHM, J, 1/3W	1	
	R16101	D0GD150JA059	M 15 OHM, J, 1/4W	1	
	R16102	D0GD150JA059	M 15 OHM, J, 1/4W	1	
	R16105	D0GF474JA048	M 47KOHM, J, 1/3W	1	PAVCCZ
	R16116	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16130	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16131	D0GB220JA065	M 22 OHM J 1/10W	1	PAVCCZ
	R16132	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R16133	D1BD2700A044	M 270 OHM, J, 1/8 W	1	
	R16134	D0GD750JA059	M 75 OHM, J, 1/4W	1	
	R16135	D0GB4R7JA065	M 4.7 OHM J 1/10W	1	PAVCCZ
	R16137	D0GZ1R0JA020	M 1 OHM, J, 1/2W	1	
	R16138	D0GF561JA047	M 560 OHM, J, 1/3W	1	PAVCCZ
	R16141	D0GD100JA059	M 10 OHM, J, 1/4W	1	
	R16143	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16151	D0GB220JA065	M 22 OHM J 1/10W	1	PAVCCZ
	R16152	D0GB220JA065	M 22 OHM J 1/10W	1	PAVCCZ
	R16153	D0GB331JA065	M330 OHM J 1/10W	1	PAVCCZ
	R16154	D0GD750JA059	M 75 OHM, J, 1/4W	1	
	R16155	D0GB4R7JA065	M 4.7 OHM J 1/10W	1	PAVCCZ
	R16161	D0GD100JA059	M 10 OHM, J, 1/4W	1	
	R16163	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16171	D0GD100JA059	M 10 OHM, J, 1/4W	1	
	R16173	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16181	D0GD100JA059	M 10 OHM, J, 1/4W	1	
	R16183	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16191	D1BD2700A044	M 270 OHM, J, 1/8 W	1	
	R16192	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16193	D0GD750JA052	M 75 OHM, J, 1/8W	1	PAVCCZ
	R16195	D0GF1R0JA047	M 1 OHM, J, 1/3W	1	
	R16196	D0GF102JA048	M 1.0 KOHM, J, 1/3W	1	PAVCCZ
	R16197	D0GB220JA065	M 22 OHM J 1/10W	1	PAVCCZ
	R16230	D0GD470JA052	M 47 OHM, J, 1/8W	1	PAVCCZ
	R16231	D0GB472JA065	M 4.7KOHM, J, 1/10W	1	
	R16241	EXB38V470J	M 47 OHM 1/16 W	1	
	R16242	EXB38V472JV	M 4.7 KOHM 1/16 W	1	
	R16243	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16244	D0GB273JA065	M 27K OHM J 1/10W	1	PAVCCZ
	R16245	D0GB472JA065	M 4.7KOHM, J, 1/10W	1	
	R16246	D0GD222JA052	M 2.2KOHM, J, 1/8W	1	PAVCCZ
	R16252	D0GF563JA048	M 56 KOHM, J, 1/3W	1	PAVCCZ

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R16253	D1BD1003A044	M 100KOHM,J.1/8 W	1	
	R16254	D1BD4422A044	M44.2KOHM,F.1/8W	1	PAVCCZ
	R16255	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16257	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16281	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16282	D0GD221JA052	M 220 OHM,J 1/4W	1	PAVCCZ
	R16283	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16284	D0GB224JA065	M 220KOHM,J,1/10W	1	PAVCCZ
	R16285	EXB38V623J	M 62 kOHM 1/16 W	1	
	R16288	D0GF334JA047	M 330KOHMJ,1/3W	1	
	R16289	D0GF334JA047	M 330KOHMJ,1/3W	1	
	R16290	D0GF334JA047	M 330KOHMJ,1/3W	1	
	R16307	D1BD5232A077	M52.3KOHM,D.1/10W	1	PAVCCZ
	R16309	ERG2FJS563D	M 56KOHM, J, 2W	1	
	R16310	ERG2FJS563D	M 56KOHM, J, 2W	1	
	R16311	ERG2FJS563D	M 56KOHM, J, 2W	1	
	R16317	D1BD5762A077	M57.6KOHM,D.1/10W	1	PAVCCZ
	R16318	D1BD5762A077	M57.6KOHM,D.1/10W	1	PAVCCZ
	R16319	D1BD2491A077	M 2.49KOHM,D.1/10W	1	PAVCCZ
	R16320	ERJ14YJ683	M 68KOHM, J. 1/4W	1	
	R16330	D0GB102JA065	M 1KOHM,J,1/10W	1	
	R16332	D0GB474JA065	M 470KOHM,J,1/10W	1	
	R16334	D0GB472JA065	M 4.7KOHM, J,1/10W	1	
	R16335	D0GB102JA065	M 1KOHM,J,1/10W	1	
	R16402	D0GF7R5JA047	M 7.5 OHM,J, 1/3W	1	
	R16403	D0GF7R5JA047	M 7.5 OHM,J, 1/3W	1	
	R16411	D1BD2700A044	M 270 OHM,J.1/8 W	1	
	R16412	D1BD2700A044	M 270 OHM,J.1/8 W	1	
	R16414	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16416	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16422	D0GF7R5JA047	M 7.5 OHM,J, 1/3W	1	
	R16423	D0GF7R5JA047	M 7.5 OHM,J, 1/3W	1	
	R16441	D0GF5R6JA047	M 5.6 OHM,J, 1/3W	1	
	R16451	D0GF5R6JA047	M 5.6 OHM,J, 1/3W	1	
	R16466	D0GF473JA048	M 47KOHM,J,1/3W	1	PAVCCZ
	R16467	D0GF473JA048	M 47KOHM,J,1/3W	1	PAVCCZ
	R16471	D0GB392JA065	M 3.9KOHM,J,1/10W	1	PAVCCZ
	R16472	D0GB222JA065	M 2.2KOHM,J,1/10W	1	
	R16473	D0GD561JA052	M 560 OHM,J,1/4W	1	PAVCCZ
	R16474	D0GB102JA065	M 1KOHM,J,1/10W	1	
	R16475	D0GB472JA065	M 4.7KOHM, J,1/10W	1	
	R16476	D0GB222JA065	M 2.2KOHM,J,1/10W	1	
	R16478	D0GB562JA065	M 5.6KOHM,J,1/10W	1	PAVCCZ
	R16479	D0GD103JA052	M 10KOHM,J,1/8W	1	PAVCCZ
	R16490	D1BD1203A077	M 120KOHM,D.1/10W	1	PAVCCZ
	R16491	D1BD1203A077	M 120KOHM,D.1/10W	1	PAVCCZ
	R16492	D1BD1203A077	M 120KOHM,D.1/10W	1	PAVCCZ
	R16493	D1BD5111A077	M5.11KOHM,J.1/8 W	1	PAVCCZ
	R16494	D1BB2001A055	M 2KOHM,J.1/10W	1	
	R16497	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16498	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16501	D0GB220JA065	M 22 OHM J 1/10W	1	PAVCCZ
	R16503	D0GD100JA059	M 10 OHM,J,1/4W	1	
	R16505	D0GF102JA048	M 1.0 KOHM,J,1/3W	1	PAVCCZ
	R16506	D0GD100JA059	M 10 OHM,J,1/4W	1	
	R16507	D0GB220JA065	M 22 OHM J 1/10W	1	PAVCCZ
	R16508	D0GB220JA065	M 22 OHM J 1/10W	1	PAVCCZ
	R16512	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16515	D0D52R2KA005	M 2.2 OHM,J,5W	1	PAVCCZ
	R16517	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16522	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R16525	D0GB4R7JA065	M 4.7 OHM J 1/10W	1	PAVCCZ

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R16526	D0GB4R7JA065	M 4.7 OHM J 1/10W	1	PAVCCZ
	R16531	D0GD100JA059	M 10 OHM,J,1/4W	1	
	R16532	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16534	D0GF561JA047	M 560 OHM,J, 1/3W	1	PAVCCZ
	R16536	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R16537	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R16551	D0GD100JA059	M 10 OHM,J,1/4W	1	
	R16552	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16561	EXB38V470J	M 47 OHM 1/16 W	1	
	R16562	EXB38V470J	M 47 OHM 1/16 W	1	
	R16563	EXB38V470J	M 47 OHM 1/16 W	1	
	R16564	EXB38V470J	M 47 OHM 1/16 W	1	
	R16565	EXB38V472JV	M 4.7 kOHM 1/16 W	1	
	R16566	EXB38V472JV	M 4.7 kOHM 1/16 W	1	
	R16567	EXB38V472JV	M 4.7 kOHM 1/16 W	1	
	R16568	EXB38V472JV	M 4.7 kOHM 1/16 W	1	
	R16570	EXB38V472JV	M 4.7 kOHM 1/16 W	1	
	R16573	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16574	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16575	D0GB751JA065	M750 OHM J 1/10W	1	PAVCCZ
	R16576	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R16579	EXB38V470J	M 47 OHM 1/16 W	1	
	R16581	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16582	D0GF563JA048	M 56 KOHM,J,1/3W	1	PAVCCZ
	R16583	D1BD1003A044	M 100KOHM,J.1/8 W	1	
	R16584	D1BD4422A044	M44.2KOHM,F.1/8W	1	PAVCCZ
	R16585	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16587	D0GB222JA065	M 2.2KOHM,J,1/10W	1	
	R16588	D0GB223JA065	M 22KOHM,J,1/10W	1	PAVCCZ
	R16590	D0GB221JA065	M 220 OHM J 1/10W	1	
	R16591	EXB38V472JV	M 4.7 KOHM 1/16 W	1	
	R16594	D0GB472JA065	M 4.7KOHM, J,1/10W	1	
	R16601	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R16604	D0GD331JA052	M 330 OHM,J,1/4W	1	PAVCCZ
	R16605	D0GD220JA059	M 22 OHM,J,1/4W	1	PAVCCZ
	R16606	D0GD223JA052	M 22KOHM,J,1/4W	1	PAVCCZ
	R16607	D1BB5111A055	M5.11KOHM,J.1/10W	1	
	R16608	ERG2FJS153D	M 15KOHM, J, 2W	1	
	R16609	D0GF102JA047	M 1.0 KOHM,J,1/3W	1	
	R16610	D0GB104JA065	M 100KOHM J 1/10W	1	
	R16612	D0GD220JA059	M 22 OHM,J,1/4W	1	PAVCCZ
	R16615	D1BB1871A055	M1.87KOHM, 1/10W	1	PAVCCZ
	R16617	D0GD222JA052	M 2.2KOHM,J,1/8W	1	PAVCCZ
	R16622	D0GD221JA052	M 220 OHM,J 1/4W	1	PAVCCZ
	R16623	D0GD221JA052	M 220 OHM,J 1/4W	1	PAVCCZ
	R16631	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16633	D0GD223JA052	M 22KOHM,J,1/4W	1	PAVCCZ
	R16634	D0GD222JA052	M 2.2KOHM,J,1/8W	1	PAVCCZ
	R16645	D0GB562JA065	M 5.6KOHM,J,1/10W	1	PAVCCZ
	R16646	D1BD8660A044	M 866 OHM,F.1/8W	1	PAVCCZ
	R16648	D0GF102JA047	M 1.0 KOHM,J,1/3W	1	
	R16649	D0GD330JA059	M 33 OHM,F,1/4W	1	
	R16650	D0GB104JA065	M 100KOHM J 1/10W	1	
	R16653	D0GD222JA052	M 2.2KOHM,J,1/8W	1	PAVCCZ
	R16654	D0GD470JA052	M 47 OHM,J,1/8W	1	PAVCCZ
	R16658	D1BD6491A077	M6.49KOHM,D.1/10W	1	PAVCCZ
	R16661	D0GD100JA059	M 10 OHM,J,1/4W	1	
	R16662	D1BB1002A087	M 10KOHM,J.1/10W	1	
	R16663	D1BD9091A077	M 9.09KOHM,D.1/10W	1	PAVCCZ
	R16664	D0GF102JA047	M 1.0 KOHM,J,1/3W	1	
	R16665	D0GD222JA052	M 2.2KOHM,J,1/8W	1	PAVCCZ
	R16666	D1BB1003A087	M100KOHM, D 1/10W	1	PAVCCZ

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R16668	D0GF102JA047	M 1.0 KOHM, J, 1/3W	1	
	R16675	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16676	D1BD2700A044	M 270 OHM, J, 1/8 W	1	
	R16678	D0GF102JA047	M 1.0 KOHM, J, 1/3W	1	
	R16682	D0GD100JA059	M 10 OHM, J, 1/4W	1	
	R16683	D0GD100JA059	M 10 OHM, J, 1/4W	1	
	R16684	D0GB220JA065	M 22 OHM J 1/10W	1	PAVCCZ
	R16685	D1BD1500A044	M 150 OHM, J, 1/8 W	1	
	R16686	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16719	D0GB220JA065	M 22 OHM J 1/10W	1	PAVCCZ
	R16721	EXB38V220JV	M 22 OHM 1/16 W	1	
	R16761	D0GD100JA059	M 10 OHM, J, 1/4W	1	
	R16763	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16772	D0GB472JA065	M 4.7KOHM, J, 1/10W	1	
	R16773	D0GD102JA052	M 1.0KOHM, J, 1/8W	1	PAVCCZ
	R16776	D0GD470JA052	M 47 OHM, J, 1/8W	1	PAVCCZ
	R16786	D1BD5902A044	M 59KOHM, F, 1/8W	1	PAVCCZ
	R16791	D0GB102JA065	M 1KOHM, J, 1/10W	1	
	R16797	D0GD220JA052	M 22 OHM, J, 1/4W	1	PAVCCZ
	R16798	D0GB222JA065	M 2.2KOHM, J, 1/10W	1	
	R16799	D0GB102JA065	M 1KOHM, J, 1/10W	1	
	R16815	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16818	D1BB3302A055	M 33KOHM, J, 1/10W	1	
	R16819	D1BD1503A044	M 150KOHM, F, 1/8W	1	PAVCCZ
	R16820	D1BD1503A044	M 150KOHM, F, 1/8W	1	PAVCCZ
	R16822	D1BD8202A044	M 82KOHM, J, 1/8 W	1	
	R16823	D1BD6192A044	M61.9KOHM, J, 1/8 W	1	
	R16824	D1BD3742A044	M37.4KOHM, F, 1/8W	1	
	R16825	D0GD154JA059	M 150KOHM, J, 1/4W	1	
	R16826	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16829	D0GB102JA065	M 1KOHM, J, 1/10W	1	
	R16831	D1BD6812A077	M68.1KOHM, D, 1/10W	1	PAVCCZ
	R16832	D1BD7152A077	M71.5K0OHM, D, 1/10W	1	PAVCCZ
	R16833	ERG1SJ683	M 68KOHM, J, 1W	1	
	R16834	ERG1SJ683	M 68KOHM, J, 1W	1	
	R16838	ERG2FJS104D	M 100KOHM, J, 2W	1	
	R16841	D0GB472JA065	M 4.7KOHM, J, 1/10W	1	
	R16842	D0GD102JA052	M 1.0KOHM, J, 1/8W	1	PAVCCZ
	R16844	ERA6YEB242	M 2.4KOHM, B 1/10W	1	
	R16845	D1BD6812A077	M68.1KOHM, D, 1/10W	1	PAVCCZ
	R16846	D1BD5762A077	M57.6KOHM, D, 1/10W	1	PAVCCZ
	R16847	D1BD6492A077	M64.9KOHM, D, 1/10W	1	PAVCCZ
	R16851	D0GB474JA065	M 470KOHM, J, 1/10W	1	
	R16852	D0GB474JA065	M 470KOHM, J, 1/10W	1	
	R16856	D0GB102JA065	M 1KOHM, J, 1/10W	1	
	R16873	ERA6YEB242	M 2.4KOHM, B 1/10W	1	
	R16891	D1BF6982A058	M 69.8KOHM, 1/4W	1	
	R16892	D1BF8252A058	M82.50KOHM, 1/4W	1	
	R16893	D1BF8252A058	M82.50KOHM, 1/4W	1	
	R16894	D1BB3091A087	M3.09KOHM, D 1/16W	1	PAVCCZ
	R16895	D1BB9091A087	M9.09 KOHM, J, 1/10W	1	PAVCCZ
	R16897	D1BB2262A055	M22.6KOHM F 1/10W	1	PAVCCZ
	R16898	D1BB1051A055	M1.05KOHM, J, 1/10W	1	
	R16899	D1BB1372A055	M13.7KOHM, 1/10W	1	PAVCCZ
	R16900	D1BB3831A055	M3.83KOHM, D 1/16W	1	PAVCCZ
	R16902	D0GB6R2JA065	M 6.2 OHM J 1/10W	1	PAVCCZ
	R16919	D1BB1582A055	M15.8KOHM, 1/10W	1	PAVCCZ
	R16920	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R16921	D1BB2152A055	M 21.5KOHM, 1/10W	1	PAVCCZ
	R16922	D1BB9531A055	M9.53KOHM, J, 1/10W	1	
	R16923	D1BB5111A055	M5.11KOHM, J, 1/10W	1	
	R16924	D1BB1152A055	M 11.5KOHM 1/10W	1	PAVCCZ


Model No. : TX-P50U30E/J, PR50U30/31 Parts List


Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R16931	D1BF2R70A021	M 2.7 OHM, 1/4W	1	
	R16932	D0GD223JA052	M 22KOHM, J, 1/4W	1	PAVCCZ
	R16937	D0GB184JA065	M 180KOHM J 1/10W	1	PAVCCZ
	R16939	D0GD102JA052	M 1.0KOHM, J, 1/8W	1	PAVCCZ
	R16940	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16941	D0GB472JA065	M 4.7KOHM, J, 1/10W	1	
	R16942	D0GB473JA065	M 47KOHM J. 1/10W	1	PAVCCZ
	R16945	D0GB471JA065	M 470 OHM, J, 1/10W	1	PAVCCZ
	R17101	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17102	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17103	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17104	D1BB49R90002	M 49 OHM, J, 1/10W	1	
	R17105	D1BB49R90002	M 49 OHM, J, 1/10W	1	
	R17106	D1BB49R90002	M 49 OHM, J, 1/10W	1	
	R17107	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17108	D1BB49R90002	M 49 OHM, J, 1/10W	1	
	R17110	D0GF223JA047	M 22KOHM, J, 1/3W	1	PAVCCZ
	R17111	D0GB331JA065	M330 OHM J 1/10W	1	PAVCCZ
	R17112	D0GB102JA065	M 1KOHM, J, 1/10W	1	
	R17131	D0GZ1R0JA020	M 1 OHM, J, 1/2W	1	
	R17133	D0GZ1R0JA020	M 1 OHM, J, 1/2W	1	
	R17135	D0GZ1R0JA020	M 1 OHM, J, 1/2W	1	
	R17145	D0GBR00J0004	M 0 OHM J 1/10W	1	
	R17146	D0GBR00J0004	M 0 OHM J 1/10W	1	
	R17161	D0GBR00J0004	M 0 OHM J 1/10W	1	
	R17162	D0GBR00J0004	M 0 OHM J 1/10W	1	
	R17164	D0GB470JA065	M 47 OHM, J, 1/10W	1	
	R17165	D1BB49R90002	M 49 OHM, J, 1/10W	1	
	R17166	D1BB49R90002	M 49 OHM, J, 1/10W	1	
	R17167	D1BB49R90002	M 49 OHM, J, 1/10W	1	
	R17168	D1BB49R90002	M 49 OHM, J, 1/10W	1	
	R17196	D0GB102JA065	M 1KOHM, J, 1/10W	1	
	R17198	D0GD224JA052	M 220KOHM, J, 1/8W	1	PAVCCZ
	R17199	D0GF102JA047	M 1.0 KOHM, J, 1/3W	1	
	R17201	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17202	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17203	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17204	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17205	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17206	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17207	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17208	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17209	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17210	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17211	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17212	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17231	D0GZ1R0JA020	M 1 OHM, J, 1/2W	1	
	R17233	D0GZ1R0JA020	M 1 OHM, J, 1/2W	1	
	R17235	D0GZ1R0JA020	M 1 OHM, J, 1/2W	1	
	R17237	D0GZ1R0JA020	M 1 OHM, J, 1/2W	1	
	R17239	D0GZ1R0JA020	M 1 OHM, J, 1/2W	1	
	R17241	D0GZ1R0JA020	M 1 OHM, J, 1/2W	1	
	R17262	D0GB470JA065	M 47 OHM, J, 1/10W	1	
	R17263	D0GB681JA065	M 680 OHM, J, 1/10W	1	PAVCCZ
	R17264	D0GB681JA065	M 680 OHM, J, 1/10W	1	PAVCCZ
	R17268	D0GD224JA052	M 220KOHM, J, 1/8W	1	PAVCCZ
	R17270	EXB38V470J	M 47 OHM 1/16 W	1	
	R17271	EXB38V470J	M 47 OHM 1/16 W	1	
	R17272	EXB38V681J	M 680 OHM 1/16 W	1	
	R17301	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17302	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17303	D0GB101JA065	M 100 OHM, J, 1/10W	1	

Model No. : TX-P50U30E/J, PR50U30/31 Parts List


Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R17304	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17305	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17306	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17307	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17308	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17309	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17310	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17311	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17312	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17313	D0GB331JA065	M330 OHM J 1/10W	1	PAVCCZ
	R17314	D0GB102JA065	M 1KOHM,J,1/10W	1	
	R17315	D0GF223JA047	M 22KOHM,J, 1/3W	1	PAVCCZ
	R17331	D0GZ1R0JA020	M 1 OHM, J,1/2W	1	
	R17333	D0GZ1R0JA020	M 1 OHM, J,1/2W	1	
	R17335	D0GZ1R0JA020	M 1 OHM, J,1/2W	1	
	R17337	D0GZ1R0JA020	M 1 OHM, J,1/2W	1	
	R17339	D0GZ1R0JA020	M 1 OHM, J,1/2W	1	
	R17341	D0GZ1R0JA020	M 1 OHM, J,1/2W	1	
	R17361	D0GB681JA065	M 680 OHM,J,1/10W	1	PAVCCZ
	R17362	D0GB681JA065	M 680 OHM,J,1/10W	1	PAVCCZ
	R17366	EXB38V470J	M 47 OHM 1/16 W	1	
	R17367	EXB38V470J	M 47 OHM 1/16 W	1	
	R17368	EXB38V470J	M 47 OHM 1/16 W	1	
	R17369	EXB38V470J	M 47 OHM 1/16 W	1	
	R17370	EXB38V681J	M 680 OHM 1/16 W	1	
	R17371	EXB38V681J	M 680 OHM 1/16 W	1	
	R17372	EXB38V681J	M 680 OHM 1/16 W	1	
	R17398	D0GD224JA052	M 220KOHM,J,1/8W	1	PAVCCZ
	R17399	D0GF102JA047	M 1.0 KOHM,J,1/3W	1	
	SC2	K1KY02B00012	2P CONNECTOR	1	
	SC20	K1MY35BA0345	35P CONNECTOR	1	
	SC41	K1KA09AA0707	9P CONNECTOR	1	
	SC42	K1KA09AA0707	9P CONNECTOR	1	
	SC46	K1KA09AA0707	9P CONNECTOR	1	
	SC50	K1KA02AA0193	2P CONNECTOR	1	
	SS11	K1KY03B00006	3P CONNECTOR	1	
	SS33	K1MY20BA0345	20P CONNECTOR	1	
	SS53	K1MN13B00091	13P CONNECTOR	1	
	SS54	K1MN13B00091	13P CONNECTOR	1	
	SS56	K1MN13B00091	13P CONNECTOR	1	
	T16471	G4DYA0000253	SWITCHING TRANS	1	PAVCCZ
	T16472	G4DYA0000252	SWITCHING TRANS	1	PAVCCZ
	ZA16001	K4AZ01D00004	TERMINAL	1	
	ZA16002	K4AZ01D00004	TERMINAL	1	
	ZA16402	K4AZ01D00004	TERMINAL	1	
	ZA16403	K4AZ01D00004	TERMINAL	1	
	ZA17101	K4CD01000013	AV TERMINAL	1	
	ZA17102	K4CD01000013	AV TERMINAL	1	
	ZA17103	K4CD01000013	AV TERMINAL	1	
	ZA17201	K4CD01000013	AV TERMINAL	1	
	ZA17202	K4CD01000013	AV TERMINAL	1	
	ZA17203	K4CD01000013	AV TERMINAL	1	
	ZA17204	K4CD01000013	AV TERMINAL	1	
	ZA17301	K4CD01000013	AV TERMINAL	1	
	ZA17302	K4CD01000013	AV TERMINAL	1	
	ZA17303	K4CD01000013	AV TERMINAL	1	
	ZA17304	K4CD01000013	AV TERMINAL	1	

Model No. : TX-P50U30E/J, PR50U30/31 Exploded View 1

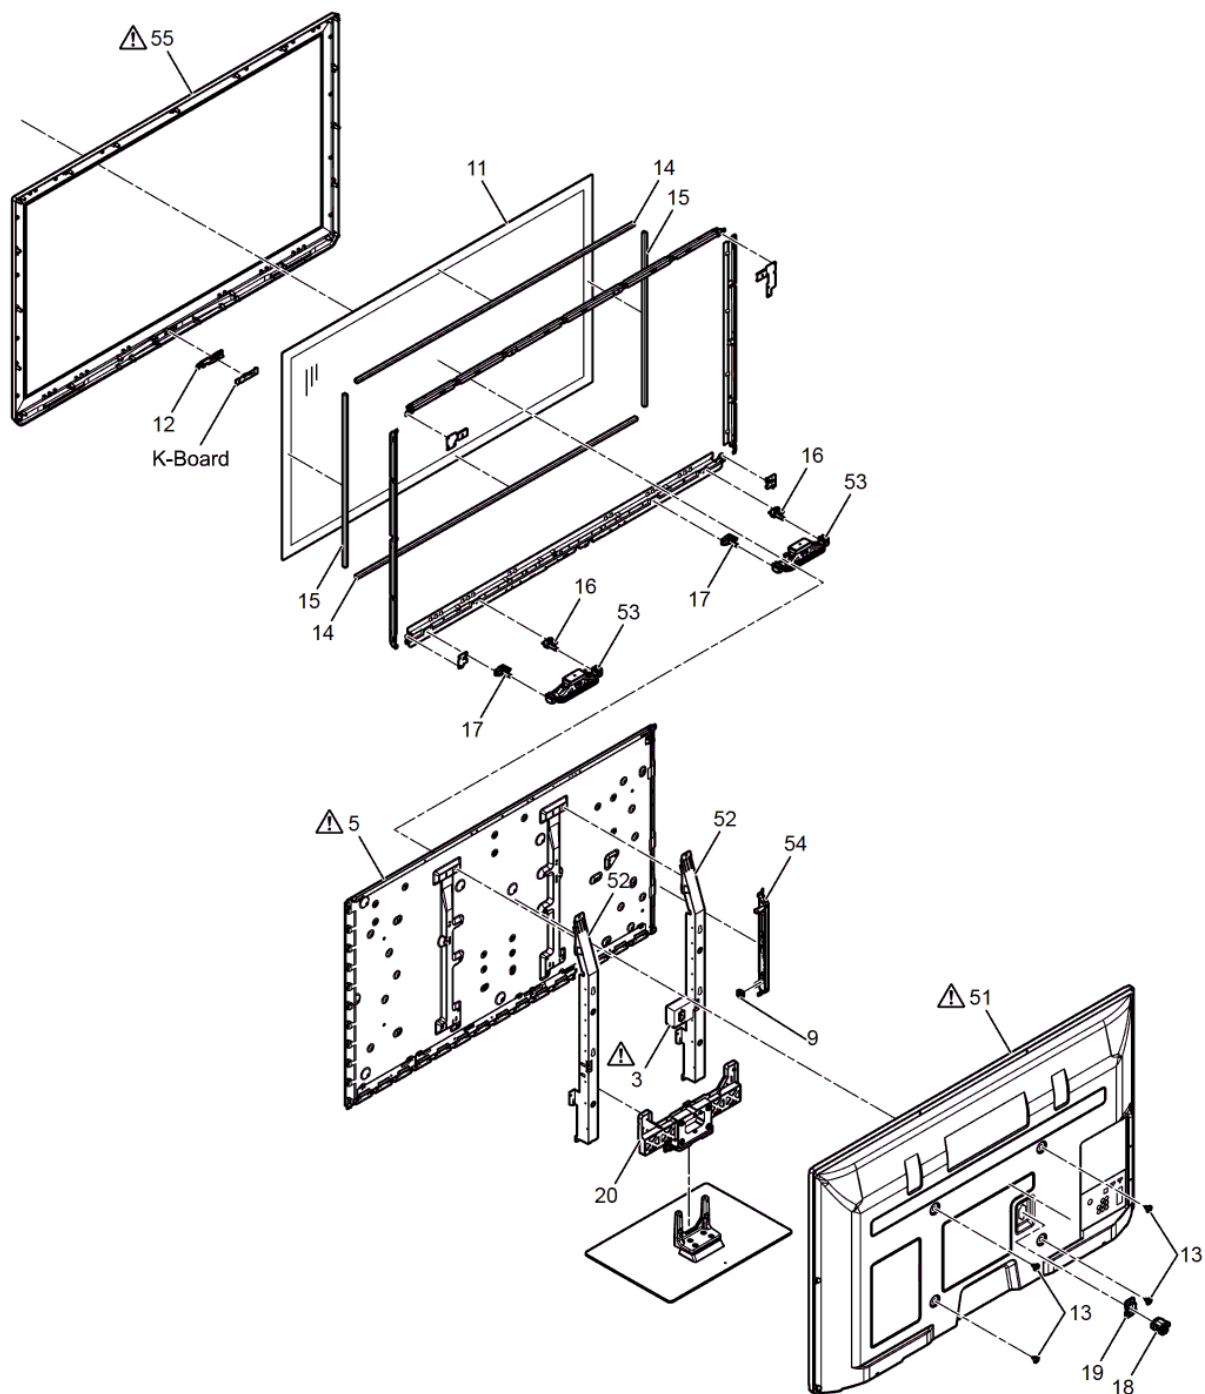




61 Assembly screw (4)	10 Assembly screw (4)	7 pole (1)	⚠ 8 Base (1)
			
M5 x 20	M5 x 25		

Model No. : TX-P50U30E/J, PR50U30/31 Exploded View 2

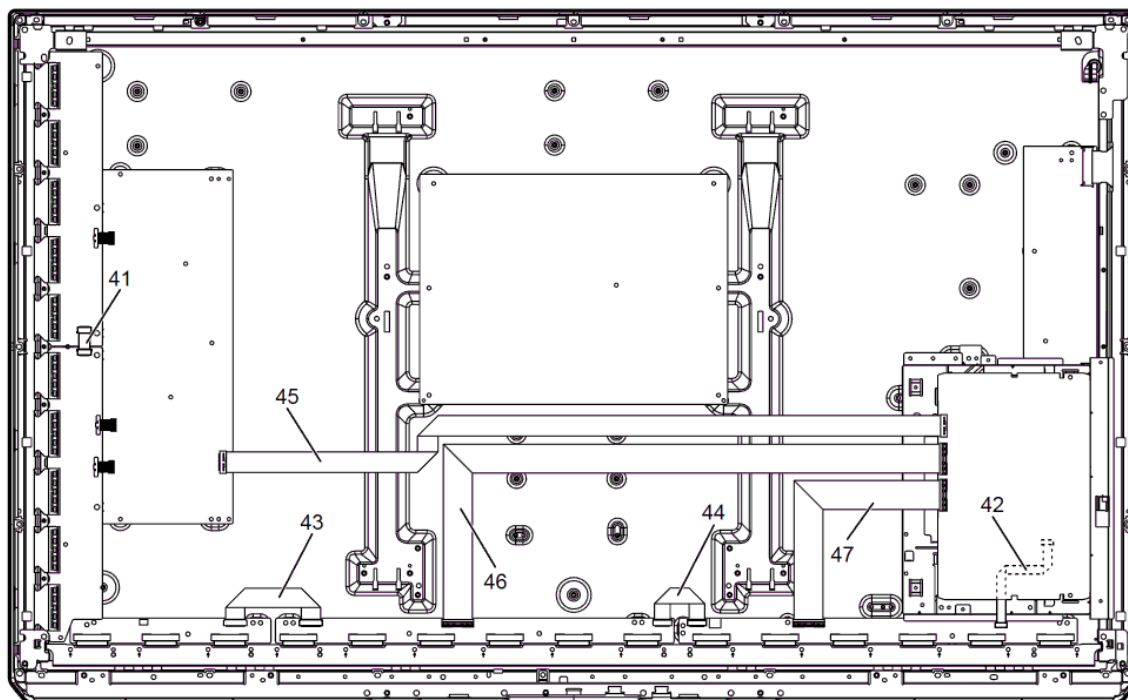

Model No. : TX-P50U30E/J, PR50U30/31 Packing 1

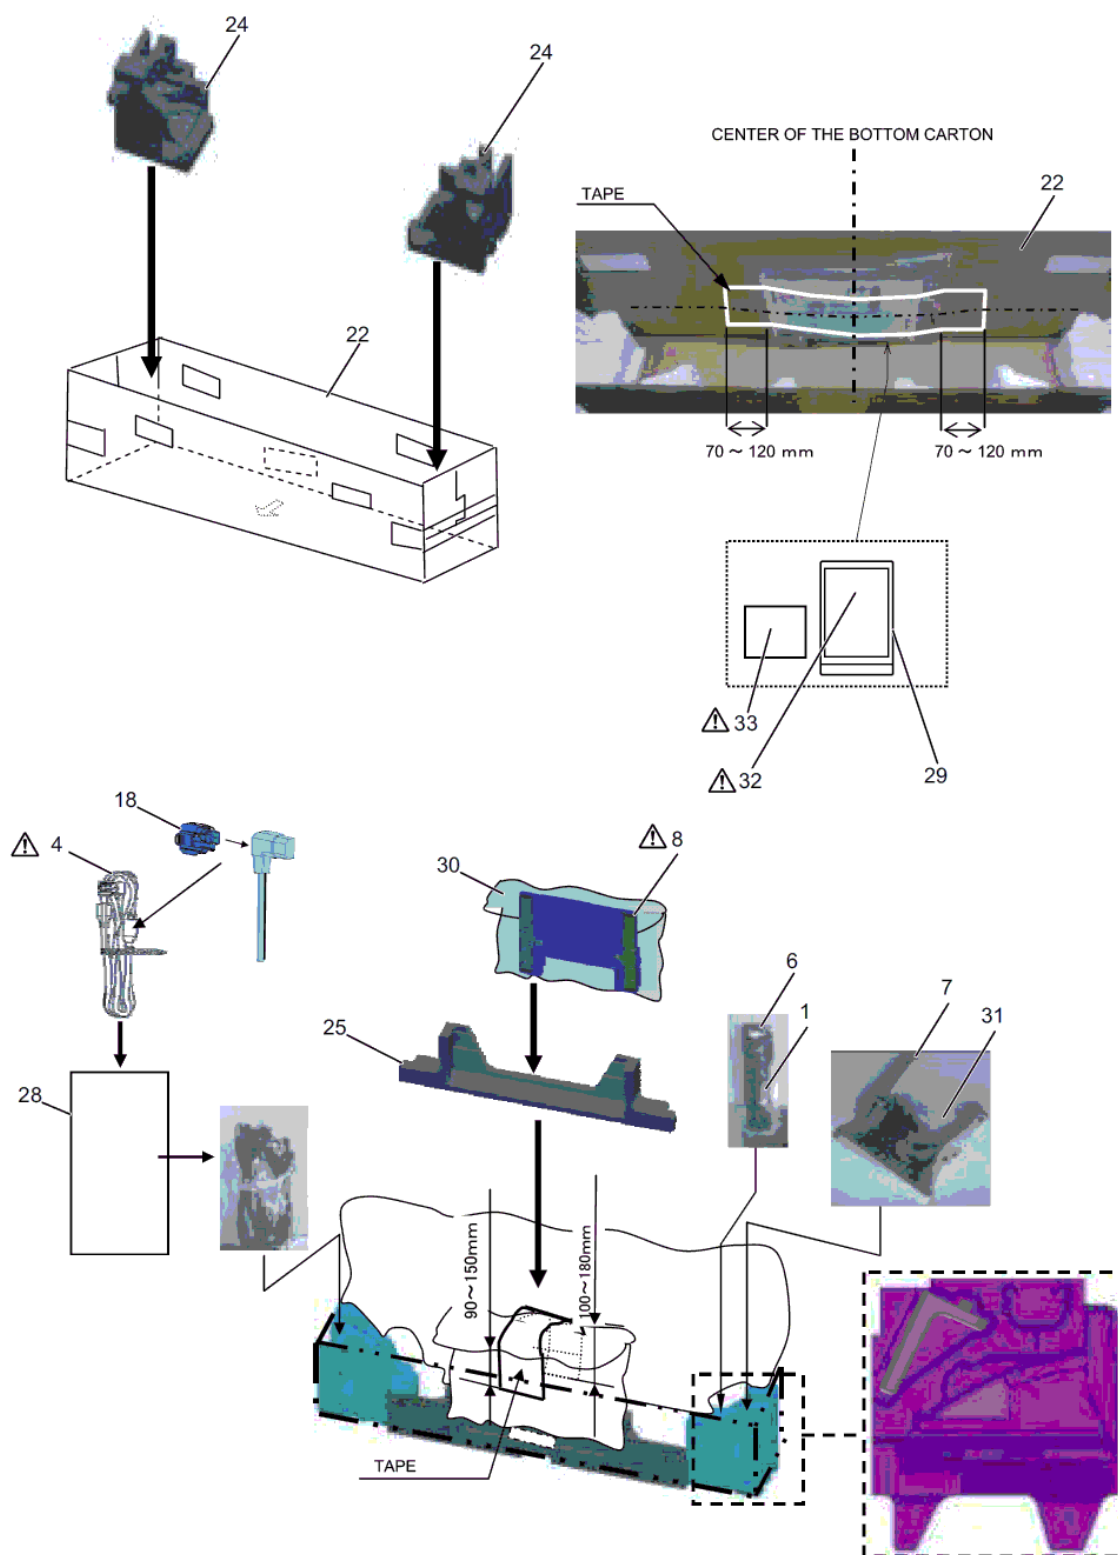

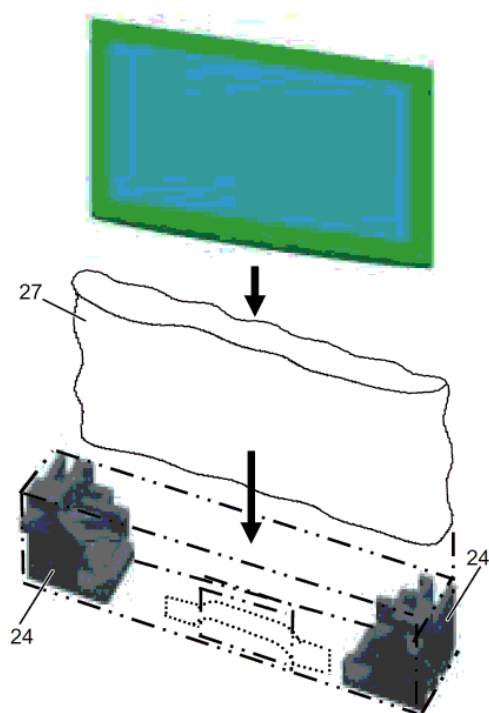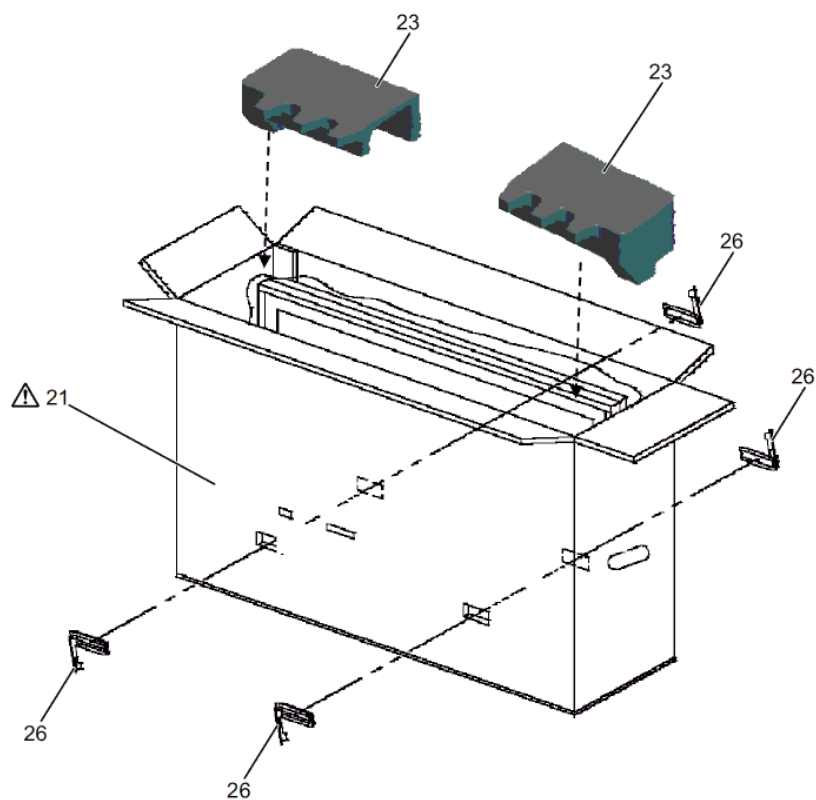

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	1	BAT-C-0487	Battery Cover of RC	1	PAVCCZ
	3	K2AHYH000042	AC INLET WITH CABLE	1	PAVCCZ
	4	K2CN3YY00006	AC CORD	1	P50U30E, PR50U30/31
	4	K2CS3YY00010	AC CORD	1	PAVCCZ P50U30J
	5	MD50F14A1J	PLASMA DISPLAY PANEL	1	
	6	N2QAYB000487	REMOTE CONTROL	1	PAVCCZ
	7	TBL5ZA3066	STAND POLE	1	PAVCCZ
	8	TBL5ZX0033	PEDESTAL STAND	1	PAVCCZ
	9	TBX3EA00401	POWER BUTTON	1	
		THEJ036J	P:7 TUNER SHEILD:3 ATTACHMENT METAL:6	16	
		THEJ036J	SCREW(SS:5 SC:7 SUS:3)	15	
		THEJ036J	SCREW(C:11)	11	
		THEJ0409	SCREW	8	chap.3.1. (3)
		THEL0239	SCREW(DD:15)	15	
		THEL052Z	SCREW	23	chap.3.1. (1)
	10	THEL087N	SCREW M5x25	4	PAVCCZ
	11	TKGA5681	FRONT GLASS	1	PAVCCZ
	12	TKK2AC5008	LED PANEL	1	PAVCCZ
	13	TKKL5493	M8 CAP	4	chap.3.1. (6)
	14	TMK0EG016	SPONGE (FRONT GLASS/UPPER/BOTTOM)	2	PAVCCZ
	15	TMK0EG017	SPONGE (FRONT GLASS/LEFT/RIGHT)	2	PAVCCZ
		TMME332	CLAMPER (HANGER:6)	6	
		TMME332	CLAMPER	2	
		TMME332	CLAMPER (GLASS HOLDER BOTTOM)	4	
		TMME397	SPACER	3	PAVCCZ
	16	TMW3EX002	SP BRACKET L	2	
	17	TMW3EX003	SP BRACKET R	2	
	18	TMXX064	AC CORD CLAMPER A	1	
	19	TMXX065	AC CORD CLAMPER B	1	
	20	TMZ0E9925	STAND BRACKET	1	PAVCCZ
	21	TPC0EA04101	CARTON BOX	1	PAVCCZ P50U30E/J
	21	TPC0EA04102	CARTON BOX	1	PAVCCZ PR50U30/31
	22	TPC0EA04201	CARTON BOX BOTTOM	1	PAVCCZ
	23	TPD0E1152	TOP CUSHION	1	PAVCCZ
	24	TPD0E2158	BOTTOM CUSHION	1	PAVCCZ
	25	TPD0E9183	PEDESTAL CUSHION	1	PAVCCZ
	26	TPD169487	JOINT	4	
	27	TPE0E4010	PROTECT COVER	1	PAVCCZ
	28	TPE0E9003	BAG FOR AC CORD	1	PAVCCZ
	29	TPE0E9008	BAG (INSTRUCTION BOOK)	1	PAVCCZ
	30	TPEB492	BAG (PEDESTAL STAND)	1	PAVCCZ
	31	TPEB513	BAG (STAND POLE)	1	PAVCCZ
		TPG0E4060	PAPER CAP	0.25	PAVCCZ
	32	TQB0E2136A	INSTRUCTION BOOK (GERMAN)	1	PAVCCZ P50U30E
	32	TQB0E2136B	INSTRUCTION BOOK (DUTCH)	1	PAVCCZ P50U30E
	32	TQB0E2136C	INSTRUCTION BOOK (ITALIAN)	1	PAVCCZ P50U30E
	32	TQB0E2136D	INSTRUCTION BOOK (FRENCH)	1	PAVCCZ P50U30E
	32	TQB0E2136E	INSTRUCTION BOOK (SPANISH)	1	PAVCCZ P50U30E
	32	TQB0E2136F	INSTRUCTION BOOK (SWEDISH)	1	PAVCCZ P50U30E
	32	TQB0E2136G	INSTRUCTION BOOK (NORWEGIAN)	1	PAVCCZ P50U30E
	32	TQB0E2136H	INSTRUCTION BOOK (FINNISH)	1	PAVCCZ P50U30E
	32	TQB0E2136I	INSTRUCTION BOOK (LITHUANIAN)	1	PAVCCZ P50U30E
	32	TQB0E2136J	INSTRUCTION BOOK (PORTUGUESE)	1	PAVCCZ P50U30E
	32	TQB0E2136K	INSTRUCTION BOOK (DANISH)	1	PAVCCZ P50U30E
	32	TQB0E2136M	INSTRUCTION BOOK (BULGARIAN)	1	PAVCCZ P50U30E
	32	TQB0E2136N	INSTRUCTION BOOK (ROMANIAN)	1	PAVCCZ P50U30E
	32	TQB0E2136O	INSTRUCTION BOOK (LATVIAN)	1	PAVCCZ P50U30E
	32	TQB0E2136P	INSTRUCTION BOOK (POLISH)	1	PAVCCZ P50U30E
	32	TQB0E2136Q	INSTRUCTION BOOK (HUNGARIAN)	1	PAVCCZ P50U30E
	32	TQB0E2136R	INSTRUCTION BOOK (CZECH)	1	PAVCCZ P50U30E
	32	TQB0E2136S	INSTRUCTION BOOK (GREEK)	1	PAVCCZ P50U30E
	32	TQB0E2136T	INSTRUCTION BOOK (TURKISH)	1	PAVCCZ P50U30E

Model No. : TX-P50U30E/J, PR50U30/31 Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	32	TQB0E2136U	INSTRUCTION BOOK(ENGLISH)	1	PAVCCZ P50U30E
	32	TQB0E2136V	INSTRUCTION BOOK(CROATIAN)	1	PAVCCZ P50U30E
	32	TQB0E2136W	INSTRUCTION BOOK(SLOVAKIAN)	1	PAVCCZ P50U30E
	32	TQB0E2136Z	INSTRUCTION BOOK(ESTONIAN)	1	PAVCCZ P50U30E
	32	TQB0E2138A	INSTRUCTION BOOK(GERMAN)	1	PAVCCZ P50U30J
	32	TQB0E2138C	INSTRUCTION BOOK(ITALIAN)	1	PAVCCZ P50U30J
	32	TQB0E2138D	INSTRUCTION BOOK(FRENCH)	1	PAVCCZ P50U30J
	32	TQB0E21399	INSTRUCTION BOOK(KAZAKHSTAN)	1	PAVCCZ PR50U30
	32	TQB0E2139L	INSTRUCTION BOOK(RUSSIAN)	1	PAVCCZ PR50U30
	32	TQB0E2139Y	INSTRUCTION BOOK(UKRAINIAN)	1	PAVCCZ PR50U30
	32	TQB0E2140L	INSTRUCTION BOOK(RUSSIAN)	1	PAVCCZ PR50U31
	33	TQB0E2136X	INSTRUCTION BOOK(CD-ROM)	1	PAVCCZ P50U30E
		TQZJ347	SCREW USE HANDBILE	1	PAVCCZ
	41	TSXM217	CABLE(SU11-SD11)	1	
	42	TSXM233-1	CABLE(C33-SS33)	1	
	43	TSXM238-1	CABLE(C10-C20)	1	
	44	TSXM240-1	CABLE(C26-C36)	1	
	45	TSXM319	CABLE(A20-SC20)	1	PAVCCZ
	46	TSXM320	CABLE(A31-C21)	1	PAVCCZ
	47	TSXM321-1	CABLE(A32-C31)	1	PAVCCZ
	51	TTU0E0973	REAR COVER	1	PAVCCZ P50U30E
	51	TTU0E0976	REAR COVER	1	PAVCCZ P50U30J
	51	TTU0E0982	REAR COVER	1	PAVCCZ PR50U30
	51	TTU0E0983	REAR COVER	1	PAVCCZ PR50U31
	52	TUX4TA012	50HANGER METAL	2	PAVCCZ
	53	TXFEA01RLUE	SPEAKER L/R ASSY	2	PAVCCZ
	54	TXFKP01RLUE	SIDE TERMINAL COVER ASSY	1	PAVCCZ
	55	TXFKY5Z0053	CABINET ASSY	1	PAVCCZ P50U30E/J, PR50U30
	55	TXFKY5Z0187	CABINET ASSY	1	PAVCCZ PR50U31
		TXJA11RJUE	SPEAKER LEAD (A11-SPL/SPR)	1	PAVCCZ
		XTB4+12GFJ	SCREW(GH:18)	18	
		XTB4+12GFJK	SCREW(BC:8)	8	chap.3.1. (2)
		XTV3+10JFJK	SCREW(REAR AV:2)	2	chap.3.1. (4)
		XYN3+F10FJK	SCREW(BC-AC_INLET:2)	2	chap.3.1. (5)
		XYN3+F8FJ	SCREW(A-PRINT:4)	4	
		XYN4+E8FJ	SCREW(INLET:1)	1	
		XYN4+F10FJ	SCREW(KARI-HANGER METAL:8)	8	
		XYN4+F8FJ	SCREW(SC-SUSD:4)	4	
	61	XYN5+F20FN	SCREW M5x20 SILVER	4	
		XZB7X10B03	BAG (SCREW)	1	PAVCCZ